

DE

Elektromotorischer Stellantrieb
„Aktor M ST L“, 24 V mit Stellungsrückmeldung

Betriebsanleitung



1. Allgemeine Angaben
2. Sicherheitsbezogene Informationen
3. Technische Beschreibung
4. Transport und Lagerung
5. Montage
6. Inbetriebnahme
7. Betrieb
8. Instandhaltung
9. Demontage
10. Erneute Montage
11. Entsorgung
12. Anhang

1. Allgemeine Angaben

Die Originalbetriebsanleitung ist in deutscher Sprache verfasst. Die Betriebsanleitungen anderer Sprachen wurden aus dem Deutschen übersetzt.

1.1 Gültigkeit der Anleitung

Diese Anleitung gilt für den Elektromotorischen Stellantrieb, Aktor M ST L, 24 V, 0-10 V mit Stellungsrückmeldung.

1.2 Typenschild

Das Typenschild befindet sich auf der Unterseite des Produktes.

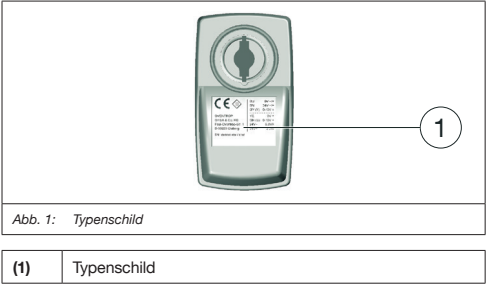


Abb. 1: Typenschild

(1)	Typenschild
-----	-------------

1.3 Lieferumfang

Prüfen Sie Ihre Lieferung auf Transportschäden und Vollständigkeit. Der Lieferumfang umfasst:

- „Aktor M ST L“
- Betriebsanleitung

1.4 Kontakt

Kontaktadresse

OVENTROP GmbH & Co. KG
Paul-Oventrop-Straße 1
59939 Olsberg
DEUTSCHLAND

Technischer Kundendienst

Telefon: +49 (0) 29 62 82-234

1.5 Urheber- und Schutzrechte

Diese Anleitung ist urheberrechtlich geschützt. Sie ist ausschließlich für die mit dem Produkt beschäftigten Personen bestimmt.

1.6 EU-Konformitätserklärung

Hiermit erklärt die Oventrop GmbH & Co. KG, dass dieses Produkt in Übereinstimmung mit den grundlegenden Anforderungen und den einschlägigen Bestimmungen der betreffenden EU-Richtlinien hergestellt wurde.

Die Konformitätserklärung kann beim Hersteller angefordert werden.

1.7 Verwendete Symbole

	Kennzeichnet wichtige Informationen und weiterführende Ergänzungen.
	Handlungsaufforderung
	Aufzählung
1. 2.	Feste Reihenfolge. Handlungsschritte 1 bis X.
	Ergebnis der Handlung

2. Sicherheitsbezogene Informationen

2.1 Normative Vorgaben

Beachten Sie die am Installationsort geltenden rechtlichen Rahmenbedingungen.

Es gelten die aktuell gültigen Normen, Regeln und Richtlinien.

2.2 Bestimmungsgemäße Verwendung

Die Betriebssicherheit ist nur bei bestimmungsgemäßer Verwendung des Produktes gewährleistet.

Der Stellantrieb darf in Heizungs-, Lüftungs- und Klimaanlage im Innenbereich verwendet werden.

Jede darüber hinausgehende und/oder andersartige Verwendung gilt als nicht bestimmungsgemäß.

Ansprüche jeglicher Art gegen den Hersteller und/oder seine Bevollmächtigten wegen Schäden aus nicht bestimmungsgemäßer Verwendung können nicht anerkannt werden.

Zur bestimmungsgemäßen Verwendung zählt auch die korrekte Einhaltung dieser Anleitung.

2.3 Änderungen am Produkt

Änderungen am Produkt sind untersagt. Bei Änderungen am Produkt erlischt die Produktgarantie. Für Schäden und Betriebsstörungen, die sich aus Änderungen am Produkt ergeben, haftet der Hersteller nicht.

2.4 Warnhinweise

Jeder Warnhinweis enthält folgende Elemente:

Warnsymbol	SIGNALWORT
	Art und Quelle der Gefahr! Mögliche Folgen, wenn die Gefahr eintritt bzw. der Warnhinweis ignoriert wird. ► Möglichkeiten zur Vermeidung der Gefahr.

Signalworte definieren die Schwere der Gefahr, die von einer Situation ausgeht.

	VORSICHT
	Kennzeichnet eine mögliche Gefahr mit geringerem Risiko. Wenn die Situation nicht vermieden wird, sind leichte und reversible Körperverletzungen die Folge.

ACHTUNG
Kennzeichnet eine Situation, die möglicherweise Sachschäden zur Folge haben kann, wenn sie nicht vermieden wird.

2.5 Sicherheitshinweise

Wir haben dieses Produkt gemäß aktueller Sicherheitsanforderungen entwickelt.

Beachten Sie folgende Hinweise zum sicheren Gebrauch.

2.5.1 Gefahr durch unzureichende Personalqualifikation

Arbeiten an diesem Produkt dürfen nur dafür ausreichend qualifizierte Fachhandwerker ausführen. Qualifizierte Fachhandwerker sind aufgrund ihrer fachlichen Ausbildung und Erfahrungen sowie Kenntnisse der einschlägigen rechtlichen Vorschriften in der Lage, Arbeiten am beschriebenen Produkt fachgerecht auszuführen.

Betreiber

Der Betreiber muss von einem Fachhandwerker in die Bedienung eingewiesen sein.

2.5.2 Gefahr durch elektrischen Strom!

Arbeiten an der Stromversorgung darf nur ein Elektrofachhandwerker durchführen.

- Nehmen Sie das Produkt bei sichtbaren Beschädigungen nicht in Betrieb.
- Trennen Sie das Produkt allpolig von der Stromversorgung.
- Prüfen Sie die Spannungsfreiheit.
- Sichern Sie das Produkt gegen Wiedereinschalten.
- Montieren Sie das Produkt nur in trockenen Innenräumen.

2.5.3 Verbrennungsgefahr an heißen Armaturen und Oberflächen

- Lassen Sie das Produkt vor Arbeiten abkühlen.
- Tragen Sie geeignete Schutzkleidung, um ungeschützten Kontakt mit heißen Armaturen und Anlagenteilen zu vermeiden.

2.5.4 Verfügbarkeit der Betriebsanleitung

Jede Person, die mit diesem Produkt arbeitet, muss diese Anleitung und alle mitgeltenden Anleitungen gelesen haben und anwenden. Die Anleitung muss am Einsatzort des Produktes verfügbar sein.

- Geben Sie diese Anleitungen und alle mitgeltenden Anleitungen an den Betreiber weiter.

3. Technische Beschreibung

3.1 Aufbau

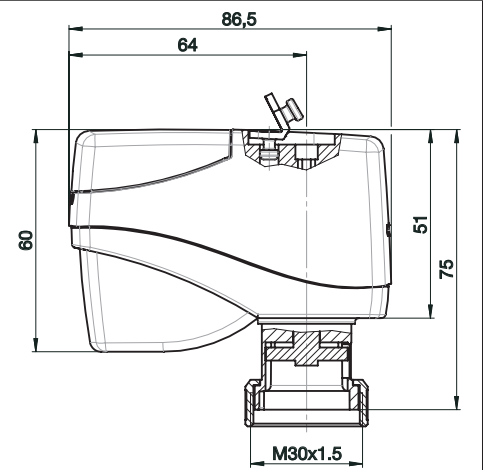


Abb. 2: Seitenansicht

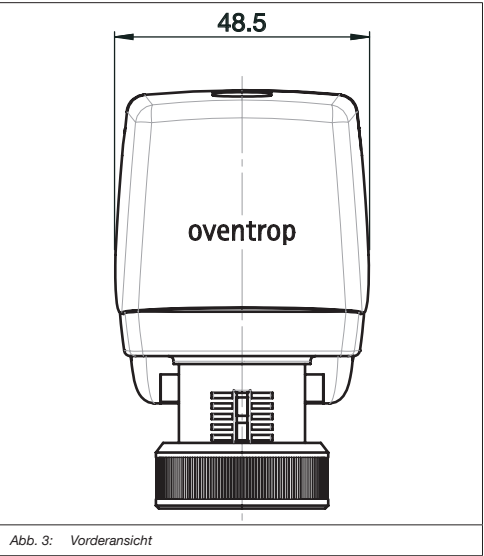


Abb. 3: Vorderansicht

3.2 Funktionsbeschreibung

Der Stellantrieb öffnet oder schließt ein Ventil in Abhängigkeit von der angelegten Steuerspannung.

Durch DIP-Schalter kann der Stellantrieb an die spezifischen Parameter des eingesetzten Ventils und an spezifische Betriebsanforderungen angepasst werden.

Der Stellantrieb bietet einen 0 - 10 V Ausgang an dem die aktuelle Hub-Position ausgegeben wird.

3.3 Technische Daten

Betriebsspannung	24 V AC ±10 %, 50/60 Hz 24 V DC ±10 %
Leistungsaufnahme	Dimensionierung: - 3,7 VA (24 V AC) - 1,7 W (24 V DC) nominal: - 2,5 VA (24 V AC) - 1,3 W (24 V DC)
Einschaltstrom	kurzzeitig max. 10 A
Ansteuerung	Stetige Ansteuerung 0 - 10 V DC
Anschluss	fest vormontiertes Kabel 1,5 m; 5 x 0,5 mm2
Motorabschaltung	Antriebsspindel: ausfahrend = lastabhängig, einfahrend = wegabhängig
Stellhub	max. 4 mm
Stellzeit	22 s/mm
Stellkraft	nominal 150 N
Stellungsanzeige	Hubskala
Stellungsrückmeldung	0 - 10 V, DC; 5 mA für 0 - 100% Stellhub
Handverstellung	Nur im spannungslosen Zustand! Verstellspindel für Innensechskantschlüssel unter der Abdeckung (Position 2 in Abb. 7), Schlüsselweite 4 mm
zulässige Medientemperatur im Ventil	0 - 120 °C
Umgebungs-temperatur	0 - 50 °C

Umgebungs-feuchte	in Betrieb: 0 - 85 % r.F., nicht kondensierend außer Betrieb: 0 - 85 r.F., nicht kondensierend
Überspannungskategorie	III
Verschmutzungs-grad	2
Schutzart	IP54 in allen Einbaulagen
Schutzklasse	III nach EN 60730
Einbaulage	ohne Einschränkung
Wartung	wartungsfrei
Gewicht	250 g

4. Transport und Lagerung

Temperaturbereich	-0 °C - +40 °C
Relative Luftfeuchtigkeit	max. 95%
Partikel	Trocken und staubgeschützt lagern
Mechanische Einflüsse	Geschützt vor mechanischer Erschütterung
Witterungseinflüsse	Nicht im Freien lagern Vor Sonneneinstrahlung schützen
Chemische Einflüsse	Nicht zusammen mit aggressiven Medien lagern

5. Montage

5.1 Erstmontage

	Berücksichtigen Sie bei der Montage einen ausreichenden freien Raum zur Montage des Stellantriebs.
--	--

	Montieren Sie den Stellantrieb, bevor Sie die Spannungsversorgung herstellen!
--	---

	VORSICHT
	Verbrennungsgefahr an heißen Bauteilen! Das Berühren heißer Bauteile kann zu Verbrennungen führen. ► Lassen Sie das Ventil vor Arbeiten abkühlen. ► Tragen Sie Schutzhandschuhe.

- Setzen Sie den Stellantrieb auf den Gewindeanschluss des Ventils.
- Schrauben Sie die Überwurfmutter handfest an.

	Achten Sie darauf, dass Sie das Gewinde nicht verkanten.
--	--

ACHTUNG	
	Beschädigung des Aktors durch zu hohes Drehmoment beim Anschrauben der Überwurfmutter! Der Aktor kann beschädigt und in seiner Funktion beeinträchtigt werden, wenn die Überwurfmutter zu stark angeschraubt wird. ► Schrauben Sie die Überwurfmutter mit der Hand an.

6. Inbetriebnahme

6.1 DIP-Schalter konfigurieren

- Entfernen Sie den Deckel des Gehäuses.
- Konfigurieren Sie die DIP-Schalter passend zu dem von Ihnen verwendeten Ventil (siehe Abs. 12).

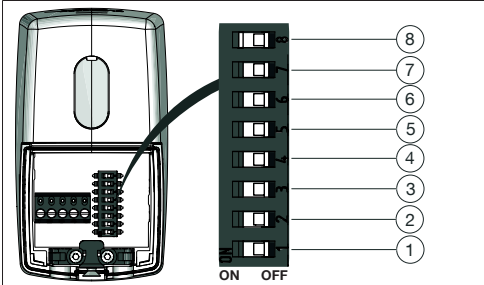


Abb. 4: DIP-Schalter

(1)	S1 ON/OFF	Einstellung des gewünschten Hubverhaltens entsprechend der Kennlinien des verwendeten Ventils.
(2)	S2 ON/OFF	
(3)	S3 ON/OFF	
(4)	S4 ON/OFF	
(5)	S5 ON/OFF	
(6)	S6 ON/OFF	

(7)	ON = 10 V - 0 V	OFF = 0 V - 10 V
	siehe Abb. 5	
(8)	Automatische Spülfunktion und Ventilblockierschutzfunktion	
	ON	aktiviert
	OFF	deaktiviert

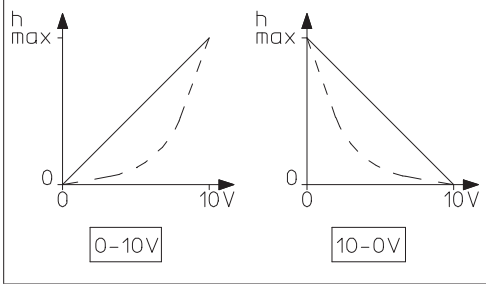


Abb. 5: Kennlinien Invertierung DIP-Schalter 7

6.2 Spannungsversorgung herstellen

- Stellen Sie die Spannungsversorgung entsprechend der Belegung in Abb. 6 her.

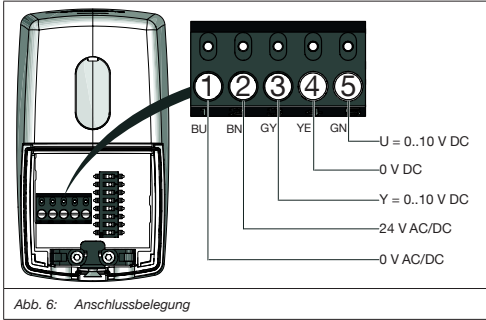


Abb. 6: Anschlussbelegung

(1)	0 V AC/DC	blau (BU)
(2)	24 V AC/DC	braun (BN)
(3)	Ansteuerung 0 - 10 V DC	grau (GY)
(4)	Stellungs-Rückmeldung 0 V DC	gelb (YE)
(5)	Stellungs-Rückmeldung 0 -10 V DC	grün (GN)

- Nachdem die Spannungsversorgung erstmalig hergestellt wurde, führt der Stellantrieb einen Initialisierungslauf durch. Nach der Initialisierung ist das Produkt betriebsbereit.

7. Betrieb

Der Aktor wird über die jeweilige Regelungstechnik automatisch angesteuert.

8. Instandhaltung

Der Aktor ist wartungsfrei.

9. Demontage

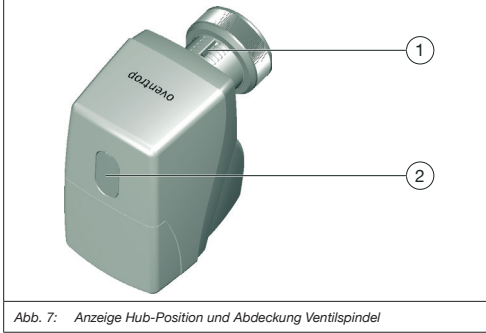


Abb. 7: Anzeige Hub-Position und Abdeckung Ventilspindel

(1)	Anzeige der Hub-Position des Stellantriebs
(2)	Abdeckung für die Handverstellung (Verstellspindel)

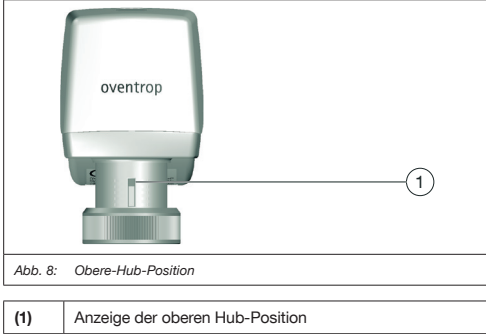


Abb. 8: Obere-Hub-Position

(1)	Anzeige der oberen Hub-Position
-----	---------------------------------

	VORSICHT
	Verbrennungsgefahr an heißen Bauteilen! Das Berühren heißer Bauteile kann zu Verbrennungen führen. ► Lassen Sie das Produkt vor Arbeiten abkühlen.

ACHTUNG

	Die Überwurfmutter lässt sich eventuell nicht von Hand lösen! Der Aktor schließt das Ventil unter Umständen mit der maximalen Stellkraft von 200N. Dabei ist die Überwurfmutter nicht mehr von Hand zu lösen. ► Verwenden Sie keine Zange oder Ähnliches, um die Überwurfmutter zu lösen! ► Nutzen Sie die manuelle Verstellmöglichkeit
--	---

- Trennen Sie den Stellantrieb allpolig von der Spannungsversorgung.
- Prüfen Sie die Hub-Position des Stellantriebs.
- Wenn sich der Stellantrieb nicht in der oberen Hub-Position befindet (siehe Position (1) in Abb. 8): Öffnen Sie die Abdeckung für die Handverstellung (Verstellspindel) (siehe Position 2 in Abb. 7) und bringen Sie den Stellantrieb mit einem Innensechskantschlüssel (Schlüsselweite 4 mm) in die obere Hubstellung.

ACHTUNG	
	Funktionsstörung durch manuelles Überdrehen Wird die Handverstellung bis zum Ansprechen der Rutschkupplung vorgenommen ist eine störungs-freie Funktion des Aktors nicht gewährleistet. ► Drehen Sie den Innensechskantschlüssel nach Erreichen der manuell eingestellten Hubposition eine halbe Umdrehung in die entgegengesetzte Richtung!

- Lösen Sie die Überwurfmutter.
- Der Aktor kann abgenommen werden.

10. Erneute Montage

	Für die korrekte Montage muss sich der Stellantrieb in der oberen Hubstellung befinden.
--	---

- Bringen Sie den Stellantrieb vor der erneuten Montage in die obere Hub-Position wie in Abs. 9 beschrieben.
- Setzen Sie den Stellantrieb auf den Gewindeanschluss des Ventils.
- Schrauben Sie die Überwurfmutter handfest an.
- Nehmen Sie den Stellantrieb in Betrieb, wie in Abs. 6 beschrieben.

	Nach der erneuten Montage wird ein Initialisierungslauf nur ausgelöst, wenn einer der DIP-Schalter 1 bis 6 (siehe Abb. 4) verstellt wird, nachdem die Spannungsversorgung hergestellt wurde. Der Initialisierungslauf wird jedoch auch nach einer Neukonfiguration nicht ausgelöst, wenn sich der Stellantrieb bereits in der unteren Hub-Position befindet.
--	--

11. Entsorgung




ACHTUNG	
	Verschmutzungsgefahr für die Umwelt! Nicht fachgerechte Entsorgung (z. B. im Hausmüll) kann zu Umweltschäden führen. ▶ Entsorgen Sie Verpackungsmaterial umweltgerecht. ▶ Entsorgen Sie Bauteile fachgerecht.

Sofern keine Rücknahme- oder Entsorgungsvereinbarung getroffen wurde, entsorgen Sie das Produkt.

- Führen Sie Bestandteile möglichst der Wiederverwertung zu.
- Entsorgen Sie nicht wiederverwertbare Bestandteile den lokalen Vorschriften entsprechend. Das Entsorgen im Hausmüll ist nicht zulässig.

12. Anhang

   Einstellungen DIP-Schalter

Ventil + Stellantrieb =														
Ventiltyp	Ausführung	Einstellbereich	DIP-Schalter						DIP-Schalter					
 Cocon QTZ PN 25	DN 10/15 30 - 210 l/h	30 - 90 l/h 91 - 150 l/h 151 - 210 l/h	on on on	off on off	off off on	off off off	off off off	off off off	on on on	off off off	off off off	off off off	on on on	on
	DN 10/15 150 - 700 l/h	150 - 250 l/h 251 - 500 l/h 501 - 700 l/h	on on on	on off on	on off on	off off off	off off off	off off off	on on on	on off off	on off on	off off on	on on on	on
	DN 15 200 - 1300 l/h	200 - 300 l/h 301 - 500 l/h 501 - 900 l/h 901 - 1300 l/h	on on on on	off off on off	on on on off	on off on off	off off off off	off off off off	on on on on	off on on off	on off on on	off off off off	on on on on	on
	DN 20 250 - 1800 l/h	250 - 400 l/h 401 - 800 l/h 801 - 1100 l/h 1101 - 1500 l/h 1501 - 1800 l/h	on on on on on	off on on off off	on on on off on	on off on off off	off off off off off	off off off off off	on on on on on	on off on on off	off off off on on	off off off on off	on on on on on	on
	DN 25 400 - 2500 l/h	400 - 700 l/h 701 - 1100 l/h 1101 - 2100 l/h 2101 - 2500 l/h	on on on on	on off off off	on on on on	on off on off	off off off off	off off off off	on on on on	off off off off	off off off off	off off off off	on on on on	on
	DN 32 600 - 4800 l/h	600 - 800 l/h 801 - 2800 l/h 2801 - 4800 l/h	on on on	off on off	on on off	on on off	on off on	off off on	on on on	off off off	off off off	on on on	on on on	on
	DN 10/15 30 - 210 l/h	30 - 90 l/h 91 - 150 l/h 151 - 210 l/h	off off off	off on off	off off on	off on off	on off on	off on off	on on on	off on off	on on on	on on on	on on on	on
	DN 10/15 90 - 450 l/h	90 - 150 l/h 151 - 250 l/h 251 - 450 l/h	off off off	on on on	on off on	on on off	on on off	on on off	off off off	off on off	off on on	on on on	on on on	on
	DN 15/20 150 - 1050 l/h	150 - 200 l/h 201 - 300 l/h 301 - 600 l/h 601 - 1050 l/h	off off off off	off off on off	on on on off	on on on on	off off off on	off off off on	off off on on	off off on on	off off on on	on on on on	on on on on	on
	DN 20 180 - 1300 l/h	180 - 400 l/h 401 - 500 l/h 501 - 600 l/h 601 - 700 l/h 701 - 1300 l/h	off off off off off	on on on on on	off off on off off	on on on on on	off off on off on	off off on off on	off off on on on	off off on on on	off off on on on	on on on on on	on on on on on	on
	DN 25 300 - 2000 l/h	300 - 400 l/h 401 - 600 l/h 601 - 900 l/h 901 - 1400 l/h 1401 - 2000 l/h	off off off off off	off off off on on	on on off on off	on on off on on	on off on on on	on off on on on	off off on on on	off off on on on	on off on on on	on on on on on	on on on on on	on
	DN 32 600 - 3600 l/h	600 l/h 601 - 800 l/h 801 - 1600 l/h 1601 - 3600 l/h	off off off off	on off off off	on off off off	on on on off	on on on off	on on on off	on on on on	on on on on	on on on on	on on on on	on on on on	on
	kvs = 0,45	0.25 U. 0.26 - 0.5 U. 0.6 - 4 U.	off off off	off off off	on on on	on off off	off on off	off on off	off off on	off on on	off on on	off on on	off on on	off
	kvs = 1.0	0.5 - 1 U. 1.1 - 4.5 U.	off off	on off	off off	on off	on off	on off	off on	off on	off on	off on	off on	off
	kvs = 1.8	0.5 - 7 U.	off	on	off	off	on	off	off	on	off	on	off	off
	kvs = 4.5	0.75 - 1 U. 1.1 - 7 U.	off off	off off	on on	off on	on off	on on	off on	off on	off on	off on	off on	off
 Cocon 2TZ +  Cocon 4TR	AV9	VE 3, 4, 5, 6 VE 7, 8 VE 9	off off off	off on off	on off on	on off off	off off off	off off off	off off off	off off off	off off off	off off off	off off off	off
	AV6	VE 2, 3 VE 4, 5 VE 6	off off off	off on off	on off off	on on off	off off off	off off off	off off off	off off off	off off off	off off off	off off off	off
	AF	VE 1, 2, 3, 4 VE 5, 6	off off	on off	on on	on on	off off	off off	off off	off off	off off	off off	off off	off
	AZ/A		off	on	off	off	off	off	on	off	on	on	off	off
	PTB kvs=0.45		off	off	on	off	off	off	on	off	off	on	off	off
	PTB kvs=0.80		off	off	off	off	off	on	off	on	on	on	on	on

 Hycoccon HTZ	DN 15 kvs = 1.7	0.5 - 0.75 U. 0.76 - 1 U. 1.1 - 3 U.	off off off	off off off	on on on	on on on	off off off	off off off	off off off	off off off	off off off	off off off	off off off	off off off
	DN 20 kvs = 2.7	0.5 - 0.75 U. 0.76 - 1.5 U. 1.6 - 3 U.	off off off	off off off	on on on	on on on	off off off	off off off	off off off	off off off	off off off	off off off	off off off	off off off
	DN 25 kvs = 3.6	0.5 - 0.75 U. 0.76 - 1.0 U. 1.1 - 1.5 U. 1.6 - 3.0 U. 3.1 - 3.5 U.	off off off off off	off off off off off	on on on on on	on on on on on	off off off off off	off off off off off	off off off off off	off off off off off	off off off off off	off off off off off	off off off off off	off off off off off
	DN 32 kvs = 6.8	0.5 U. 0.6 - 1.0 U. 1.1 - 1.5 U. 1.6 - 2.0 U. 2.1 - 2.5 U. 2.6 - 3.0 U. 3.1 - 4.0 U.	off off off off off off off	off off off off off off off	on on on on on on on	on on on on on on on	off off off off off off off	off off off off off off off	off off off off off off off	off off off off off off off	off off off off off off off	off off off off off off off	off off off off off off off	off off off off off off off
	DN 40 kvs = 10	0.5 - 0.75 U. 0.76 - 1.0 U. 1.1 - 1.5 U. 1.6 - 2.0 U. 2.1 - 2.5 U. 2.6 - 3.0 U. 3.1 - 4.0 U.	off off off off off off off	off off off off off off off	on on on on on on on	on on on on on on on	off off off off off off off	off off off off off off off	off off off off off off off	off off off off off off off	off off off off off off off	off off off off off off off	off off off off off off off	off off off off off off off
	Fremdfabrikate (M30x1.5, s=11.8mm)	h = 0,5 mm	off	on	on	on	on	off	off	off	off	off	off	off
		h = 1,0 mm	off	off	on	on	on	off	off	off	off	off	off	off
		h = 1,5 mm	off	on	off	on	on	off	off	off	off	off	off	off
		h = 2,0 mm	off	off	off	on	off	off	off	off	off	off	off	off
		h = 2,5 mm	off	on	on	off	off	off	off	off	off	off	off	off
		h = 3,0 mm	off	off	on	off	off	off	off	off	off	off	off	off
		h = 3,5 mm	off	on	off	off	off	off	off	off	off	off	off	off
		h = 4,0 mm	off	off	off	off	off	off	off	off	off	off	off	off
	Ventilhub h		off	on	on	on	on	off	off	off	off	off	off	off
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on
			off	on	off	off	on	on	on	on	on	on	on	on

Operating instructions



1. General information
2. Safety-related information
3. Technical description
4. Transport and storage
5. Installation
6. Commissioning
7. Operation
8. Maintenance
9. Removal
10. Reinstallation
11. Disposal
12. Appendix

1. General information


The original operating instructions were drafted in German. The operating instructions in other languages have been translated from German.

1.1 Validity of the operating instructions

These operating instructions are valid for the electromotive actuator "Aktor M ST L", 24 V, 0 – 10 V with position feedback.

1.2 Type plate

The type plate is located on the bottom of the product.

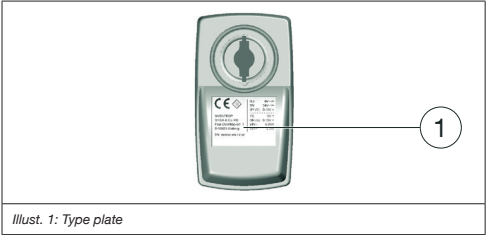

(1)	Type plate
-----	------------

1.3 Extent of supply

Please check your delivery for any damage caused during transit and for completeness.

Items included in the extent of supply:

- "Aktor M ST L"
- Operating instructions

1.4 Contact

Contact address

OVENTROP GmbH & Co. KG
Paul-Oventrop-Straße 1
59939 Olsberg
GERMANY

Technical services

Telephone: +49 (0) 29 62 82-234

1.5 Copyright and protective rights

These operating instructions are copyrighted. They are intended exclusively for persons involved with the product.

1.6 EU declaration of conformity

Oventrop GmbH & Co. KG hereby declares that this product complies with the fundamental requirements and other relevant provisions of the applicable EC Directives. The declaration of conformity can be obtained from the manufacturer.

1.7 Symbols used

	Highlights important information and further explanations.
	Action required
	List
1. 2.	Fixed order. Steps 1 to X.
	Result of action

2. Safety-related information

2.1 Normative directives

Observe the legal requirements applicable at the installation location.

The current standards, regulations and guidelines apply.

2.2 Correct use

Operating safety is only guaranteed if the product is used correctly. The actuator may be used in indoor heating, ventilation and air conditioning systems.

Any other use of the product will be considered incorrect use. Claims of any kind against the manufacturer and/or its authorised representatives due to damage caused by incorrect use will not be accepted.

Observance of these operating instructions is part of compliance with correct use.

2.3 Modifications to the product

Modifications to the product are not permitted. In the case of modifications to the product, the warranty will become void. The manufacturer will not accept liability for damage and breakdowns caused by modifications to the product.

2.4 Warnings

Each warning contains the following elements:

Warning symbol SIGNAL WORD	
	Type and source of danger! Possible consequences if the danger occurs or the warning is ignored. ► Ways to avoid the danger.

The signal words identify the severity of the danger arising from a situation.

CAUTION	
	Indicates a possible danger with a lower risk. The situation may lead to minor and reversible injury if not avoided.

NOTICE	
	Indicates a situation that may lead to damage to property if not avoided.

2.5 Safety notes

We have developed this product in accordance with current safety requirements. Please note the following information concerning safe use.

2.5.1 Danger caused by inadequately qualified personnel

Work on this product may only be carried out by adequately qualified installers. Qualified installers are able to correctly carry out work on the product described as a result of their professional training and experience, as well as awareness of the relevant regulations.

User

The user must be trained in the operation of the product by a qualified installer.

2.5.2 Danger from electric current!

Work on the power supply may only be carried out by a qualified electrician.

- Do not put the product into operation if there are visible signs of damage.
- Completely disconnect the product from the power supply.
- Check that the product is disconnected from the power supply.
- Secure the product against switching back on.
- The product may only be installed in dry indoor areas.

2.5.3 Risk of burns due to hot components and surfaces

- Allow the product to cool down before working on it.
- Wear suitable protective clothing to avoid unprotected contact with hot system components and fittings.

2.5.4 Availability of the operating instructions


These operating instructions and all other relevant documents (e.g. accessory manuals) must be read and applied by any person working with the product.

The operating instructions must be available at the installation location of the product.


- Hand these operating instructions and all other relevant documents over to the user.

3. Technical description

3.1 Construction

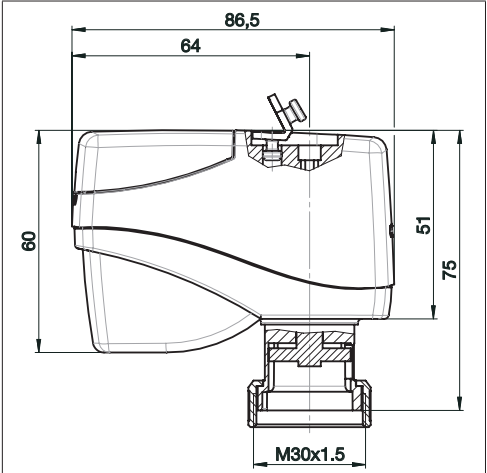

Illust. 2: Side view

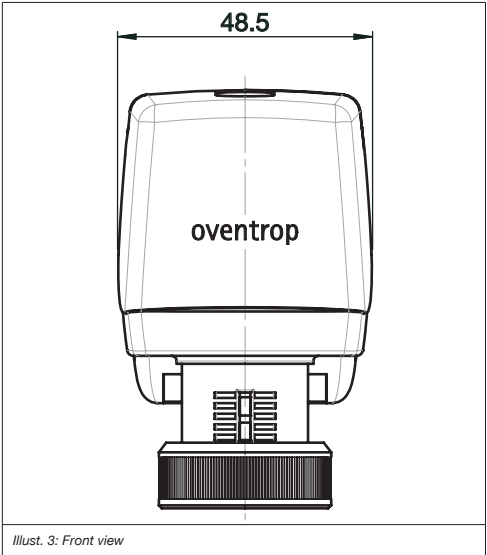

Illust. 3: Front view

3.2 Functional description

The actuator opens or closes the valve depending on the applied control voltage.

The actuator can be adapted to the specific parameters of the valve and to specific operation requirements with the help of DIP switches.

The actuator has a 0 – 10 V outlet port which indicates the current lift position.

3.3 Technical data

Operating voltage	24 V AC ±10 %, 50/60 Hz 24 V DC ±10 %
Power consumption	Dimensioning: - 3.7 VA (24 V AC) - 1.7 W (24 V DC) Nominal: - 2.5 VA (24 V AC) - 1.3 W (24 V DC)
Start up load	Max. 10 A for short periods
Control	Steady control 0 – 10 V DC
Connection	Fixed pre-assembled cable 1.5 m; 5 x 0.5 mm2
Motor deactivation	Spindle drive: extending = load-dependent, retracting = travel-dependent
Travel	Max. 4 mm
Floating time	22 s/mm
Actuating power	Nominal 150 N
Setting indicator	Stroke scale
Position feedback	0 – 10 V, DC; 5 mA for 0 – 100 % travel
Manual setting	Only when not under current! Adjustment spindle for Allen key under the cover (Position 2 in Illust. 7), 4 mm across flats
Permissible fluid temperature in valve	0 – 120 °C
Ambient temperature	0 – 50 °C
Ambient humidity	In operation: 0 – 85 % r.h., not condensing Not in operation: 0 – 85 % r.h., not condensing

Overvoltage category	III
Degree of contamination	2
Protection	IP54 in all installation positions
Protection class	III in accordance with EN 60730
Installation position	No restriction
Maintenance	Maintenance-free
Weight	250 g

4. Transport and storage

Temperature range	-0 °C – +40 °C
Relative air humidity	Max. 95 %
Particles	Store dry and free from dust
Mechanical influences	Protect from mechanical agitation
Weather influences	Do not store outdoors Protect from direct sunlight
Chemical influences	Do not store together with aggressive fluids

5. Installation

5.1 Initial installation

	Ensure that you have sufficient room when installing the actuator.
--	--

	Only connect the actuator to the power supply after installation!
--	---

CAUTION	
	Risk of burns due to hot components! Contact with hot components may cause burns. ► Before starting work, let the valve cool down. ► Wear safety gloves.

- Fit the actuator to the connection thread of the valve.
- Tighten the collar nut finger-tight.


	Ensure that you avoid cross-threading.
--	--

NOTICE	
	Damage to the actuator due to over-tightening of the collar nut! The actuator can be damaged and its function impaired if the collar nut is tightened too much. ► Hand-tighten the collar nut.

6. Commissioning


6.1 Configuring the DIP switches

- Remove the casing cover.
- Configure the DIP switches according to the valve used (see section 12).

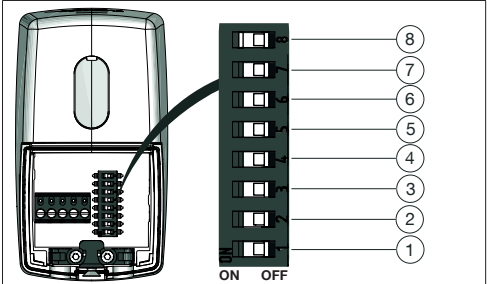

Illust. 4: DIP switches


(1)	S1 ON/OFF	Setting the required stroke behaviour in accordance with the characteristic lines of the valve used.
(2)	S2 ON/OFF	
(3)	S3 ON/OFF	
(4)	S4 ON/OFF	
(5)	S5 ON/OFF	
(6)	S6 ON/OFF	
(7)	ON = 10 V – 0 V see Illust. 5	OFF = 0 V – 10 V
(8)	Automatic flushing function and valve blocking protection	
	ON	activated
	OFF	deactivated

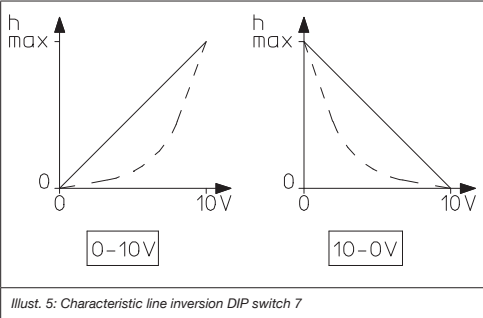

Illust. 5: Characteristic line inversion DIP switch 7

6.2 Connecting the power supply

- Connect the power supply for the configuration as shown in Illust. 6.

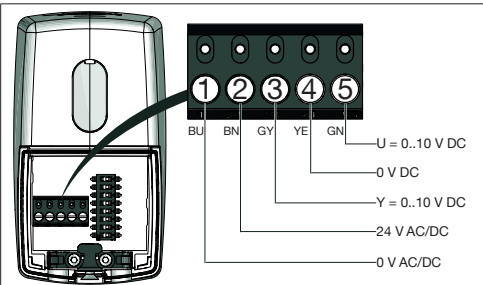

Illust. 6: Connection assignment

(1)	0 V AC/DC	blue (BU)
(2)	24 V AC/DC	brown (BN)
(3)	Control 0 – 10 V DC	grey (GY)
(4)	Position feedback 0 V DC	yellow (YE)
(5)	Position feedback 0 – 10 V DC	green (GN)

- After the power supply has been connected for the first time, the actuator will carry out an initialisation run. The product will be ready for operation after this initialisation.


7. Operation

The actuator is automatically controlled using the relevant control technology.

8. Maintenance


The actuator is maintenance-free.

9. Removal

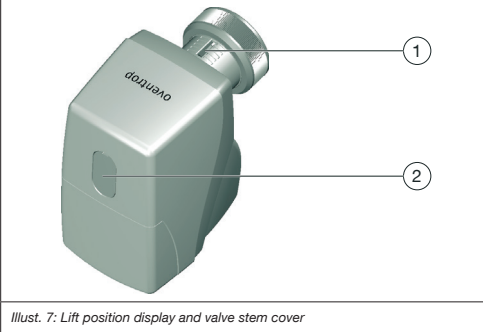

Illust. 7: Lift position display and valve stem cover

(1)	Display of the actuator lift position
(2)	Cover for manual setting (adjustment spindle)

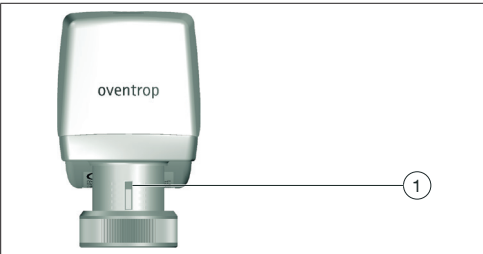

Illust. 8: Upper lift position

(1)	Display of the upper lift position
-----	------------------------------------

CAUTION	
	Risk of burns due to hot components! Contact with hot components may cause burns. ► Allow the product to cool down before working on it.

NOTICE	
	It may not be possible to unscrew the collar nut manually! In some circumstances, the actuator closes the valve with the maximum actuating power of 200 N. In this case, the collar nut can no longer be unscrewed manually. ► Do not use pliers or similar to loosen the collar nut! ► Use the manual setting option.

- Completely disconnect the actuator (all poles) from the power supply.
- Check the actuator lift position.
- If the actuator is not in the upper lift position: (see position (1) in Illust. 8):
Open the cover for manual setting (adjustment spindle) (see position 2 in Illust. 7) and move the actuator into the upper lift position using an Allen key (4 mm across flats).

NOTICE	
	Malfunction due to manual over-tightening Fault-free operation of the actuator is not guaranteed if contact is made with the slip clutch during manual setting. ► After reaching the manually-set piston stroke position, rotate the Allen key half a turn in the opposite direction!

- Undo the collar nut.
- The actuator can be removed.

10. Reinstallation

	The actuator must be in the upper lift position for correct installation.
--	---

- Before reinstalling, position the actuator in the upper lift position as described in section 9.
- Fit the actuator to the connection thread of the valve.
- Tighten the collar nut finger-tight.
- Commission the actuator as described in section 6.

	After reinstallation, an initialisation run will only be triggered if one of the DIP switches 1 to 6 (see illustr. 4) is reset after connection to the power supply. The initialisation run will neither be triggered after a reconfiguration if the actuator is already in the lower lift position.
--	--

11. Disposal

NOTICE	
	Risk of environmental pollution! Incorrect disposal (for instance with standard waste) may lead to environmental damage. ► Dispose of packaging material in an environmentally friendly manner. ► Dispose of the components appropriately.

If no return or disposal agreement has been made, you must dispose of the product yourself.

- Return components to the recycling system if possible.
- Dispose of components which cannot be recycled according to local regulations. Disposal with standard waste is not permitted.

12. Appendix

DIP switch settings

Valve + actuator =														
Valve type	Model	Control range	DIP switches						DIP switches					
			S1	S2	S3	S4	S5	S6	S1	S2	S3	S4	S5	S6
 Cocon QTZ PN 25	DN 10/15 30 – 210 l/h	30 – 90 l/h	on	off	off	off	off	off						
		91 - 150 l/h	on	on	off	off	off	off	on	on	off	off	off	on
		151 - 210 l/h	on	off	on	off	off	off	on	off	on	off	off	on
	DN 10/15 150 – 700 l/h	150 - 250 l/h	on	on	on	off	off	off						
		251 - 500 l/h	on	off	off	on	off	off	on	on	on	off	off	on
		501 - 700 l/h	on	on	off	on	off	off	on	off	off	on	off	on
	DN 15 200 – 1300 l/h	200 - 300 l/h	on	off	on	on	off	off						
		301 - 500 l/h	on	off	on	off	off	off	on	off	on	off	off	on
		501 - 900 l/h	on	on	on	on	off	off	on	on	off	on	off	on
	DN 20 250 – 1800 l/h	901 - 1300 l/h	on	off	off	off	on	off	on	off	on	on	off	on
		250 - 400 l/h	on	off	on	on	off	off						
		401 - 800 l/h	on	on	off	off	off	off	on	on	off	off	off	on
	DN 25 400 – 2500 l/h	801 - 1100 l/h	on	on	on	on	on	off	on	on	off	off	on	on
		1101 - 1500 l/h	on	on	off	off	on	off	on	on	on	on	on	on
		1501 - 1800 l/h	on	off	on	off	on	off	on	off	on	on	off	on
	DN 32 600 – 4800 l/h	400 - 700 l/h	on	on	on	off	on	off						
		701 - 1100 l/h	on	on	off	off	off	off	on	on	off	off	off	on
		1101 - 2100 l/h	on	off	off	on	on	off	on	off	off	off	on	on
 Cocon QTZ PN 16	DN 10/15 30 – 210 l/h	2101 - 2500 l/h	on	on	off	on	on	off	on	off	on	on	off	on
		600 - 800 l/h	on	off	on	on	on	off	on	on	off	off	on	on
		801 - 2800 l/h	on	on	on	on	on	off	on	on	off	off	on	on
	DN 10/15 90 – 450 l/h	2801 - 4800 l/h	on	off	off	off	off	on	on	off	on	off	on	on
		30 – 90 l/h	off	off	off	off	on	on						
		91 - 150 l/h	off	on	off	off	on	off	off	on	on	off	on	on
	DN 10/15 150 – 1050 l/h	151 - 210 l/h	off	off	on	off	on	off	off	on	off	on	on	on
		90 – 150 l/h	off	on	on	off	on	off						
		151 – 250 l/h	off	off	off	on	on	off	off	off	off	on	on	on
	DN 15/20 150 – 1050 l/h	251 – 450 l/h	off	on	off	on	on	off	off	on	off	on	on	on
		150 – 200 l/h	off	off	on	on	on	off						
		201 – 300 l/h	off	off	off	on	off	on	off	off	on	off	on	on
	DN 20 180 – 1300 l/h	301 – 600 l/h	off	on	on	on	on	off	off	off	off	on	on	on
		601 – 1050 l/h	off	off	off	off	off	on	off	on	off	on	on	on
		180 – 400 l/h	off	on	off	off	off	on	off	off	on	off	on	on
	DN 25 300 – 2000 l/h	401 – 500 l/h	off	on	off	off	on	off	off	on	on	off	on	on
		501 – 600 l/h	off	off	on	off	on	off	off	on	off	on	on	on
		601 – 700 l/h	off	off	on	off	off	on	off	off	on	on	on	on
 Cocon 2TZ + Cocon 4TR	DN 32 600 – 3600 l/h	701 – 1300 l/h	off	on	on	off	off	on	off	off	on	on	on	on
		300 – 400 l/h	off	off	off	on	off	on						
		401 – 600 l/h	off	off	off	on	on	off	off	off	on	on	on	on
	kvs = 0.45	601 – 900 l/h	off	off	off	off	off	on	off	on	off	on	on	on
		901 – 1400 l/h	off	on	off	on	off	on	off	off	on	on	on	on
		1401 – 2000 l/h	off	off	on	on	off	on	off	on	on	on	on	on
	kvs = 1.0	600 l/h	off	on	on	on	off	on						
		601 – 800 l/h	off	off	off	off	on	on	off	on	off	on	on	on
		801 – 1600 l/h	off	off	off	off	on	on	off	off	on	on	on	on
	kvs = 1.8	1601 – 3600 l/h	off	off	off	off	off	off	off	on	on	on	on	on
		0.25 U.	off	off	off	on	off	off						
		0.26 – 0.5 U	off	off	on	off	on	off						
	kvs = 4.5	0.6 – 4 U.	off	off	on	off	off	off	off	off	on	off	on	off
		0.5 – 1 U.	off	on	off	off	on	off						
		1.1 – 4.5 U	off	off	off	off	off	on	off	on	on	on	on	on
 AV9 + AV6 + AF + AZ/A + PTB kvs = 0.45 PTB kvs = 0.80	AV9	0.5 – 7 U.	off	on	off	off	on	off						
		0.75 – 1 U.	off	off	on	off	on	off						
		1.1 – 7 U.	off	off	on	on	off	on						
	AV6	Presetting 3, 4, 5, 6	off	off	on	on	off	off						
		Presetting 7, 8	off	on	off	on	off	off						
		Presetting 9	off	off	off	on	off	off						
	AF	Presetting 2, 3	off	off	on	on	off	off						
		Presetting 4, 5	off	on	off	on	off	off						
		Presetting 6	off	off	off	on	off	off						
	AZ/A	Presetting 1, 2, 3, 4	off	on	on	on	off	off						
		Presetting 5, 6	off	off	on	on	off	off						
			off	on	off	off	off	on	off	on	on	off	on	off
PTB kvs = 0.45	PTB kvs = 0.80		off	off	on	off	off	off	off	off	on	off	on	off
			off	off	off	off	off	on	off	on	on	on	on	on

 Hycoccon HTZ	DN 15 kvs = 1.7	0.5 – 0.75 U.	off	off	on	on	off	off						
		0.76 – 1 U.	off	off	on	on	off	off						
		1.1 – 3 U.	off	off	on	on	off	off						
	DN 20 kvs = 2.7	0.5 – 0.75 U.	off	off	on	on	off	off						
		0.76 – 1.5 U.	off	off	on	on	off	on						
		1.6 – 3 U.	off	off	on	on	off	on						
	DN 25 kvs = 3.6	0.5 – 0.75 U.	off	on	on	on	off	off						
		0.76 – 1.0 U.	off	off	on	on	off	off						
		1.1 – 1.5 U.	off	on	off	off	on	off						
	DN 32 kvs = 6.8	1.6 – 3.0 U.	off	off	off	off	off	on						
		3.1 – 3.5 U.	off	off	on	off	off	on						
		0.5 U.	off	on	on	on	off	off						
	DN 40 kvs = 10	0.6 – 1.0 U.	off	off	on	on	off	off						
		1.1 – 1.5 U.	off	on	off	on	off	off						
		1.6 – 2.0 U.	off	off	off	on	off	off						
	Valve lift h	2.1 – 2.5 U.	off	on	on	off	off	off						
		2.6 – 3.0 U.	off	on	off	off	off	off						
		3.1 – 4.0 U.	off	off	off	off	off	off						
Products by other manufacturers (M30 x 1.5, s = 11.8 mm)	Valve lift h	h = 0.5 mm	off	on	on	on	off	off	off	on	off	off	on	on
		h = 1.0 mm	off	off	on	on	off	off						
		h = 1.5 mm	off	on	off	on	off	off	off	off	on	off	on	on
		h = 2.0 mm	off	off	off	on	off	off	off	off	on	off	on	on
		h = 2.5 mm	off	on	on	off	off	off	off	off	off	on	on	on
		h = 3.0 mm	off	off	on	off	off	off	off	off	on	off	on	on
		h = 3.5 mm	off	on	off	off	off	off	off	off	off	on	on	on
		h = 4.0 mm	off	off	off	off	off	off	off	off	on	on	on	on
			off	on	on	on	off	off	off	off	on	on	on	on
			off	on	on	on	off	off	off	off	on	on	on	on
			off	on	on	on	off	off	off	off	on	on	on	on
			off	on	on	on	off	off	off	off	on	on	on	on



1. Généralités
2. Informations relatives à la sécurité
3. Description technique
4. Transport et stockage
5. Montage
6. Mise en service
7. Service
8. Maintenance
9. Démontage
10. Remontage
11. Élimination
12. Annexe

1. Généralités


La notice d'utilisation originale est rédigée en allemand.
Les notices d'utilisation rédigées dans les autres langues ont été traduites de l'allemand.

1.1 Validité de la notice d'utilisation

Cette notice d'utilisation s'applique au servo-moteur, Aktor M ST L, 24 V, 0 – 10 V avec acquittement de la position.

1.2 Plaque signalétique

La plaque signalétique se trouve sur la face inférieure du produit.

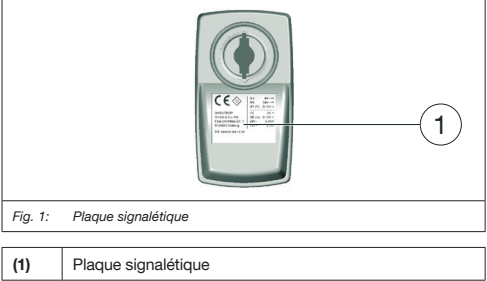

1.3 Composants fournis

Contrôler la livraison. Veiller à ce qu'elle soit complète et sans dommages liés au transport.

Les composants fournis sont les suivants :

- « Aktor M ST L »
- Notice d'utilisation

1.4 Contact

Adresse

OVENTROP GmbH & Co. KG
Paul-Oventrop-Straße 1
59939 Olsberg
ALLEMAGNE

Service technique

Téléphone : +49 (0) 29 62 82-234

1.5 Propriété intellectuelle et loi protectrice

Cette notice est protégée par le droit de la propriété intellectuelle. Son usage est exclusivement destiné aux personnes travaillant avec ce produit.

1.6 Déclaration de conformité UE

Par la présente, la société Oventrop GmbH & Co. KG déclare que ce produit est en conformité avec les exigences fondamentales et les dispositions applicables des directives UE concernées.
La déclaration de conformité peut être demandée auprès du fabricant.

1.7 Symboles utilisés

	Informations et explications utiles.
	Appel à l'action
	Énumération
1. 2.	Ordre fixe. Étapes 1 à X.
	Résultat de l'action

2. Informations relatives à la sécurité

2.1 Prescriptions normatives

Respecter les conditions cadres en vigueur sur le lieu d'installation. Les normes, règles et directives en vigueur sont à appliquer.

2.2 Utilisation conforme

La sécurité d'exploitation n'est garantie que si le produit est affecté à l'utilisation prévue.

Le moteur doit être utilisé en intérieur dans des installations de chauffage, de ventilation et de rafraîchissement.
Toute autre utilisation est interdite et réputée non conforme.
Les revendications de toutes natures à l'égard du fabricant et/ou de ses mandataires, pour des dommages résultant d'une utilisation non conforme ne seront pas acceptées.
L'utilisation conforme inclut notamment l'application des recommandations de la notice d'utilisation.

2.3 Modifications sur le produit

Les modifications sur le produit sont interdites. Toute modification sur le produit entraîne l'annulation de la garantie. Le fabricant décline toute responsabilité en cas de dommages et dysfonctionnements résultant de modifications sur le produit.

2.4 Avertissements

Chaque avertissement comprend les éléments suivants :

Symbole d'avertissement MOT DE SIGNALISATION	
	Nature et source du danger ! Conséquences possibles lorsqu'un danger survient ou qu'un avertissement est ignoré. ► Moyens de prévention du danger.
Les mots de signalisation indiquent la gravité du danger résultant d'une situation.	
	ATTENTION
	Signale un danger potentiel de faible niveau. La situation entraîne des blessures mineures et réversibles si elle n'est pas évitée.
AVIS	
	Signale une situation susceptible d'entraîner des dégâts matériels si elle n'est pas évitée.

2.5 Consignes de sécurité

Nous avons développé ce produit conformément aux exigences de sécurité actuelles.

Respecter les consignes suivantes pour une utilisation en toute sécurité.

2.5.1 Danger lié à une qualification insuffisante

Les interventions sur le produit doivent être effectuées exclusivement par un professionnel qualifié.

De par sa formation professionnelle, son expérience ainsi que sa connaissance des normes et réglementations en vigueur, le professionnel qualifié est en mesure d'effectuer les travaux sur le produit décrit dans la présente notice.

Utilisateur

L'utilisateur de l'installation doit demander au professionnel qualifié de lui expliquer l'utilisation du produit.

2.5.2 Danger lié au courant électrique !

Ne faire effectuer les travaux sur l'alimentation secteur que par un électricien qualifié.

- En cas de dégâts visibles, ne pas mettre le produit en service.
- Débrancher entièrement le produit de l'alimentation en courant.
- Vérifier que le produit est hors tension.
- Sécuriser le produit contre tout rebranchement.
- Ne monter le produit que dans des locaux au sec.

2.5.3 Risque de brûlure lié aux robinetteries et surfaces chaudes

- Laisser le produit refroidir avant de débuter toute intervention.
- Porter des vêtements de protection appropriés pour éviter tout contact sans protection avec des robinetteries et des tronçons de l'installation chauds.

2.5.4 Disponibilité de la notice d'utilisation

Chaque personne travaillant avec ce produit doit lire et appliquer cette notice, ainsi que tous les autres documents de référence. La notice doit rester disponible sur le lieu d'utilisation du produit.

- Cette notice ainsi que tous les autres documents de référence doivent être remis à l'utilisateur de l'installation.

3. Description technique

3.1 Configuration

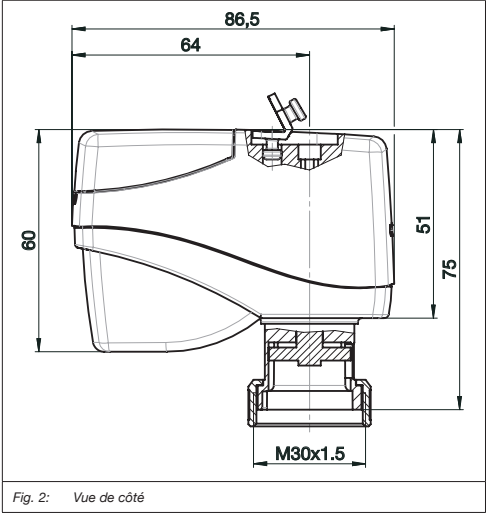


Fig. 2: Vue de côté

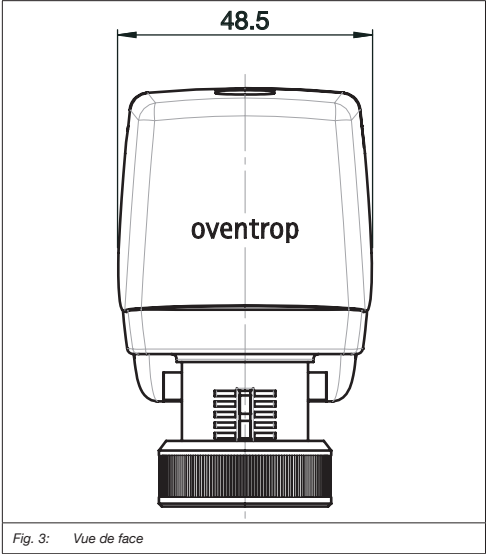


Fig. 3: Vue de face

3.2 Description du fonctionnement

Le moteur ouvre ou ferme un robinet en fonction de la tension de commande appliquée.

Le moteur peut être adapté aux paramètres spécifiques du robinet utilisé à l'aide d'interrupteurs DIP.

Le moteur offre une sortie 0 – 10 V qui alimente la position actuelle de la levée.

3.3 Données techniques

Tension de service	24 V CA ±10 %, 50/60 Hz 24 V CC ±10 %
Puissance absorbée	Dimensionnement : - 3,7 VA (24 V CA) - 1,7 W (24 V CC) Nominale : - 2,5 VA (24 V CA) - 1,3 W (24 V CC)
Courant de démarrage	Max. 10 A sur une courte durée
Réglage	Réglage progressif 0 – 10 V CC
Raccordement	Câble fixe prémonté 1,5 m ; 5 x 0,5 mm ²
Mise hors service du moteur	Tige du moteur : s'avancant = en fonction de la charge, se retirant = en fonction de la course
Levée de réglage	Max. 4 mm
Temps de réglage	22 s/mm
Force de réglage	Nominale 150 N
Indicateur de réglage	Échelle de graduation
Acquittement de la position	0 – 10 V, CC ; 5 mA pour levée de réglage 0 – 100 %
Dispositif de réglage manuel	Uniquement à l'état hors tension ! Tige de réglage pour clé Allen sous le cache (position 2, Fig. 7), surplat 4 mm
Température du fluide admissible dans le robinet	0 – 120 °C
Température ambiante	0 – 50 °C

Humidité ambiante	En service : 0 – 85 % HR, non condensant Hors service : 0 – 85 % HR, non condensant
Catégorie de surtension	III
Degré d'encrassement	2
Type de protection	IP54 dans toutes les positions de montage
Classe de protection	III selon la norme EN 60730
Position de montage	Aucune limitation
Entretien	Aucun
Poids	250 g

4. Transport et stockage

Plage de température	-0 °C – +40 °C
Humidité relative de l'air	95 % max.
Particules	Au sec et protégé des poussières
Influences mécaniques	Protégé des vibrations mécaniques
Influences climatiques	Ne pas stocker en plein air À l'abri du rayonnement solaire
Influences chimiques	Ne pas stocker avec des agents agressifs

5. Montage

5.1 Premier montage

	Lors du montage, veiller à prévoir de la place pour le montage du moteur.
	Monter le moteur avant d'établir l'alimentation électrique !

ATTENTION	
	Risque de brûlure par composants chauds ! Il y a risque de brûlure lors du contact avec des composants chauds. ► Avant le début des travaux, laisser le robinet refroidir. ► Porter des gants de protection.

- Monter le moteur sur le raccordement fileté du robinet.
- Serrer l'écrou de serrage à la main.

	Ne pas bloquer le filetage.
--	-----------------------------

AVIS	
	Endommagement du moteur dû à un couple excessif lors du serrage de l'écrou ! Le moteur peut être endommagé et son fonctionnement être empêché par un couple excessif lors du serrage de l'écrou. ► Serrer l'écrou de serrage à la main.

6. Mise en service

6.1 Configuration des interrupteurs DIP

- Retirer le couvercle du boîtier.
- Configurer les interrupteurs DIP en fonction du robinet utilisé (voir fig. 12).

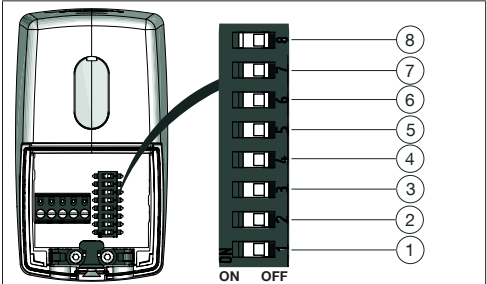


Fig. 4: Interrupteurs DIP

(1)	S1 ON/OFF	Réglage du comportement de la levée souhaité selon les courbes de fonctionnement du robinet utilisé.
(2)	S2 ON/OFF	
(3)	S3 ON/OFF	
(4)	S4 ON/OFF	
(5)	S5 ON/OFF	
(6)	S6 ON/OFF	
(7)	ON = 10 V – 0 V voir Fig. 5	OFF = 0 V – 10 V
(8)	Fonction automatique de rinçage et anti-blocage du robinet	
	ON	activée
	OFF	désactivée

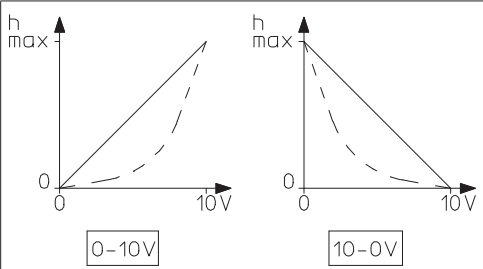


Fig. 5: Inversion courbes de fonctionnement des interrupteurs DIP 7

6.2 Établissement de l'alimentation électrique

- Établir l'alimentation électrique selon la disposition indiquée Fig. 6.

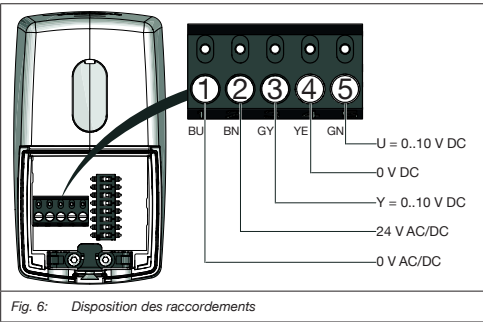


Fig. 6: Disposition des raccordements

(1)	0 V CA/CC	bleu (BU)
(2)	24 V CA/CC	brun (BN)
(3)	Réglage 0 – 10 V CC	gris (GY)
(4)	Acquittement de la position 0 V CC	jaune (YE)
(5)	Acquittement de la position 0 – 10 V CC	vert (GN)

- Dès que l'alimentation électrique a été établie pour la première fois, le moteur effectue une course d'initialisation. Suite à l'initialisation, le produit est prêt à l'emploi.

7. Service

Le moteur est actionné automatiquement par la technique de régulation correspondante.

8. Maintenance

Le moteur ne nécessite aucun entretien.

9. Démontage

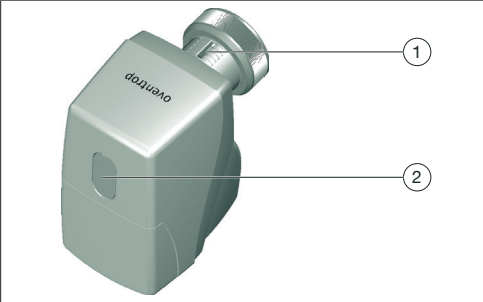


Fig. 7: Affichage de la position de la levée et cache de la tige du robinet

(1)	Affichage de la position de la levée du moteur
(2)	Cache pour la tige de réglage



Fig. 8: Position supérieure de la levée

(1)	Affichage de la position supérieure de la levée
-----	---

ATTENTION	
	Risque de brûlure par composants chauds ! Il y a risque de brûlure lors du contact avec des composants chauds. ► Laisser le produit refroidir avant de débuter toute intervention.

AVIS	
	Il est possible que l'écrou de serrage ne puisse pas être desserré à la main ! Il se peut que le moteur ferme le robinet avec la force de réglage maximale de 200 N. Dans ce cas, l'écrou de serrage ne peut plus être libéré à la main. ► Ne pas utiliser de pince ou d'outil similaire pour desserrer l'écrou de serrage ! ► Utiliser la méthode de réglage manuel

- Déconnecter entièrement le moteur de l'alimentation électrique.
- Contrôler la position de la levée du moteur.
- Si le moteur ne se trouve pas en position supérieure de la levée (voir position (1), Fig. 8) :
Ouvrir le cache pour réglage manuel (tige de réglage) (voir position 2, Fig. 7) et, à l'aide d'une clé Allen (surplat 4 mm), amener le moteur en position supérieure de la levée.

AVIS	
	Dysfonctionnement dû à un vissage manuel forcé Si le dispositif de réglage manuel atteint le point d'activation du limiteur de couple à friction, le fonctionnement sans dérangements du moteur n'est plus garanti. ► Lorsque la position de la levée réglée manuellement est atteinte, tourner la clé Allen d'un demi-tour dans le sens inverse !

- Desserrer l'écrou de serrage.
► Le moteur peut être retiré.

10. Remontage

	Pour effectuer le montage correctement, le moteur doit se trouver en position supérieure de la levée.
--	---

- Avant le remontage, amener le moteur dans la position supérieure de la levée comme indiqué au par. 9.
- Monter le moteur sur le raccordement fileté du robinet.
- Serrer l'écrou de serrage à la main.
- Mettre le moteur en service, comme indiqué au par. 6.

	Après le remontage, une course d'initialisation sera uniquement effectuée si un des interrupteurs DIP 1 à 6 est déréglé (voir Fig. 4) après avoir établi l'alimentation électrique. La course d'initialisation ne sera non plus effectuée après une reconfiguration si le moteur se trouve déjà en position inférieure de la levée.
--	--

11. Élimination





AVIS	
	Risque de pollution ! Une élimination non conforme (par ex. avec les déchets ménagers) peut entraîner des dommages environnementaux. ► L'emballage est à éliminer dans le respect de l'environnement. ► Éliminer les composants dans le respect de la réglementation.

Si aucun accord de reprise ou d'élimination n'a été conclu, mettre le produit au rebut.

- Si possible, amener les composants au recyclage.
- Éliminer les composants non recyclables selon les réglementations locales. L'élimination avec les déchets ménagers est interdite.

12. Annexe

    Paramétrages des interrupteurs DIP

Robinet + moteur =														
Type de robinet	Modèle	Plage de réglage	Interrupteurs DIP						Interrupteurs DIP					
 Cocon QTZ PN 25	DN 10/15 30 – 210 l/h	30 – 90 l/h	on	off	off	off	off	off						
		91 – 150 l/h	on	on	off	off	off	off	on	on	off	off	off	on
		151 – 210 l/h	on	off	on	off	off	off	on	off	on	off	off	on
	DN 10/15 150 – 700 l/h	150 – 250 l/h	on	on	on	off	off	off						
		251 – 500 l/h	on	off	off	on	off	off	on	on	on	off	off	on
		501 – 700 l/h	on	on	off	on	off	off	on	off	off	on	off	on
	DN 15 200 – 1300 l/h	200 – 300 l/h	on	off	on	on	off	off						
		301 – 500 l/h	on	off	on	off	off	off	on	off	on	off	off	on
		501 – 900 l/h	on	on	on	on	off	off	on	on	off	on	off	on
	DN 20 250 – 1800 l/h	901 – 1300 l/h	on	off	off	off	on	off	on	off	on	on	off	on
		250 – 400 l/h	on	off	on	on	off	off						
		401 – 800 l/h	on	on	off	off	off	off	on	on	off	off	off	on
		801 – 1100 l/h	on	on	on	on	on	off	on	on	off	off	on	on
		1101 – 1500 l/h	on	on	off	off	on	on	on	on	on	on	on	on
	DN 25 400 – 2500 l/h	1501 – 1800 l/h	on	off	on	off	on	off	on	off	on	on	off	on
		400 – 700 l/h	on	on	on	off	on	off						
		701 – 1100 l/h	on	on	off	off	off	off	on	on	off	off	off	on
		1101 – 2100 l/h	on	off	off	on	on	off	on	off	off	off	on	on
	DN 32 600 – 7800 l/h	2101 – 2500 l/h	on	on	off	on	on	off	on	off	on	on	off	on
		600 – 800 l/h	on	off	on	on	on	off						
		801 – 2800 l/h	on	on	on	on	on	off	on	on	off	off	on	on
		2801 – 4800 l/h	on	off	off	off	off	on	on	off	on	off	on	on
 Cocon QTZ PN 16	DN 10/15 30 – 210 l/h	30 – 90 l/h	off	off	off	off	on	off						
		91 – 150 l/h	off	on	off	off	on	off	off	on	on	off	on	on
		151 – 210 l/h	off	off	on	off	on	off	off	on	off	on	on	on
	DN 10/15 90 – 450 l/h	90 – 150 l/h	off	on	on	off	on	off						
		151 – 250 l/h	off	off	off	on	on	off	off	off	off	on	on	on
		251 – 450 l/h	off	on	off	on	on	off	off	on	off	on	on	on
	DN 15/20 150 – 1050 l/h	150 – 200 l/h	off	off	on	on	on	off						
		201 – 300 l/h	off	off	off	on	off	on	off	off	on	off	on	on
		301 – 600 l/h	off	on	on	on	on	off	off	off	off	on	on	on
	DN 20 180 – 1300 l/h	601 – 1050 l/h	off	off	off	off	off	on	off	on	off	on	on	on
		180 – 400 l/h	off	on	off	off	off	on	off	off	on	off	on	on
		401 – 500 l/h	off	on	off	off	on	off	off	on	on	off	on	on
		501 – 600 l/h	off	off	on	off	on	off	off	on	off	on	on	on
		601 – 700 l/h	off	off	on	off	off	on	off	off	on	on	on	on
	DN 25 300 – 2000 l/h	701 – 1300 l/h	off	on	on	off	off	on	off	off	on	on	on	on
		300 – 400 l/h	off	off	off	on	off	on						
		401 – 600 l/h	off	off	off	on	on	off	off	off	on	on	on	on
		601 – 900 l/h	off	off	off	off	off	on	off	on	off	on	on	on
		901 – 1400 l/h	off	on	off	on	off	on	off	off	on	on	on	on
 Cocon 2TZ +  Cocon 4TR	kvs = 0,45	0,25 U.	off	off	off	on	off	off						
		0,26 – 0,5 U.	off	off	on	off	on	off						
		0,6 – 4 U.	off	off	on	off	off	off	off	off	on	off	on	off
	kvs = 1,0	0,5 – 1 U.	off	on	off	off	on	off						
		1,1 – 4,5 U.	off	off	off	off	off	on	off	on	on	on	on	on
	kvs = 1,8	0,5 – 7 U.	off	on	off	off	on	off						
		kvs = 4,5	0,75 – 1 U.	off	off	on	off	on	off					
		1,1 – 7 U.	off	off	on	on	off	on						
 AV9 +  AV6 +  AF +  AZ/A +  PTB kvs=0,45 +  PTB kvs=0,80	AV9	Préréglage 3, 4, 5, 6	off	off	on	on	off	off						
		Préréglage 7, 8	off	on	off	on	off	off						
		VE 9	off	off	off	on	off	off						
	AV6	Préréglage 2, 3	off	off	on	on	off	off						
		Préréglage 4, 5	off	on	off	on	off	off						
		VE 6	off	off	off	on	off	off						
	AF	Préréglage 1, 2, 3, 4	off	on	on	on	off	off						
		Préréglage 5, 6	off	off	on	on	off	off						
			off	on	off	off	off	on	off	on	on	off	on	off
	PTB kvs=0,45		off	off	on	off	off	off	off	off	on	off	on	off
	PTB kvs=0,80		off	off	off	off	off	on	off	on	on	on	on	on

 Hycocoon HTZ	DN 15 kvs = 1,7	0,5 – 0,75 U.	off	off	on	on	off	off						
		0,76 – 1 U.	off	off	on	on	off	off						
		1,1 – 3 U.	off	off	on	on	off	off						
	DN 20 kvs = 2,7	0,5 – 0,75 U.	off	off	on	on	off	off						
		0,76 – 1,5 U.	off	off	on	on	off	on	off					
		1,6 – 3 U.	off	off	on	on	off	on						
	DN 25 kvs = 3,6	0,5 – 0,75 U.	off	on	on	on	off	off						
		0,76 – 1,0 U.	off	off	on	on	off	off						
		1,1 – 1,5 U.	off	on	off	off	on	off						
		1,6 – 3,0 U.	off	off	off	off	off	on	off					
		3,1 – 3,5 U.	off	off	on	off	off	on						
	DN 32 kvs = 6,8	0,5 U.	off	on	on	on	off	off						
		0,6 – 1,0 U.	off	off	on	on	off	off						
		1,1 – 1,5 U.	off	on	off	on	off	off						
		1,6 – 2,0 U.	off	off	off	on	off	off						
		2,1 – 2,5 U.	off	on	on	off	off	off						
		2,6 – 3,0 U.	off	on	off	off	off	off						
	DN 40 kvs = 10	3,1 – 4,0 U.	off	off	off	off	off	off						
		0,5 – 0,75 U.	off	off	on	on	off	off						
		0,76 – 1,0 U.	off	on	off	on	off	off						
		1,1 – 1,5 U.	off	off	off	on	off	off						
		1,6 – 2,0 U.	off	on	on	off	off	off						
		2,1 – 2,5 U.	off	off	on	off	off	off						
Produits de fabricants tiers (M30x1,5 ; s=11,8 mm)	Levée du robinet h	2,6 – 3,0 U.	off	on	off	off	off	off						
		3,1 – 4,0 U.	off	off	off	off	off	off						
		h = 0,5 mm	off	on	on	on	off	off	off	on	off	off	on	on
		h = 1,0 mm	off	off	on	on	off	off						
		h = 1,5 mm	off	on	off	on	off	off	off	off	on	off	on	on
		h = 2,0 mm	off	off	off	on	off	off	off	off	on	on	off	on
		h = 2,5 mm	off	on	on	off	off	off	off	off	on	off	on	on
		h = 3,0 mm	off	off	on	off	off	off	off	off	on	off	on	on
		h = 3,5 mm	off	on	off	off	off	off	off	off	on	on	on	on
		h = 4,0 mm	off	off	off	off	off	off	off	off	on	on	on	on