

Raumfeuchte-Messumformer
Transmetteur de mesure d'humidité relative
Room transducer for relative humidity
Trasmettitore della umidità ambiente
Convertidor de la humedad ambiente
Rumsfuktighet-omvandlare
Ruimtenvochtigheid-meetomvormer








Montagevorschrift
Instructions de montage
Fitting instructions
Istruzioni di montaggio
Instrucciones de montaje
Monteringsanvisning
Montagevoorschrift

H%	⊖
T	⊖



Y07596

Installationsanweisung für die Elektrofachkraft
Notice d'installation pour l'électricien
Guidelines for the electrician
Informazioni per l'installatore elettrico
Instrucciones de instalación para el electricista
Installationsinstruktion för behörig elektriker
Instalatie aanwijzing voor de elektromonteur


Für den Einsatz in üblicher Umgebung
Pour usage dans un environnement normal
For use in normal environments
Per impiego in ambiente usuale
Para el uso en ambiente normal
För användning i normal miljö
Voor toepassing in normale omgeving

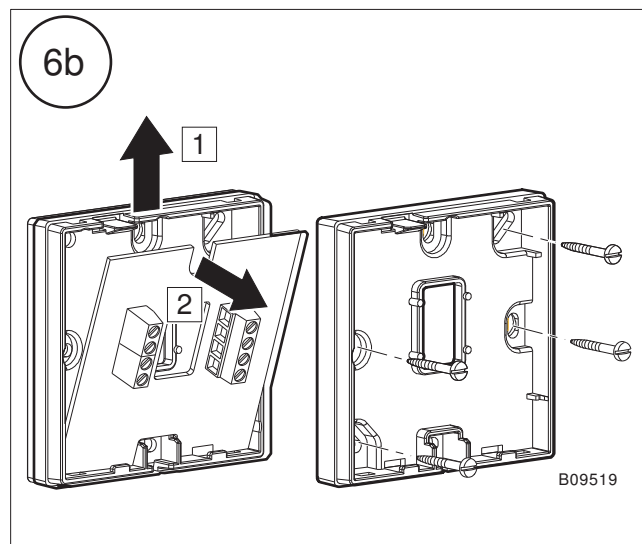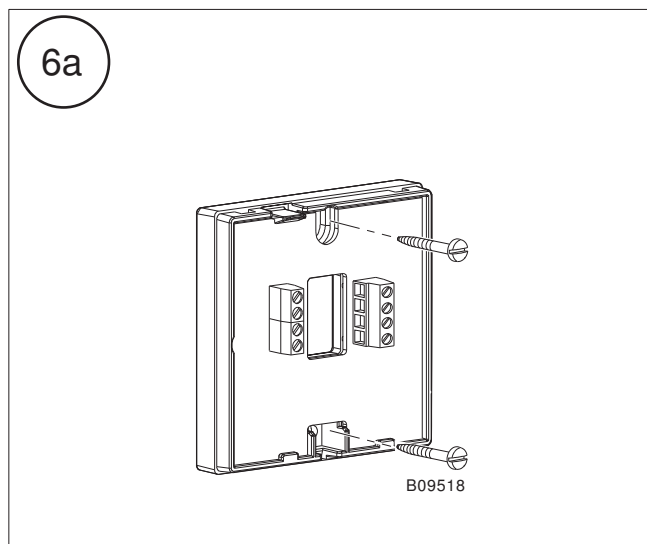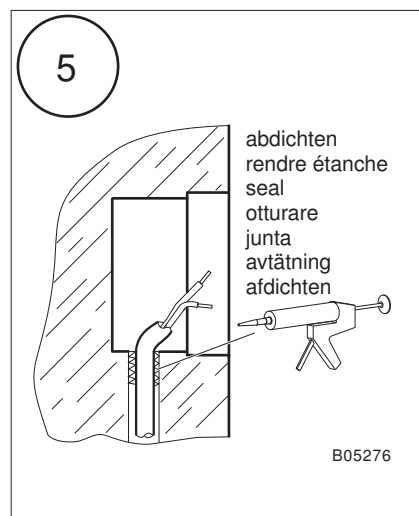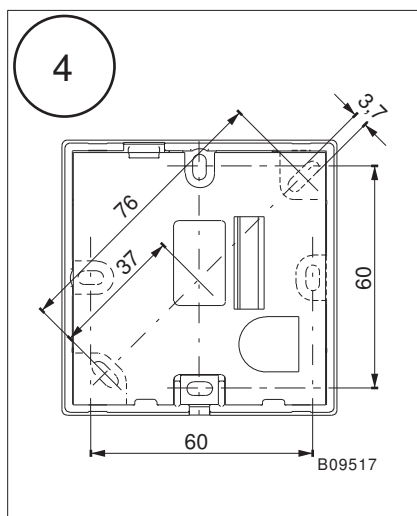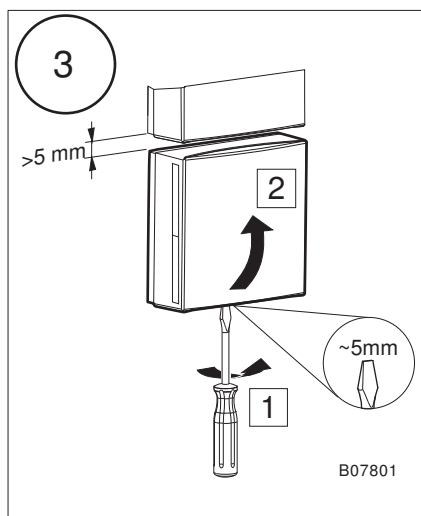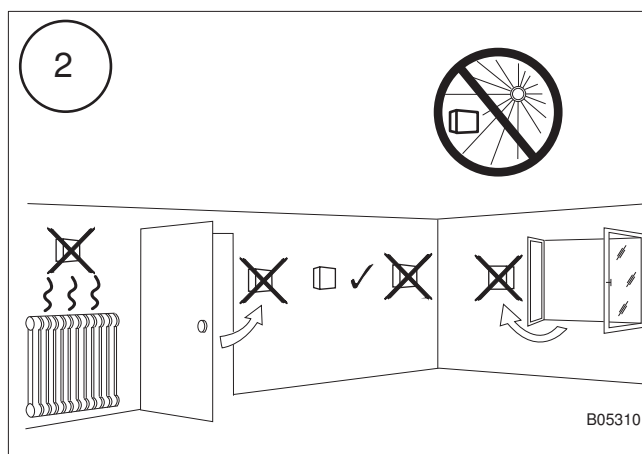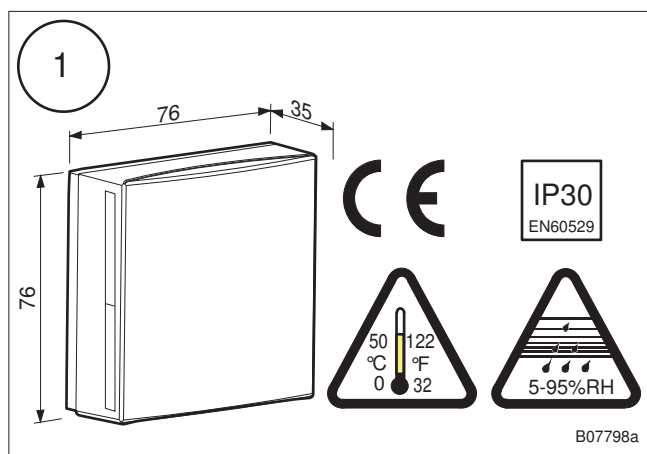

7

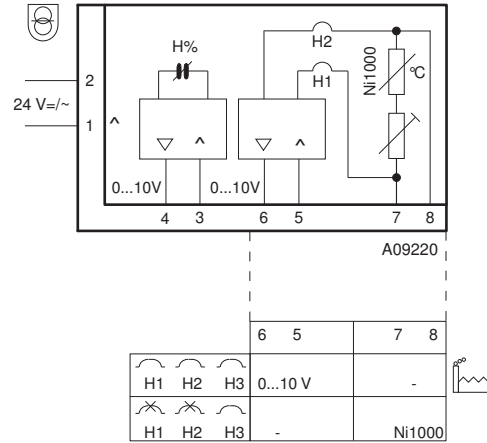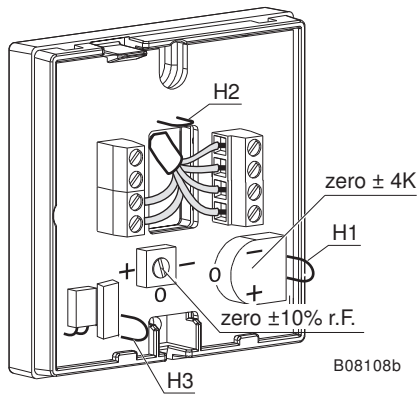

8

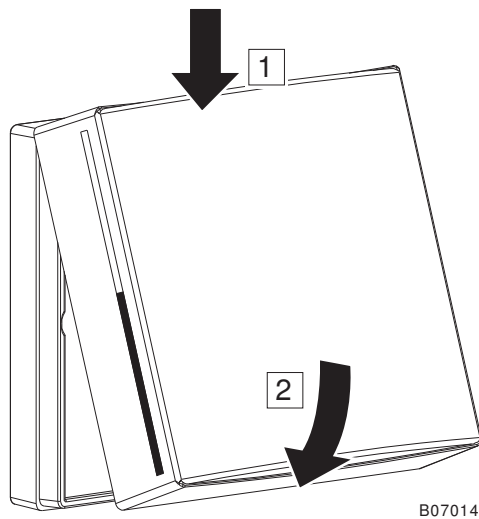

B07014