HydroControl M

Fixed Orifice Double Regulating Valve PN 25

DN 15...50

Double regulating valve for static hydronic balancing of pipe networks in closed heating and cooling systems. It offers a measuring function via a fixed orifice metering station, which allows simultaneous measurement and setting.

The HydroControl M consists of a flow optimised Y-pattern body, a valve insert with low pitch, double O-ring sealing, ergonomically designed handwheel, sophistically cone shaped plug, a fixed orifice metering station as well as two HydroPort auxiliary valves. All functions are accessible from the top.

Functions

- Flow regulation with reproducible, blockable and lead-sealable presetting
- Shutoff
- Connection for flow measurement
- Connection for impulse tube
- Draining, filling and venting the system section upstream or downstream of the valve

Features

+ Fixed orifice metering station allows simultaneous measurement and setting
+ All functions always included for easy selection
+ New HydroPort auxiliary valves for easy, quick and safe connection of accessories9

Subject to changes • All rights reserved

Product Details

Technical Data

Nominal sizes	DN 15...DN 50
Variants	With internal thread according to EN 10226
Operating temperature	-20...150 °C
Operating pressure	Max. 25 bar / PN 25
Medium	Heating and cooling water according to VDI 2035 or ÖNORM 5195 Water-glycol mixtures with max. 50% glycol content
Kvs values	0.19...35

Construction

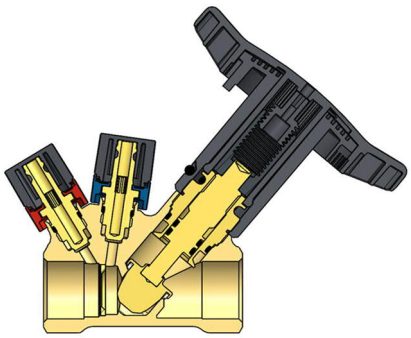

Component	Material
Multi-part handwheel set with presetting from the top	Polyamide plastic
Flow optimised Y-pattern body	Dezincification resistant brass
Bonnet, spindle and regulating plug	Dezincification resistant brass with EPDM O-rings
Seat seal	PTFE
HydroPort valves	Dezincification resistant brass
HydroPort seals	EPDM O-ring
HydroPort protection caps	TPE

Functions

Flow regulation

The flow is regulated by limiting the stroke of the valve plug and thus reducing the opening between the valve plug and the valve seat. The low thread pitch allows very precise setting. The plug position is shown on the top side of the handwheel on a scale from 0.0 (closed) to 4.85 (fully open) in increments of 0.05. This value is the presetting.

The HydroControl M has a linear characteristic line and a wide flow range evenly graded over all nominal sizes. For nominal size DN 15. variants with reduced flow are available to be able to regulate even the smallest volume flows precisely.

As is usual with regulating valves, small presettings reduce the flow accuracy. Therefore, a presetting below 0.5 should be avoided with the HydroControl M.

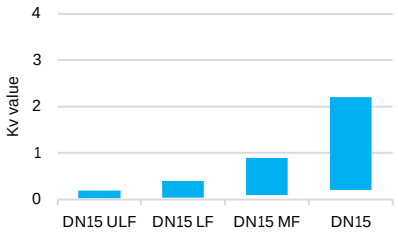

Flow ranges DN 15[1]

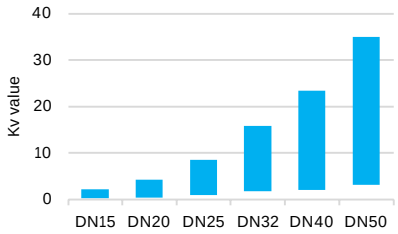

Flow ranges DN 15 to DN 50

Presetting

- Reproducible: when the valve is closed, it can only be opened to the set presetting value
- Blockable: the valve is blocked at the presetting position
- Lead-sealable: the valve can additionally be lead sealed, e.g. with sealing wire (item no. 1089091)

Shutoff

Turning the handwheel clockwise until it stops shuts off the pipeline tightly.

HydroPort

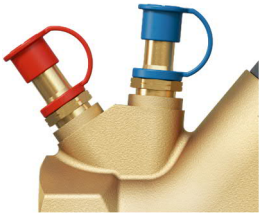

Each HydroControl M is equipped with two HydroPort auxiliary valves as standard. The HydroPort valves allow easy and secure snap-on connection of accessories. HydroPort valves are opened by a short turn with a 13 mm open-end spanner. A quarter turn is sufficient to measure the pressure, a full turn is sufficient to drain and fill.

FILLING, DRAINING AND VENTING

Filling, draining and venting is done with the HydroPort adapter (item no. 1069601). When the main valve is in the shutoff position, the system section upstream or downstream of the valve can be selectively filled or drained.

IMPULSE TUBE CONNECTION

The HydroPort valve enables a quick, safe and secure connection of the impulse tube of a HydroControl D differential pressure regulator. Impulse tubes of other differential pressure regulators can be connected with the HydroPort adapter and suitable connection pieces.

CONNECTION OF AN OV-DMC 3

The measuring hoses of an OV-DMC 3 measuring device can be connected directly to the HydroPort.

Measurement

A commercially available differential pressure gauge can be connected via the standard HydroPort auxiliary valves, for example the Oventrop OV-DMC 3. Based on the measured differential pressure and the Kv value, the flow rate can be calculated. This calculation is also carried out by the OV-DMC 3. so that the flow value is displayed directly during measurement. If two temperature sensors are used, the power is calculated and displayed in addition to the flow rate.

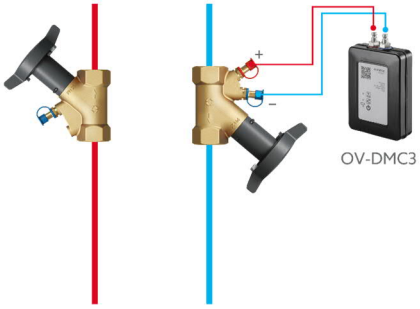

[1] ULF = Ultra Low Flow, LF = Low Flow, MF = Medium Flow

Subject to changes • All rights reserved

FIXED ORIFICE METERING STATION

The fixed orifice metering station of the HydroControl M allow simultaneous measurement and setting. This means that the valve can be set in real time based on the flow value displayed on the measuring device. The fixed orifice metering station has its own Kv value that must be used for measurements. The measurement Kv value is different from the valve Kv valve and may only be used for measurements on the valve. For pressure loss calculation and sizing, the valve Kv value must be used, which can be found in the section “Sizing“ from page 6.

MEASUREMENT KV VALUES

DN 15 ULF	DN 15 LF	DN 15 MF	DN 15	DN 20	DN 25	DN 32	DN 40	DN 50
0.29	0.62	1.28	2.74	5.51	10.7	22.8	35.6	54.8

The measurement Kv values are already stored in the OV-DMC 3 measuring system.

AUTOMATIC VALVE IDENTIFICATION

The Kv value depends on the manufacturer, model, nominal size and stroke position (=presetting value). Kv values for all Oventrop control valves and for all other common control valves are stored in the OV-DMC 3. To facilitate and speed up the determination of the correct Kv value, the OV-DMC 3 can automatically identify the model, nominal size and presetting using a smartphone camera. However, this function is limited to Oventrop double regulating valves.

Installation

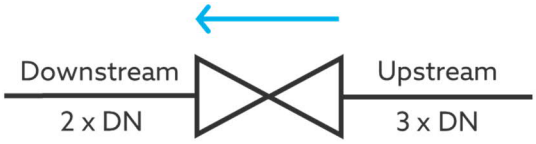

Calming sections of 3 x DN upstream and 2 x DN downstream of the HydroControl V should be provided.

The valve must be installed correctly in the flow direction which is indicated by an arrow on the body.

Dimensions

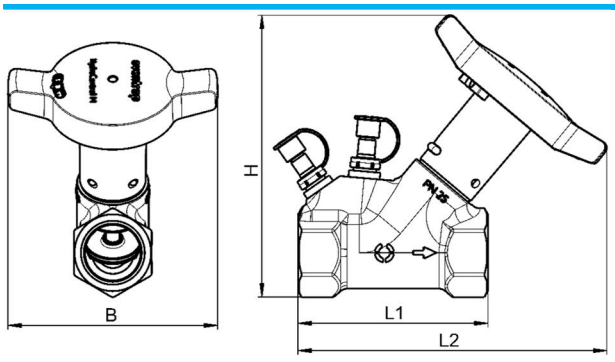

DN	Connec-tion	B [mm]	L1 [mm]	L2 [mm]	H [mm]	Weight [kg]
15	Rp ½	109	76	147	131	0.6
20	Rp ¾	109	84	152	136	0.7
25	Rp 1	109	99	161	147	1.0
32	Rp 1 ¼	109	119	176	157	1.4
40	Rp 1 ½	109	127	180	164	1.8
50	Rp 2	109	159	199	184	3.1

Subject to changes • All rights reserved

Item Numbers

DN	Connection size	Kvs value	Measurement Kv value	Item no.
15 ULF	Rp ½	0.19	0.29	1065844
15 LF	Rp ½	0.4	0.62	1065834
15 MF	Rp ½	0.9	1.28	1065824
15	Rp ½	2.2	2.74	1065804
20	Rp ¾	4.3	5.51	1065806
25	Rp 1	8.6	10.7	1065808
32	Rp 1 ¼	15.9	22.8	1065810
40	Rp 1 ½	23.4	35.6	1065812
50	Rp 2	35.0	54.8	1065816

Accessories

HydroPort adapter

		Suitable for	Item no.
	With external thread G ¾. For connecting accessories to HydroPort auxiliary valves. Also suitable for permanent connection, e.g. for impulse tubes of third-party controllers. This adapter is not required for connecting the impulse tube of the HydroControl D.	All nominal sizes	1069601

HydroPort extensions (2-fold)

		Length	Suitable for	Item no.
	For extending HydroPort auxiliary valves on insulated valves. For permanent attachment to the valve. 2 each with red and blue marking.	L=40 mm	All nominal sizes	1069602
		L=80 mm	All nominal sizes	1069603

Wire seal kit

		Suitable for	Item no.
	10-fold, consisting of seal and sealing wire	All nominal sizes	1089091

Insulation shells

		Suitable for	Item no.
	Only for heating systems. Meets the requirements of Appendix 8 to section 69 and 71 (1), line ee) of the German Building Energy Act (GEG). Building material class B2 according to DIN 4102 / E according to EN 13501-1. Operating temperature up to 110 °C.	DN 15	1069610
		DN 20	1069611
		DN 25	1069612
		DN 32	1069613
		DN 40	1069614
		DN 50	1069615

Subject to changes • All rights reserved

Sizing

This Product Data sheet offers various options to size the HydroControl M:

- Use the alignment chart below for a quick sizing across all nominal sizes
- Use the Kv value table and the flow charts on the following pages for an accurate determination of the presetting value
- At the end of the Product Data sheet, you will find information on the exact Kv value calculation taking into account the medium temperature. Furthermore, you will find information on the approximate calculation of corrected flow values when using glycol mixtures as well as a link to the digital data slider HydroSet

Alignment chart

The alignment chart enables a quick determination of suitable valves. The Y-axis is the Kv value. To improve readability, it is logarithmic. To determine suitable valves, find the scale value on the Y-axis and draw a horizontal line to the right. If there is an overlap with the blue flow range, the valve is suitable.

The item number of the desired variant can be read directly from the table below:

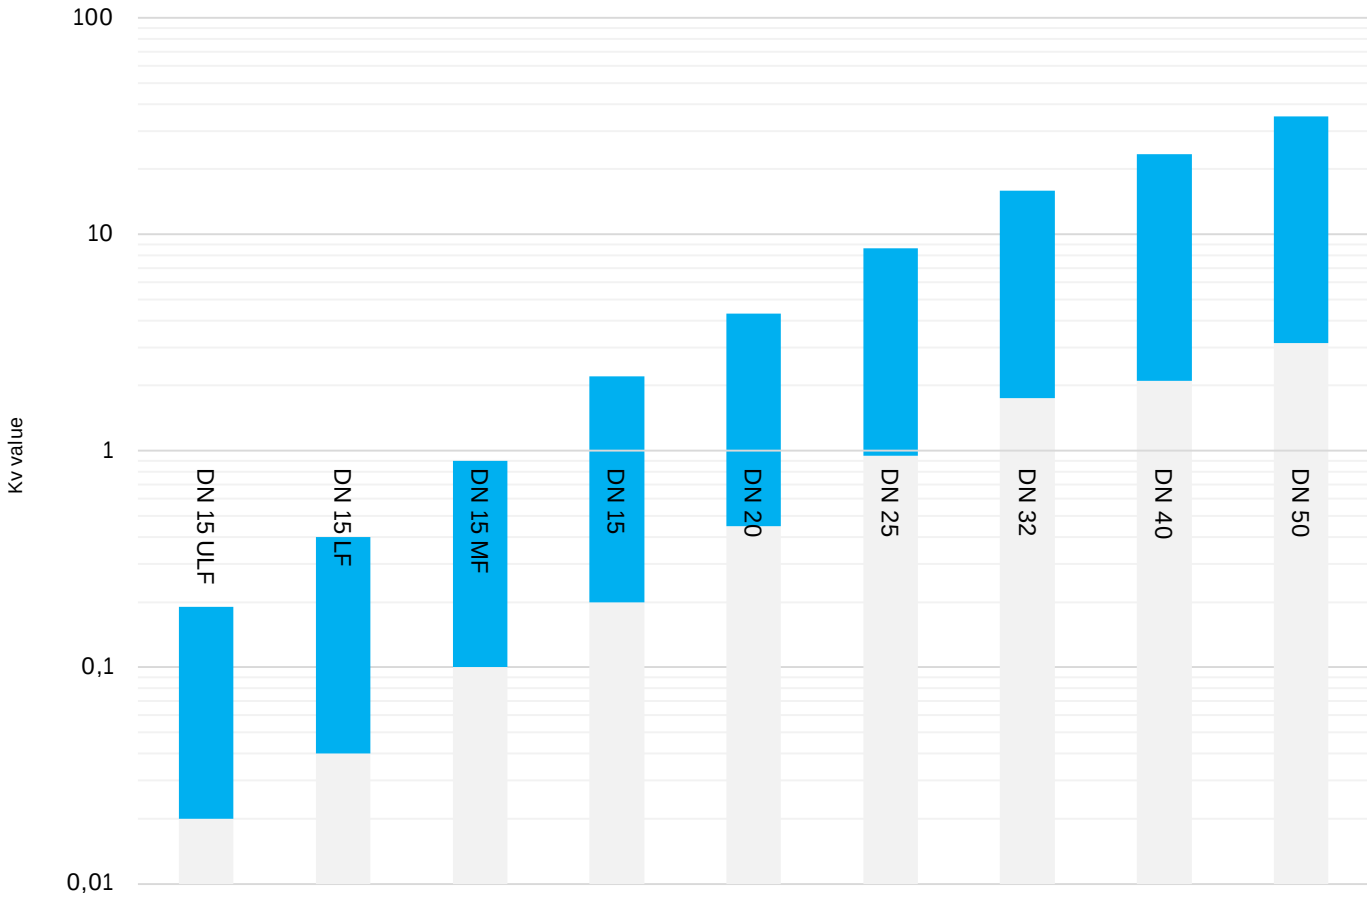

Nominal size	DN 15 ULF	DN 15 LF	DN 15 MF	DN 15	DN 20	DN 25	DN 32	DN 40	DN 50
Item no.	1065844	1065834	1065824	1065804	1065806	1065808	1065810	1065812	1065816

Kv values

V	DN 15 ULF	DN 15 LF	DN 15 MF	DN 15	DN 20	DN 25	DN 32	DN 40	DN 50
0.0	0				0	0	0	0	0
0.1	0.003	0.007	0.02	0.04	0.09	0.19	0.35	0.42	0.63
0.2	0.006	0.014	0.04	0.08	0.18	0.38	0.70	0.84	1.26
0.3	0.009	0.021	0.06	0.12	0.27	0.57	1.05	1.26	1.89
0.4	0.012	0.028	0.08	0.16	0.36	0.76	1.40	1.68	2.52
0.5	0.015	0.035	0.10	0.20	0.45	0.95	1.75	2.10	3.15
0.6	0.018	0.042	0.11	0.24	0.54	1.14	2.10	2.52	3.78
0.7	0.021	0.049	0.13	0.28	0.63	1.33	2.45	2.94	4.41
0.8	0.024	0.056	0.15	0.32	0.72	1.52	2.80	3.36	5.04
0.9	0.027	0.063	0.17	0.36	0.81	1.71	3.15	3.78	5.67
1.0	**0.03**	**0.07**	**0.19**	**0.4**	**0.9**	**1.9**	**3.5**	**4.2**	**6.3**
1.1	0.034	0.078	0.21	0.45	0.98	2.05	3.77	4.66	6.87
1.2	0.038	0.086	0.23	0.50	1.06	2.20	4.04	5.12	7.44
1.3	0.042	0.094	0.25	0.55	1.14	2.35	4.31	5.58	8.01
1.4	0.046	0.102	0.27	0.60	1.22	2.50	4.58	6.04	8.58
1.5	0.050	0.110	0.29	0.65	1.30	2.65	4.85	6.50	9.15
1.6	0.054	0.118	0.30	0.70	1.38	2.80	5.12	6.96	9.72
1.7	0.058	0.126	0.32	0.75	1.46	2.95	5.39	7.42	10.29
1.8	0.062	0.134	0.34	0.80	1.54	3.10	5.66	7.88	10.86
1.9	0.066	0.142	0.36	0.85	1.62	3.25	5.93	8.34	11.43
2.0	**0.07**	**0.15**	**0.38**	**0.9**	**1.7**	**3.4**	**6.2**	**8.8**	**12.0**
2.1	0.073	0.159	0.40	0.94	1.79	3.58	6.50	9.25	12.63
2.2	0.076	0.168	0.41	0.98	1.88	3.76	6.80	9.70	13.26
2.3	0.079	0.177	0.43	1.02	1.97	3.94	7.10	10.15	13.89
2.4	0.082	0.186	0.45	1.06	2.06	4.12	7.40	10.60	14.52
2.5	0.085	0.195	0.47	1.10	2.15	4.30	7.70	11.05	15.15
2.6	0.088	0.204	0.48	1.14	2.24	4.48	8.00	11.50	15.78
2.7	0.091	0.213	0.50	1.18	2.33	4.66	8.30	11.95	16.41
2.8	0.094	0.222	0.52	1.22	2.42	4.84	8.60	12.40	17.04
2.9	0.097	0.231	0.53	1.26	2.51	5.02	8.90	12.85	17.67
3.0	**0.10**	**0.24**	**0.55**	**1.3**	**2.6**	**5.2**	**9.2**	**13.3**	**18.3**
3.1	0.105	0.248	0.57	1.35	2.71	5.36	9.56	13.82	19.05
3.2	0.110	0.256	0.59	1.40	2.82	5.52	9.92	14.34	19.80
3.3	0.115	0.264	0.61	1.45	2.93	5.68	10.28	14.86	20.55
3.4	0.120	0.272	0.63	1.50	3.04	5.84	10.64	15.38	21.30
3.5	0.125	0.280	0.65	1.55	3.15	6.00	11.00	15.90	22.05
3.6	0.130	0.288	0.66	1.60	3.26	6.16	11.36	16.42	22.80
3.7	0.135	0.296	0.68	1.65	3.37	6.32	11.72	16.94	23.55
3.8	0.140	0.304	0.70	1.70	3.48	6.48	12.08	17.46	24.30
3.9	0.145	0.312	0.72	1.75	3.59	6.64	12.44	17.98	25.05
4.0	**0.15**	**0.32**	**0.74**	**1.8**	**3.7**	**6.8**	**12.8**	**18.5**	**25.8**
4.1	0.154	0.329	0.76	1.84	3.77	7.00	13.14	19.04	26.82
4.2	0.159	0.338	0.78	1.89	3.83	7.20	13.49	19.59	27.84
4.3	0.163	0.347	0.79	1.93	3.90	7.40	13.83	20.13	28.87
4.4	0.168	0.356	0.81	1.98	3.97	7.60	14.18	20.68	29.89
4.5	0.172	0.364	0.83	2.02	4.03	7.80	14.52	21.22	30.91
4.6	0.177	0.373	0.85	2.07	4.10	8.00	14.87	21.77	31.93
4.7	0.181	0.382	0.86	2.11	4.17	8.20	15.21	22.31	32.96
4.8	0.186	0.391	0.88	2.16	4.23	8.40	15.56	22.86	33.98
4.85 (Kvs)	**0.19**	**0.40**	**0.90**	**2.2**	**4.3**	**8.6**	**15.9**	**23.4**	**35.0**

Subject to changes • All rights reserved

Flow Charts

DN 15 ULF

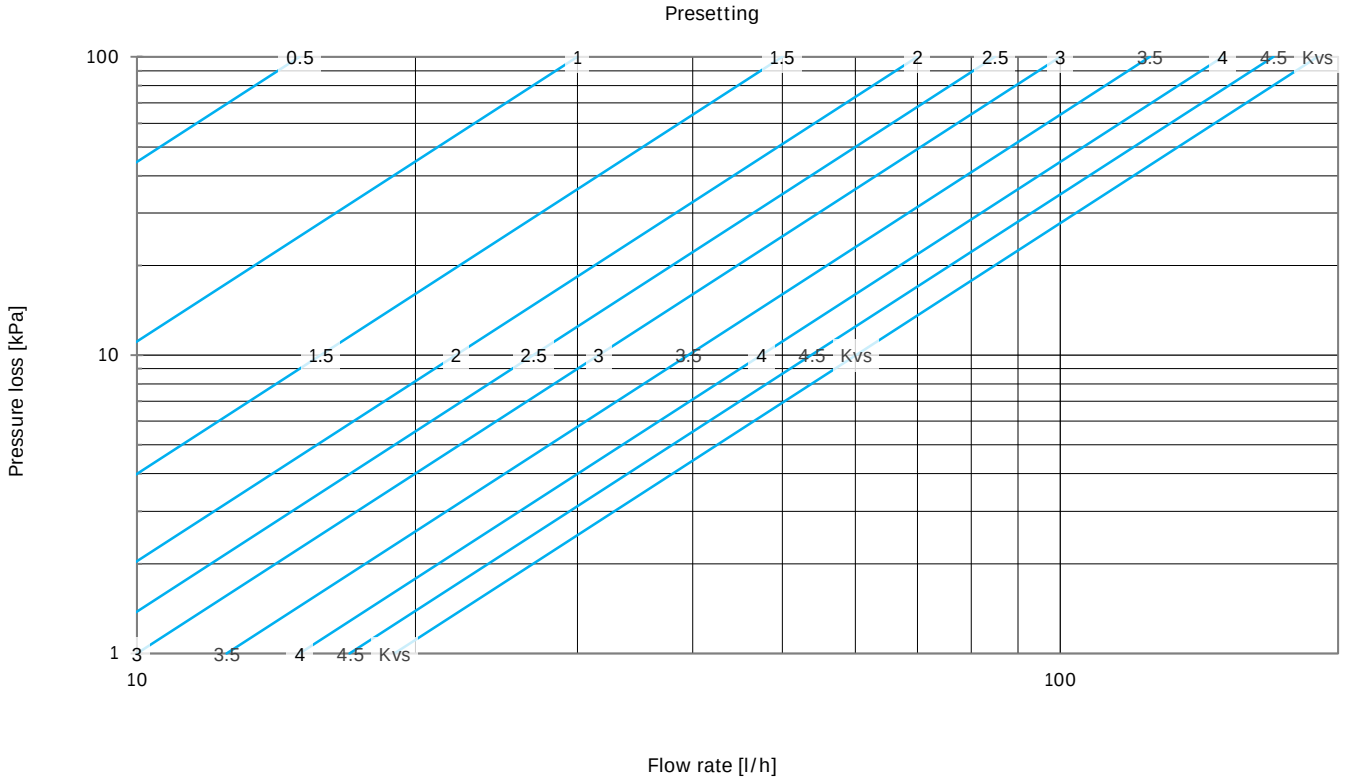

DN 15 LF

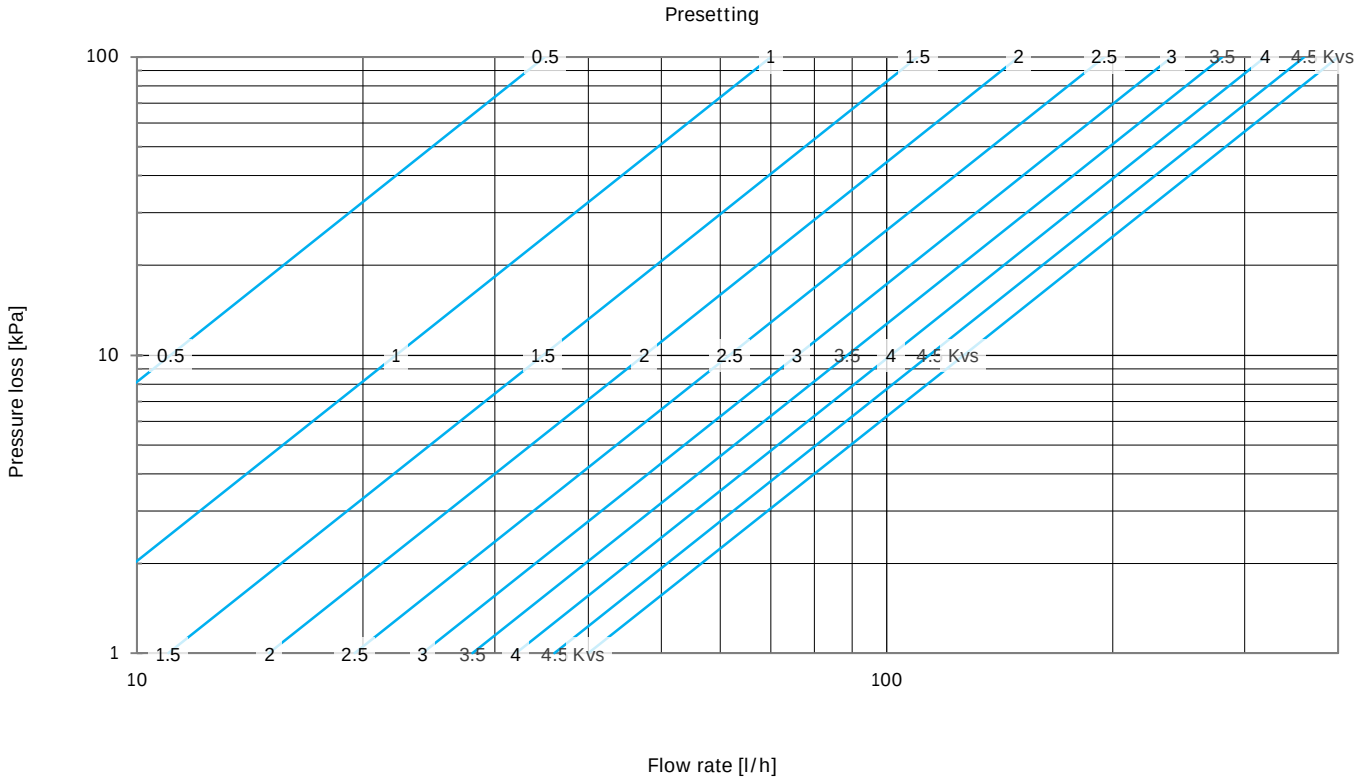

DN 15 MF

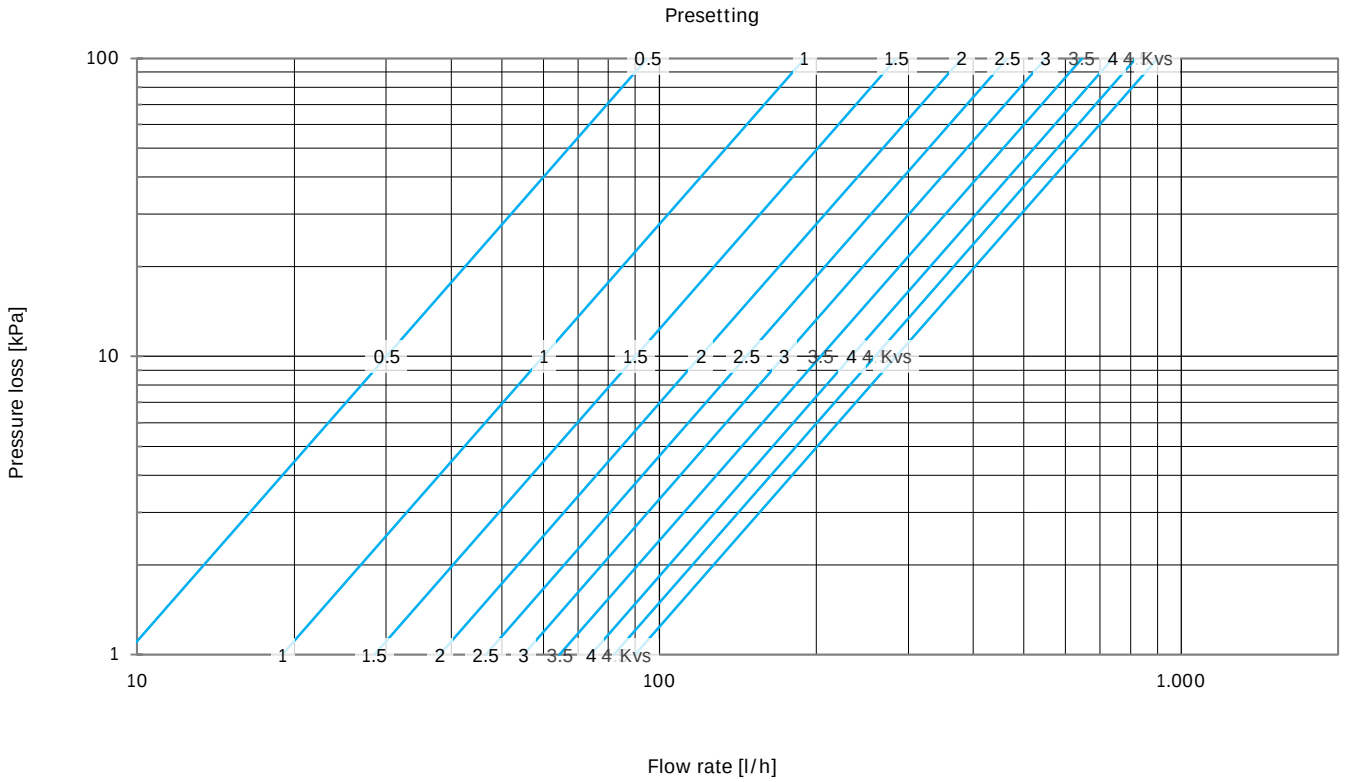
Presetting
Pressure loss [kPa]
100
10
1
0.5
1
1.5
2
2.5
3
3.5
4
4 Kvs
10
100
1.000
Flow rate [l/h]

DN 15

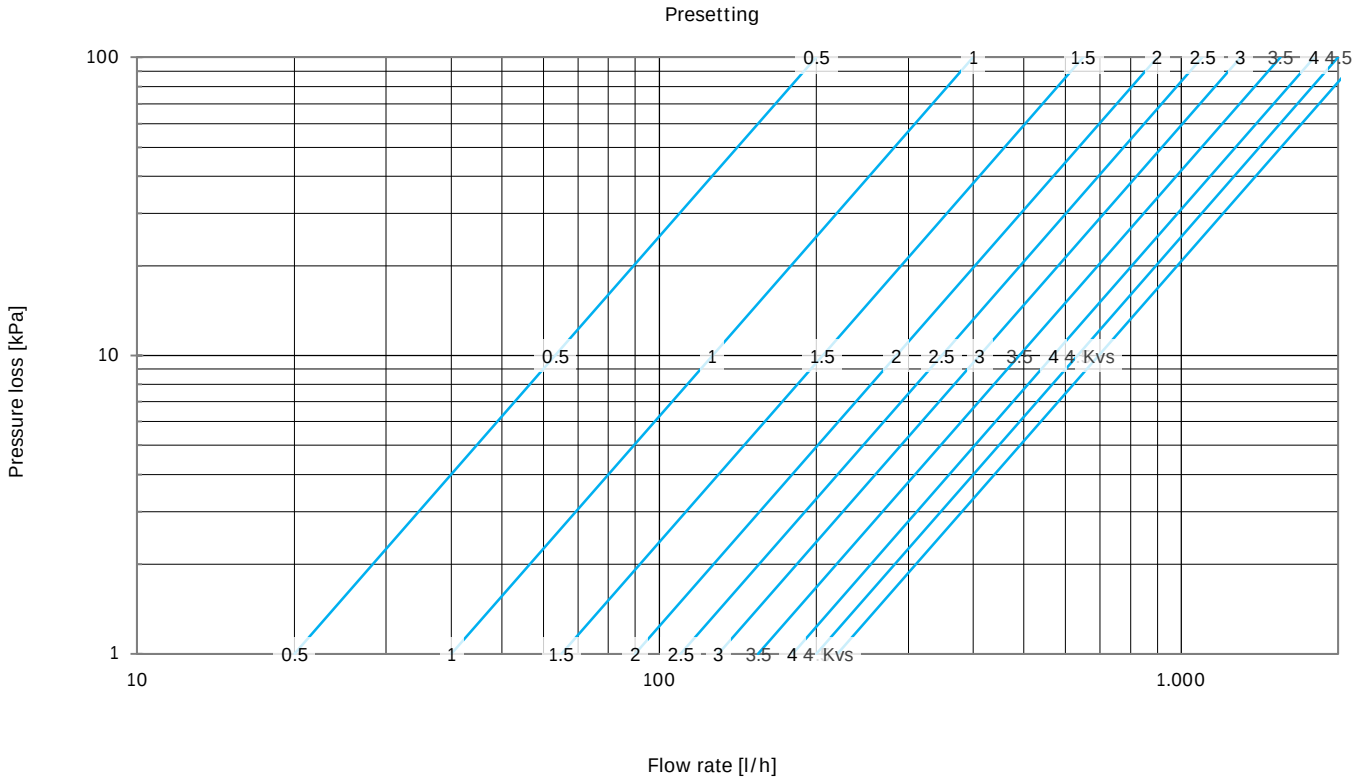
Presetting
Pressure loss [kPa]
100
10
1
0.5
1
1.5
2
2.5
3
3.5
4
4.5
Kvs
10
100
1.000
Flow rate [l/h]

DN 20

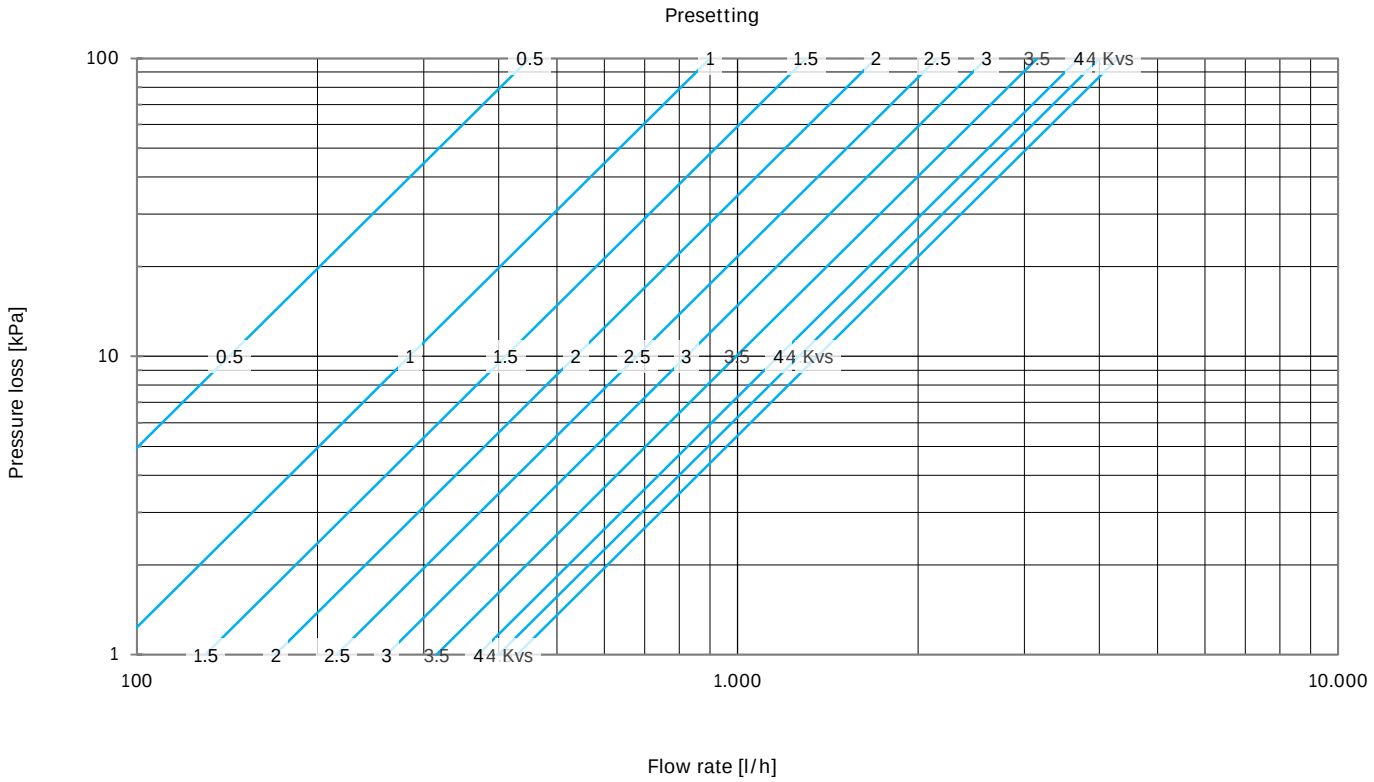
Presetting
Pressure loss [kPa]
100
10
1
0.5
1
1.5
2
2.5
3
3.5
4 Kvs
100
1.000
10.000
Flow rate [l/h]

DN 25

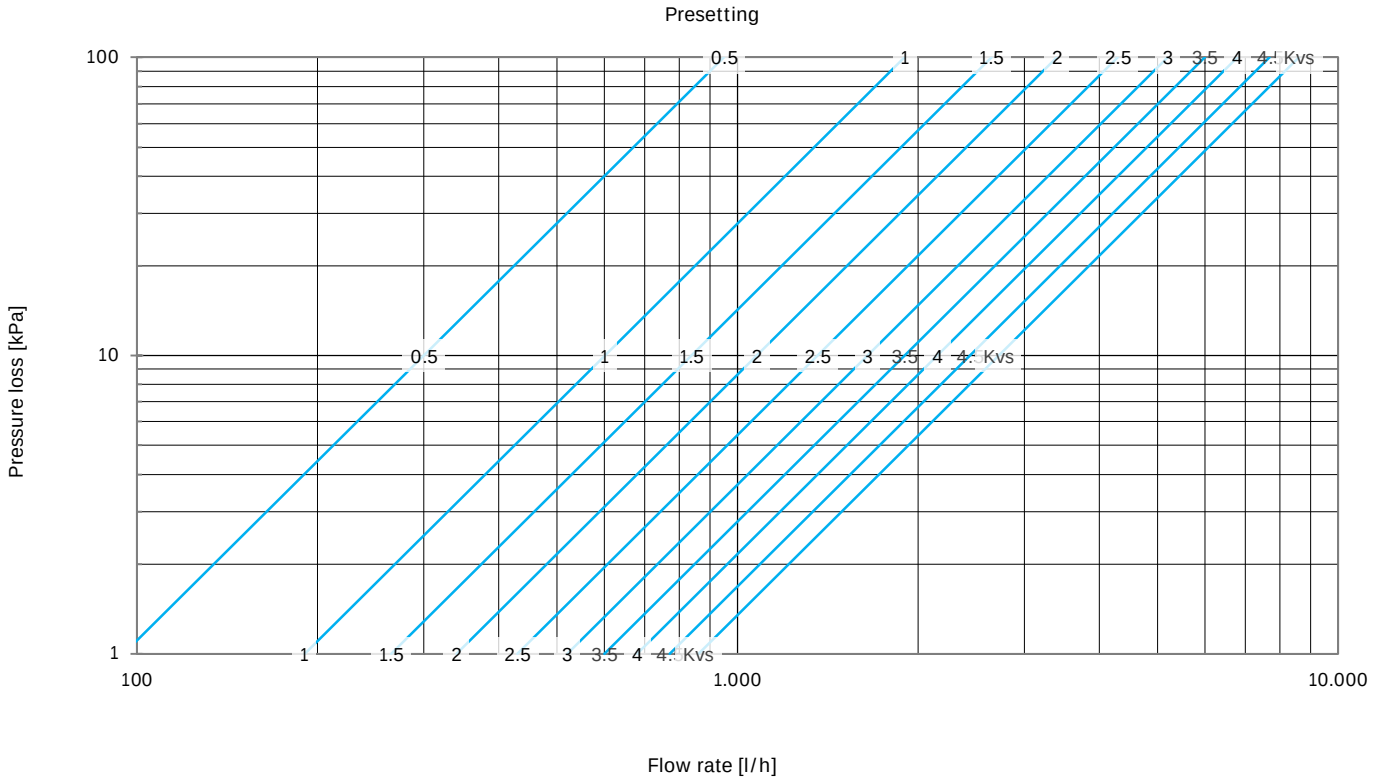
Presetting
Pressure loss [kPa]
100
10
1
0.5
1
1.5
2
2.5
3
3.5
4
4.5 Kvs
100
1.000
10.000
Flow rate [l/h]

DN 32

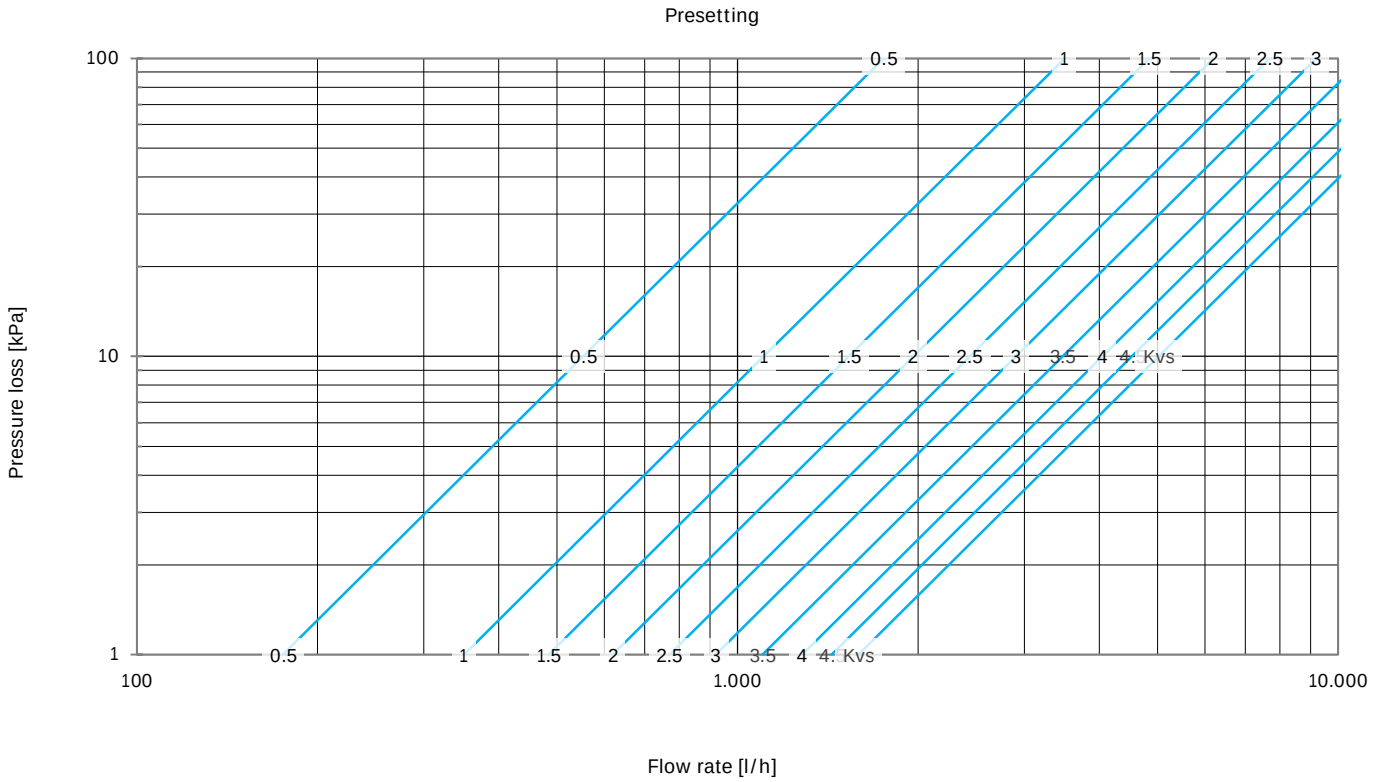
Presetting
100
10
1
Pressure loss [kPa]
0.5
1
1.5
2
2.5
3
3.5
4
4.5 Kvs
100
1.000
10.000
Flow rate [l/h]

DN 40

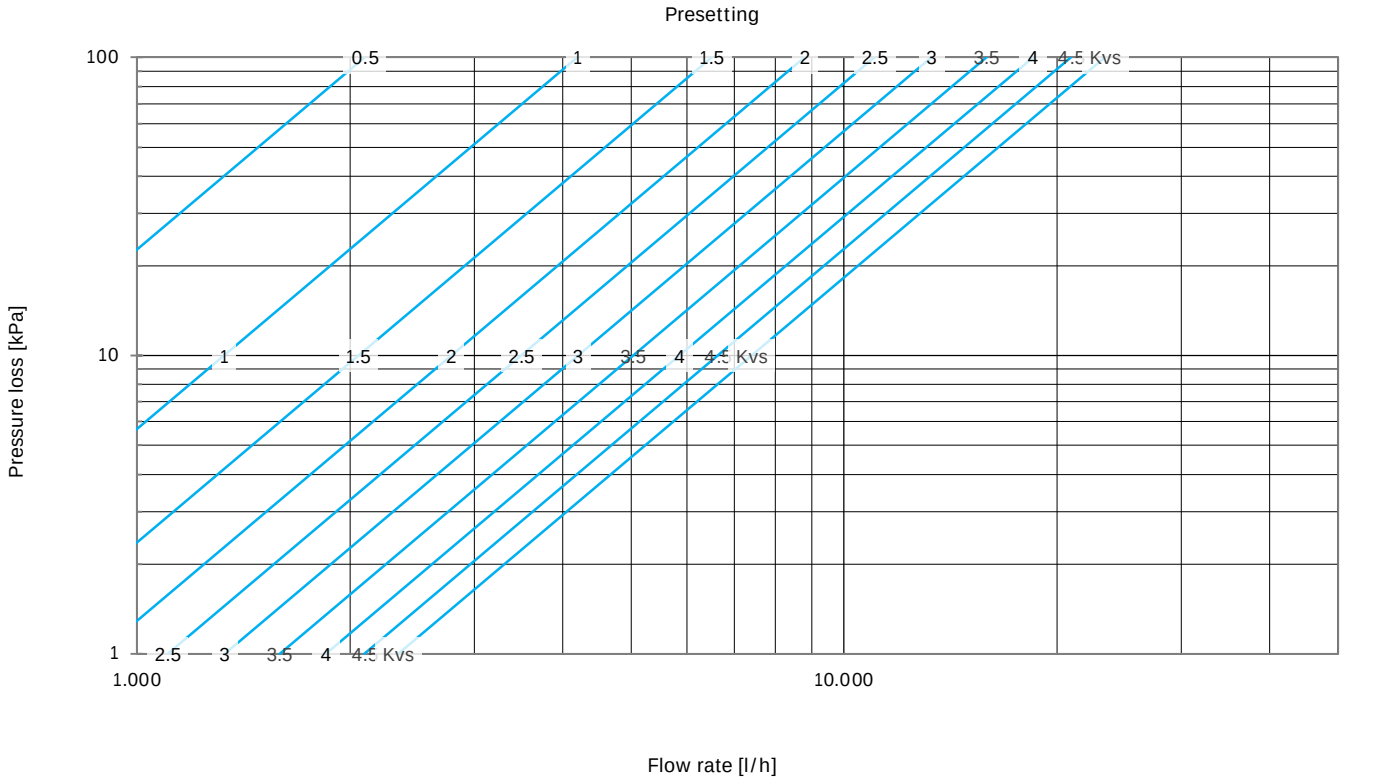
Presetting
100
10
1
Pressure loss [kPa]
0.5
1
1.5
2
2.5
3
3.5
4
4.5 Kvs
1.000
10.000
Flow rate [l/h]

DN 50

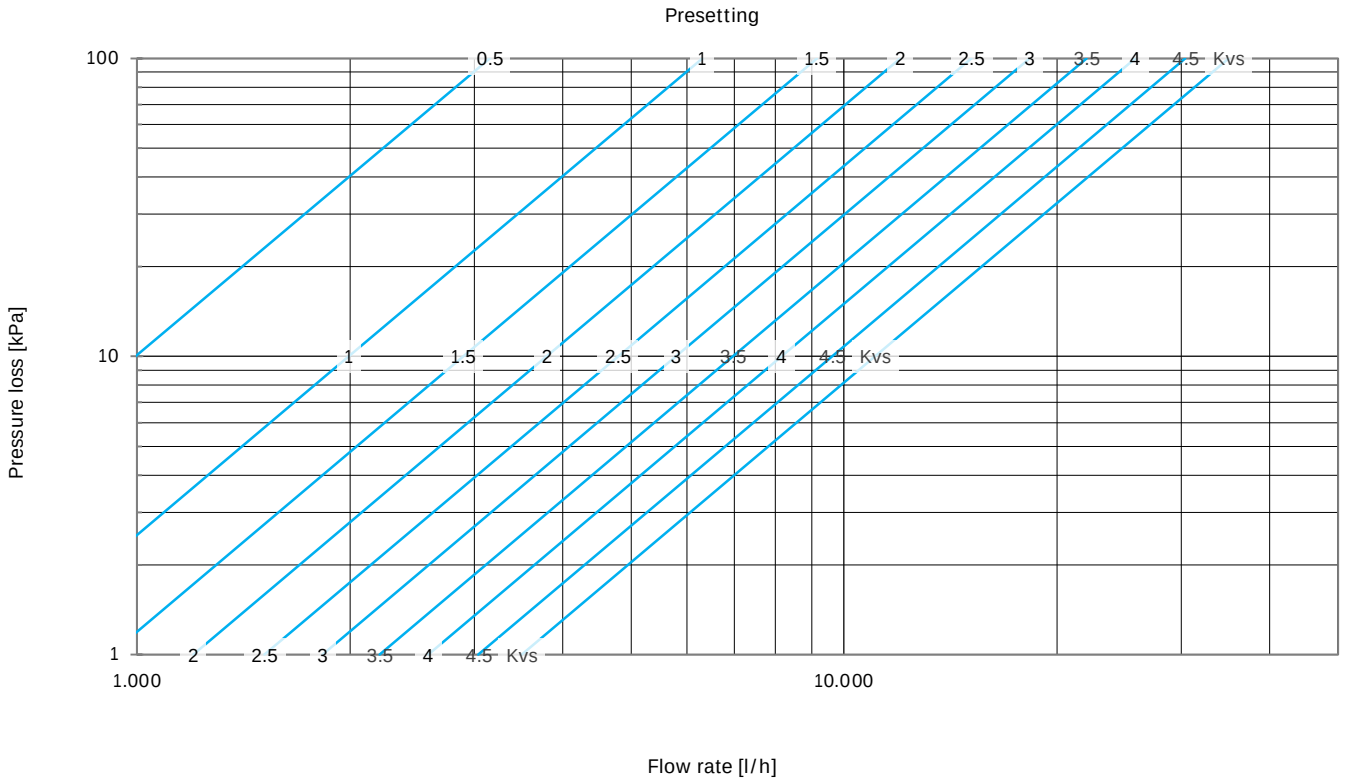
Presetting
100
10
1
0.5
1
1.5
2
2.5
3
3.5
4
4.5
Kvs
Pressure loss [kPa]
1.000
10.000
Flow rate [l/h]

Kv Value Calculation

The flow coefficient Kv is the volume of water in m³ that flows through an opening within one hour with a pressure loss of 1 bar. For control and regulating valves, this opening is typically the gap between the valve seat and the valve plug. The required Kv value can be easily calculated with the Kv formula:

$$Kv = Q \times \sqrt{\frac{1\ bar}{\Delta P} \times \frac{\rho}{1000 \frac{kg}{m^3}}}$$

- Q is the volume flow in m³/h
- ΔP is the pressure loss in bar
- ρ is the density in kg/m³ — water with a temperature of 4 °C has a density of 1.000 kg/m³. At 50 °C, water has a density of 988 kg/m³, at 70 °C of 978 kg/m³ and at 100 °C of 958 kg/m³

For use with Excel or other spreadsheets, the formula is:

=Q*ROOT((1/DP)*(p/1000))

The objects in semibold cyan are to be replaced by values or cell references. Brackets have been replaced for better comprehension.

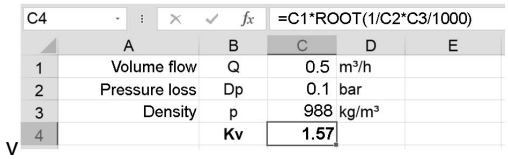

For an accurate Kv value calculation, you need the water temperature so that you can look up the density and enter the value into the formula. If a less precise calculation is sufficient, the formula can be simplified by shortening the second fraction by setting the density to 1,000 kg/m³ – which only applies to a water temperature of 4 °C gilt, as mentioned above. The error in a Kv value calculated in this way is approx. 1% for water with a temperature of e.g. 70 °C (density 978 kg/m³).

To be calculated	Formula	Spreadsheet formula
Kv value (simplified)	$Kv = Q \times \sqrt{\frac{1\ bar}{\Delta P}}$	=Q*ROOT(1/DP)

Correction factors

Additives change the viscosity of water and thus its flow properties. Manufacturers of additives often provide calculation aids that consider the changed properties of the medium when using their products.

The flow data in this Product Data sheet are based on the properties of water without additives. A quick, but only approximate calculation of the changed flow values when using glycol mixtures is made with the correction factor f, which can be used to recalculate the Kv value or the required pressure loss:

To be calculated	Formula	Spreadsheet formula
Kv value (corrected)	$Kv_{(corr)} = Kv \times \frac{1}{\sqrt{f}}$	Kv*(1/(ROOT(f)))
Pressure loss (corrected)	$\Delta P_{(corr)} = \Delta P \times f$	DP*f

The correction factor can be read in the following two charts at the intersection of the values for media temperature and glycol content.

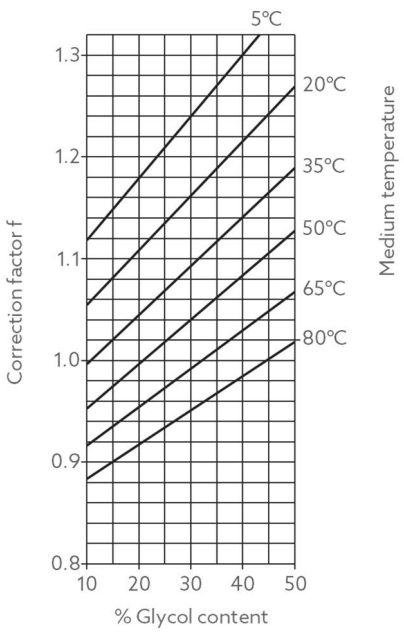

Correction factor f for ethylene glycol

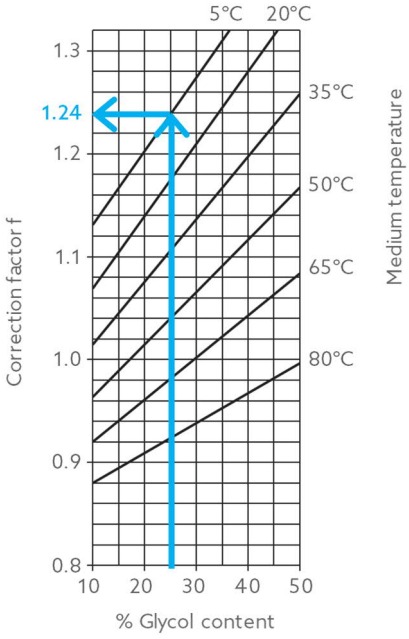

Correction factor f for propylene glycol

Example:

A glycol content of 25 % and a medium temperature of 5°C result in a factor of 1.24 with the following impacts:

- If the original Kv value was 10, it is now reduced to just short of 9
- If the original flow rate was 10 m³/h, it is now reduced to just short of 9 m³/h (at the same differential pressure)
- If the original differential pressure was 10 kPa, it must now be increased to 12.4 kPa to ensure the same flow rate

HydroSet

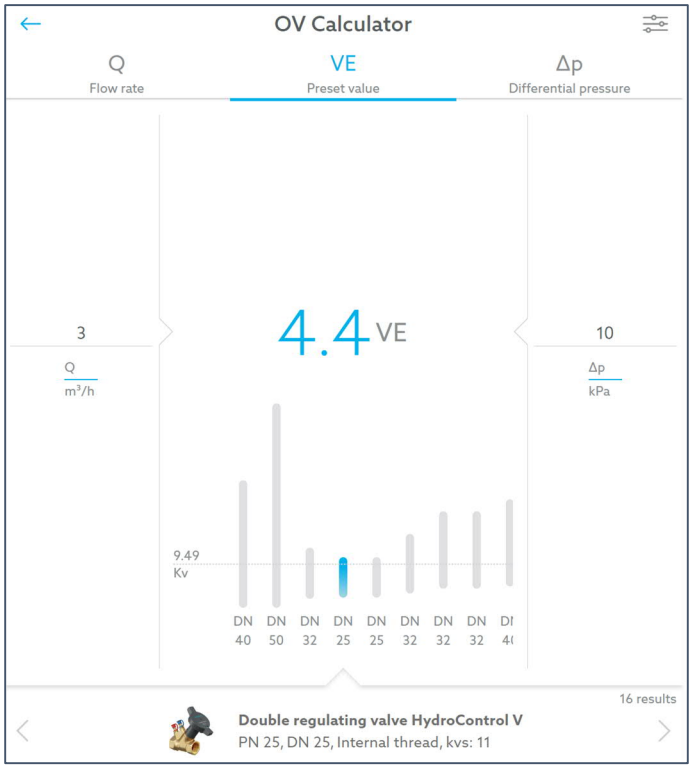

HydroSet is the digital data slider for Oventrop regulating valves. HydroSet can be used to determine the Kv value after entering the volume flow and differential pressure. When a valve is selected, the corresponding presetting is displayed.

HydroSet is suitable for all common operating systems and is available free of charge at the following link:

hydroset.oventrop.com

Subject to changes • All rights reserved • © 2022 Oventrop GmbH & Co. KG
EN-03123-10658-DB-V2328 – July 2023

Oventrop GmbH & Co. KG • Paul-Oventrop-Straße 1 • 59939 Olsberg • Germany
T +49 2962 820 • mail@oventrop.com • www.oventrop.com