



Inhalt

1 Overview	3	4 Status menu	72
2 Installation.....	4	5 Initial commissioning	73
2.1 Mounting.....	4	6 Functions and options.....	75
2.2 Electrical connection.....	4	6.1 Status level.....	75
2.3 Data communication / Bus	6	6.2 Adjustment channels.....	78
2.4 SD card slot	6	6.3 Overview of options and their parameters....	94
2.5 Overview of the systems	7	7 User code and short menu -	
2.6 System layouts	9	Adjustment values.....	96
3 Operation and function	69	8 Messages.....	97
3.1 Buttons.....	69	9 Troubleshooting.....	98
3.2 Selecting menu points and adjusting values ...	69	9.1 Miscellaneous.....	99
3.3 Menu structure.....	69	10 Index	101
3.4 Indications and system monitoring display	70		
3.5 Further indications	71		

Safety advice

Please pay attention to:

- safety advice in order to avoid danger and damage to people and property.
- the valid local standards, regulations and directives!

Description of symbols

WARNING!	Warnings are indicated with a warning triangle!
	They contain information on how to avoid the danger described.

Signal words describe the danger that may occur, when it is not avoided.

WARNING means that injury, possibly life-threatening injury, can occur.

ATTENTION means that damage to the appliance can occur.



Note

Notes are indicated with an information symbol.

➔ Arrows indicate instruction steps that should be carried out.

Disposal

Dispose of the packaging in an environmentally sound manner.

Dispose of old appliances in an environmentally sound manner. Upon request we will take back your old appliances bought from us and guarantee an environmentally sound disposal of the devices.

Subject to technical change. Errors excepted.

Target group

These instructions are exclusively addressed to authorised skilled personnel.

Only qualified electricians should carry out electrical works.

Initial installation must be effected by qualified personnel named by the manufacturer.

Information about the product

Proper usage

The solar controller is designed for use in standard solar thermal systems and heating systems in compliance with the technical data specified in this manual.

Improper use excludes all liability claims.

CE-Declaration of conformity

The product complies with the relevant directives and is therefore labelled with the CE mark. The Declaration of Conformity is available upon request, please contact the manufacturer.



Note

Strong electromagnetic fields can impair the function of the controller.

➔ Make sure the controller as well as the system are not exposed to strong electromagnetic fields.

1 Overview



- Extra large graphic display
- 4 relay outputs
- 7 sensor inputs,
2 of them for Grundfos Direct Sensors™
- 2 PWM outputs for speed control of high-efficiency pumps
- Data logging onto SD card
- Drainback option
- Time-controlled thermostat function
- S-Bus
- Energy-saving switch-mode power supply

Included:

- 1 x Regtronic RC-B
- 1 x accessory bag
- 3 x screw and wall plug
- 8 x strain relief and screw

Additionally included in the full kit:

- 1 x FKP6 sensor
- 3 x FRP6 sensor



Note:

For more information about accessories, see p. 101.



Note:

The SD card is not included with the controller

Technical data:

Housing:

plastic, PC-ABS and PMMA

Protection type: IP 20 / EN 60 529

Protection class: I

Ambient temp.: 0 ... 40 °C

Dimensions: 204 x 170 x 47 mm

Mounting: wall mounting, also suitable for mounting into patch panels

Display: System-Monitoring-Display for system visualisation, 16-segment display, 7-segment display, 8 symbols, control lamp (directional pad) and background illumination

Operation: 7 push buttons at the front of the housing

Functions: System controller for solar and heating systems. Functions such as: ΔT control, pump speed control, heat quantity measurement, operating hours counter for the solar pump, tube collector function, thermostat function, store loading in layers, priority logic, drainback option, booster function, heat dump function, thermal disinfection function, PWM pump control, function control according to BAFA guidelines.

Inputs:

5 inputs for Pt1000 temperature sensors, inputs for 1 Grundfos Direct Sensor™ VFS and 1 Grundfos Direct Sensor™ RPS, 1 Impulse input V40

Outputs:

3 semiconductor relays, 1 standard relay, 2 PWM outputs

Interfaces: S-Bus, SD card slot

Power supply:

100 ... 240V~, 50 ... 60 Hz

Switching capacity per relay:

- 1 (1) A 100 ... 240V~ (semiconductor relay)
- 2 (1) A 100 ... 240V~ (standard relay)



Total switching capacity: 4 A

Standby power consumption: < 1W

Mode of operation: type 1.Y

2 Installation

2.1 Mounting

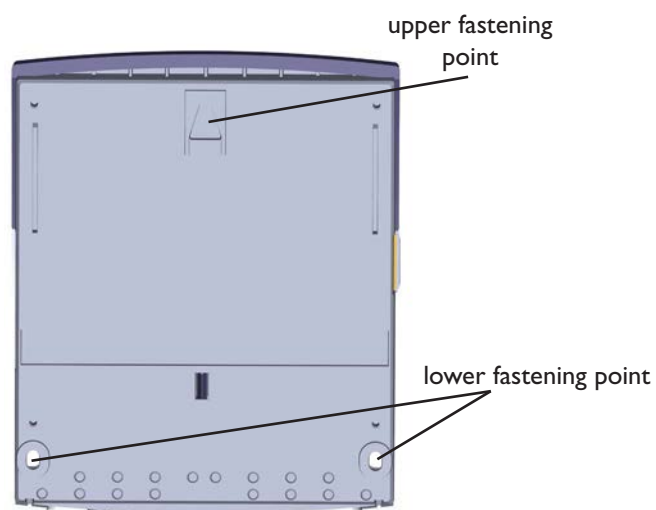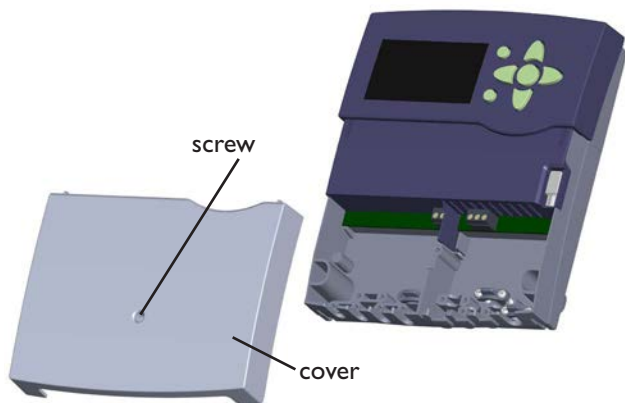

WARNING!	Electric shock!
	Upon opening the housing, live parts are exposed. → Always disconnect the controller from power supply before opening the housing!



Note

Strong electromagnetic fields can impair the function of the controller.

→ Make sure the controller as well as the system are not exposed to strong electromagnetic fields.

The unit must only be located in dry interior rooms.

The controller must additionally be supplied from a double pole switch with contact gap of at least 3 mm.

Please pay attention to separate routing of sensor cables and mains cables.

In order to mount the device to the wall, carry out the following steps:

- Unscrew the cross-head screw from the cover and remove it along with the cover from the housing
- Mark the upper fastening point on the wall. Drill and fasten the enclosed wall plug and screw leaving the head protruding
- Hang the housing from the upper fastening point and mark the lower fastening points (centres 150 mm)
- Insert lower wall plugs
- Fasten the housing to the wall with the lower fastening screws and tighten
- Carry out the electrical wiring in accordance with the terminal allocation, see chap. 2.2
- Put the cover on the housing
- Attach with the fastening screw


2.2 Electrical connection

ATTENTION!	ESD damage!
	Electrostatic discharge can lead to damage to electronic components! → Take care to discharge properly before touching the inside of the device! To do so, touch a grounded surface such as a radiator or tap!



Note:

The pump speed must be set to 100 % when auxiliary relays or valves are connected.

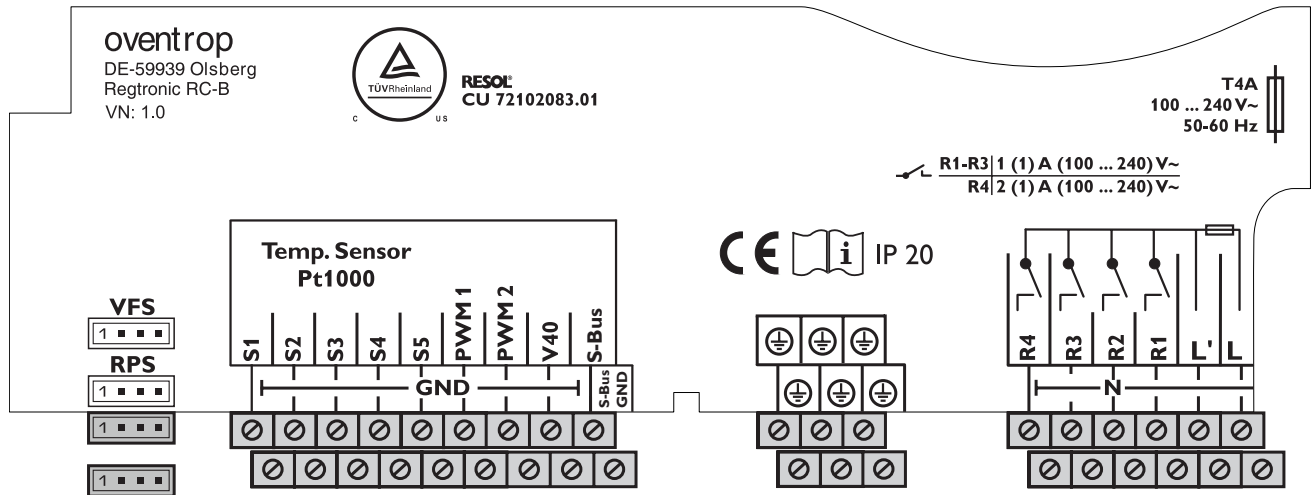

WARNING!	Electric shock!
	Upon opening the housing, live parts are exposed. → Always disconnect the controller from power supply before opening the housing!

Note:
Connecting the device to the power supply must always be the last step of the installation!

The controller is supplied with power via a mains cable. The power supply of the device must be 100 ... 240 V~ (50 ... 60 Hz).

The controller is equipped with 4 relays in total to which loads such as a pump, a valve, etc. can be connected:

- Relays R1 ... R3 are semiconductor relays, designed for pump speed control

Conductor R1... R3

Neutral conductor N

Ground terminal

- Relay 4 is a standard relay

Conductor R4

Neutral conductor N

Ground terminal

Depending on the product version, mains cable and sensor cables are already connected to the device. If that is not the case, please proceed as follows:

Connect the **temperature sensors** (S1 to S5) to the corresponding terminals with either polarity:

S1 = sensor 1 (collector sensor)

S2 = sensor 2 (e.g. store sensor base)

S3 = sensor 3 (e.g. store sensor top)

S4 = sensor 4 (e.g. store sensor store 2)

S5 = sensor 5 (e.g. collector sensor collector 2)

Connect the **Grundfos sensors** to the VFS and RPS inputs.

A **V40 flowmeter** can be connected to the terminals V40 and GND (either polarity).

The terminals marked "**PWM**" are control outputs for a high-efficiency pump (PWM1 is allocated to R1 and PWM2 is allocated to R2).

The **mains connection** is at the terminals:

Neutral conductor N

Conductor L

Conductor L' (L' is not connected with the mains cable. L' is a fused contact permanently carrying voltage)

Ground terminal

Note:
The connection depends on the system selected, see chap. 2.6. "System layouts"

WARNING!	Electric shock!
	L' is a fused contact permanently carrying voltage → Always disconnect the controller from power supply before opening the housing!

Note:
For more details about the initial commissioning procedure, see chap. 5, page 73.

2.3 Data communication / Bus

The controller is equipped with the **S-Bus** for data transfer with and energy supply to external modules. The connection is carried out at the two terminals marked “S-Bus” and GND (any polarity). One or more S-Bus modules can be connected via this data bus, such as:

- CS-BS Datalogger

Furthermore, the controller can be connected to a PC via the S-Bus/USB or S-Bus /LAN interface adapter (not included with the Regtronic RC-B).

2.4 SD card slot



The controller is equipped with an SD card slot for storing system data onto an SD card. The values can be opened and visualised, e. g. in a spreadsheet programme.




Note:

Do not use an SD-HC card!


A standard SD card is not included with the Regtronic RC-B.

For more information about using an SD card, see chap. 6.2 (page 93) “SD card”.


2.5 Overview of the systems

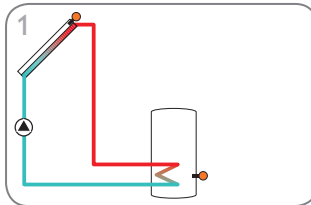


Standard solar system with 1 store (page 9)

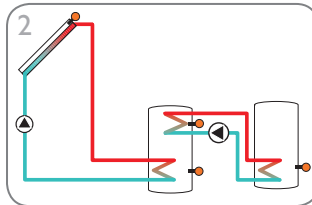


Solar system with 2 stores and heat exchange (page 11)

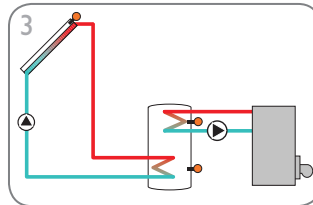


Solar system with 1 store and afterheating (page 13)

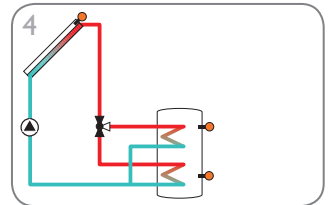


Solar system with 1 store and 3-port valve for store loading in layers (page 15)

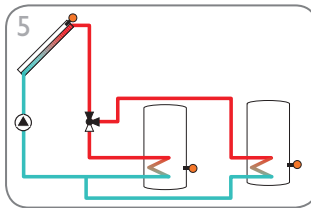


2-store system with valve logic, 1 pump, 3 sensors and 3-port valve (page 17)

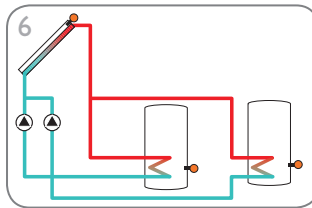


2-store solar system with pump logic (page 19)

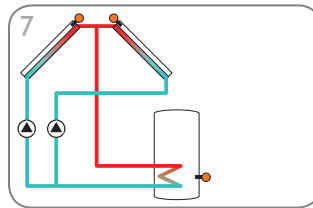


Solar system with east-/west collectors (page 21)

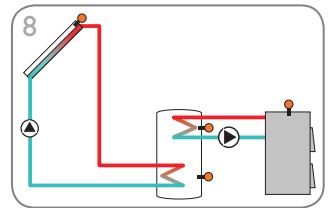


Solar system with 1 store and afterheating with solid fuel boiler (page 23)

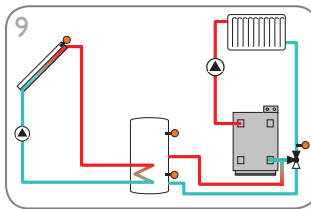


Solar system with 1 store and heating circuit return preheating (page 25)

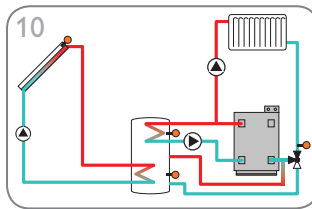


Solar system with 1 store, heating circuit return preheating and thermostatic afterheating (page 27)

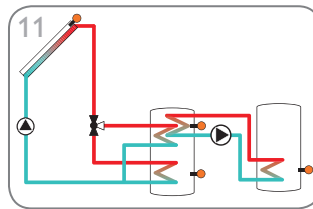


Solar system with store loading in layers and heat exchange control (page 29)

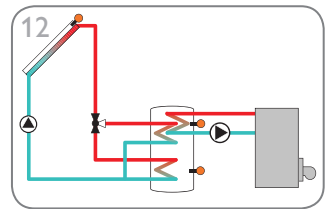


Solar system with store loading in layers and thermostatic afterheating (page 31)

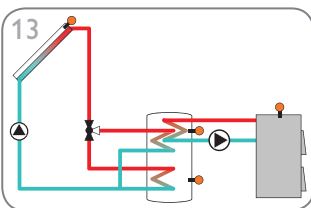


Solar system with store loading in layers and afterheating with solid fuel boiler (page 33)

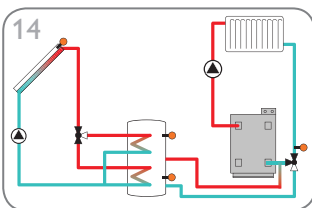


Solar system with store loading in layers and return preheating (page 35)

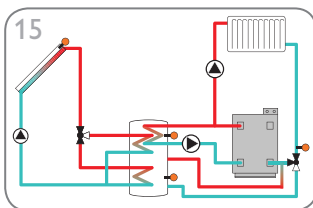


Solar system with store loading in layers and afterheating with heating backup (page 37)

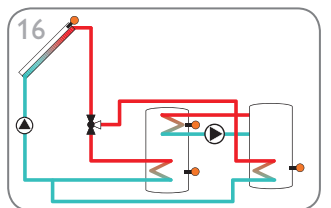


2-store solar system with valve logic and heat exchange control (page 40)

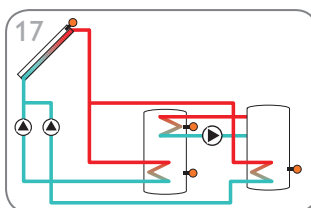


2-store solar system with pump logic and heat exchange control (page 42)

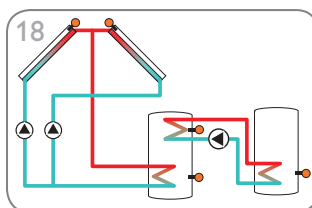


Solar system with east-/west collectors and heat exchange control (page 45)

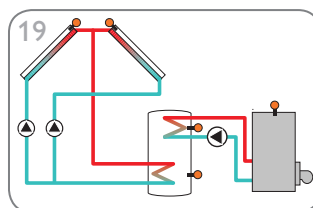


Solar system with east-/west collectors and thermostatic afterheating (page 47)

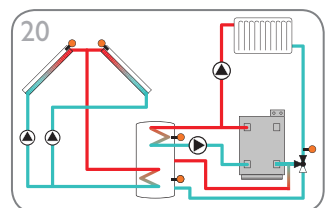


Solar system with east-/west collectors, thermostatic afterheating and return preheating (page 49)

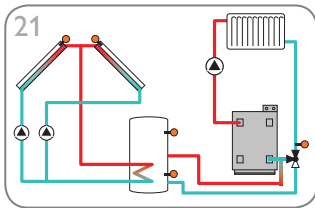


Solar system with east-/west collectors and heating circuit return preheating (page 51)

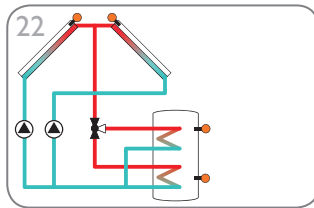


Solar system with store loading in layers and east-/west collectors (page 53)

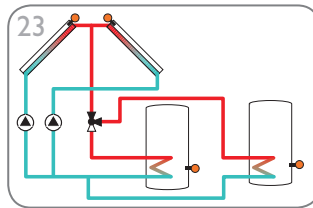


Solar system with east-/west collectors and 2 stores (valve logic) (page 56)

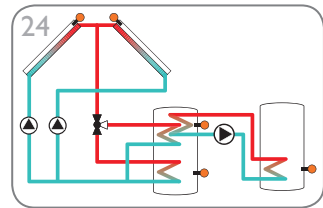

Solar system with east-/west collectors, store loading in layers and heat exchange (page 59)

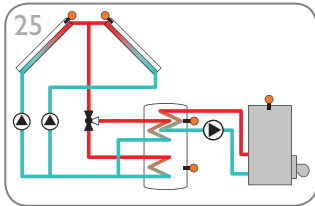

Solar system with east-/west collectors, store loading in layers and and thermostatic afterheating (page 62)

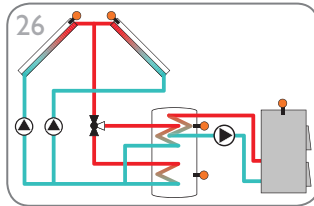

Solar system with east-/west collectors, store loading in layers and afterheating with solid fuel boiler (page 65)


2.6 System layouts

System 1

Standard solar system with 1 store

The controller calculates the temperature difference between collector sensor S1 and store sensor S2. If the difference is larger than or identical to the adjusted switch-on

temperature difference, the pump (R1) will be switched on and the store will be loaded until the switch-off temperature difference or the maximum store temperature is reached.

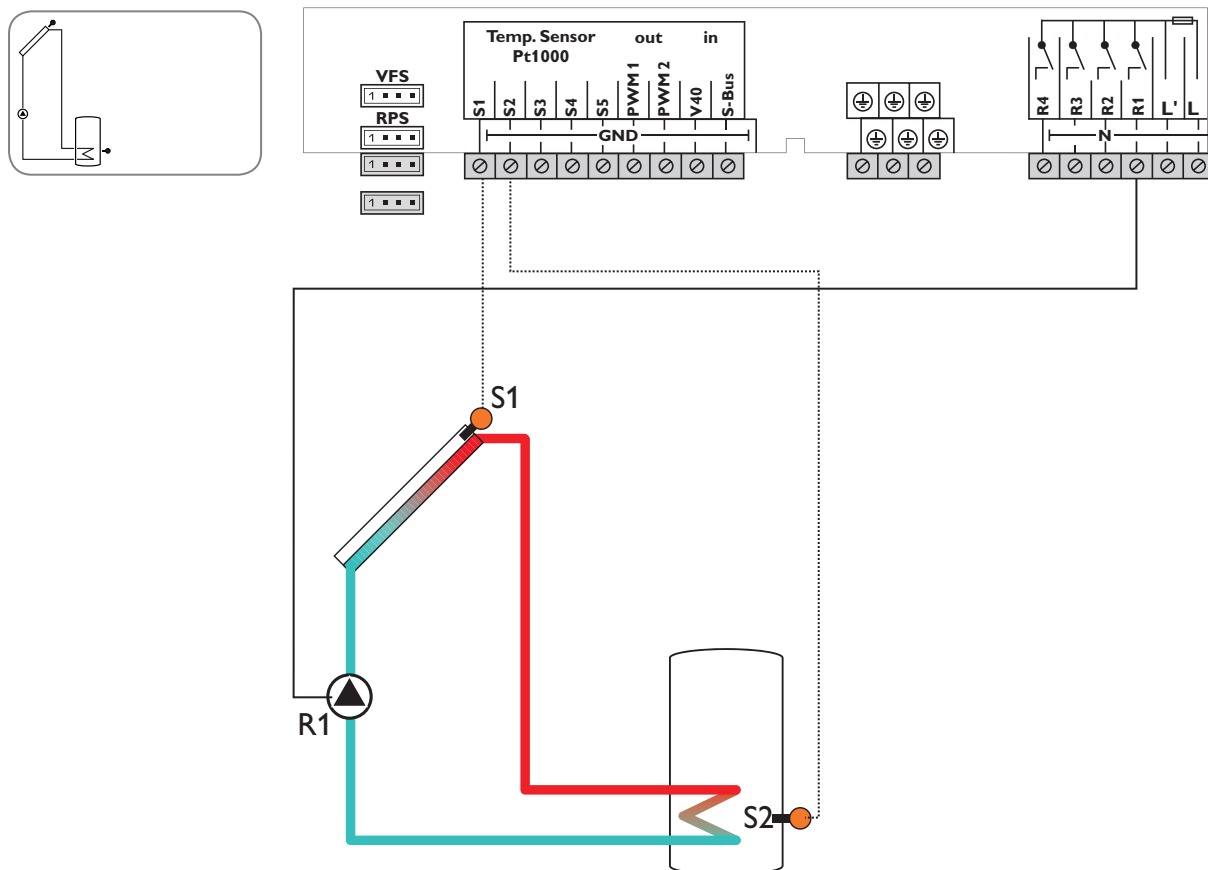

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TSTB	Temperature store base
S3		Optional sensor for measurement purposes or options
S4		
S5		
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump
R2	optional:
R3	Thermal disinfection
R4	Booster pump
	Parallel relay
	Heat dump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1		System	78
LOAD >					Loading	
	DT O		6 K		Switch-on temperature difference	78
	DT F		4 K		Switch-off temperature difference	78
	DT S		10 K		Set temperature difference	78
	RIS		2 K		Rise	78
	S MAX		60 °C		Store maximum limitation	78
	S MAXS		2		Sensor store max	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		C MAX	110 °C		Maximum collector temperature	80
	O CMI		OFF		Option collector minimum limitation	80

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
LLOGI >					Loading logic	
	ODB >		OFF		Drainback option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP***		OFF		Heat dump	85
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE >			OFF		Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.


** are blocked against each other

System 2

Solar system with 2 stores and heat exchange

The controller calculates the temperature difference between collector sensor S1 and store sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference, the pump (R1) will be switched on

and the store will be loaded until the switch-off temperature difference or the maximum store temperature is reached. Heat exchange between S3 and S4 is possible.

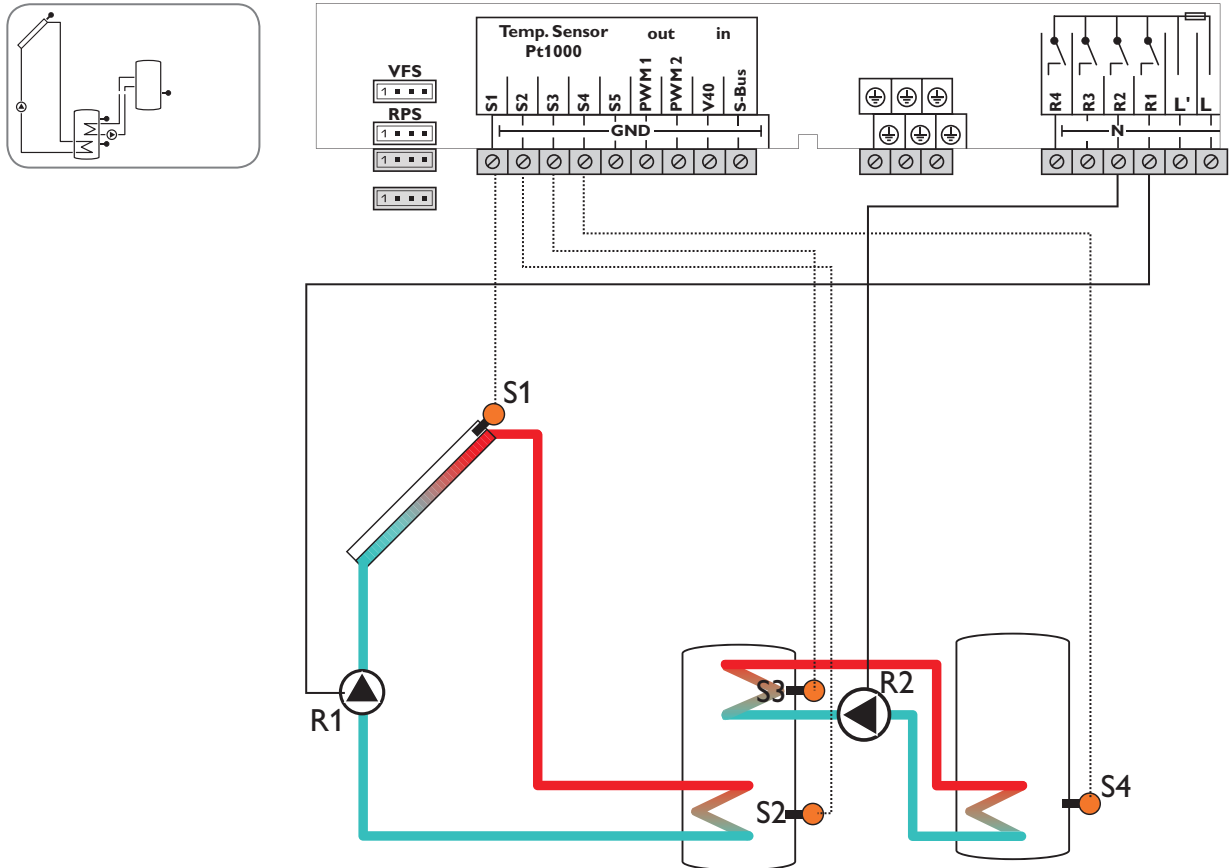

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TST1B	Temperature store 1 base
S3	TST1T	Temperature store 1 top
S4	TST2B	Temperature store 2 top
S5		Optional sensor for measurement purposes or options
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump
R2	Heat exchange pump
R3	optional:
R4	Thermal disinfection
	Booster pump
	Parallel relay
	Heat dump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	2	System	78
LOAD >					Loading	
	DT O		6 K		Switch-on temperature difference	78
	DT F		4 K		Switch-off temperature difference	78
	DT S		10 K		Set temperature difference	78
	RIS		2 K		Rise	78
	S MAX		60 °C		Store maximum limitation	79
	S MAXS		2		Sensor store max	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		C MAX	110 °C		Maximum collector temperature	80
	OCMI		OFF		Option collector minimum limitation	80

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
LLOGI >					Loading logic	
	ODB >		OFF		Drainback option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP***		OFF		Heat dump	85
DT3 >					Heat exchange	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	DT3S		10 K		Set difference	86
	RIS3		2 K		Rise	86
	MAX3O		60 °C		Switch-on temperature (maximum limitation)	86
	MAX3F		58 °C		Switch-off temperature (maximum limitation)	86
	MIN3O		5 °C		Switch-on temperature (minimum limitation)	86
	MIN3F		10 °C		Switch-off temperature (minimum limitation)	86
	S2DT3		4		Reference sensor heat sink	86
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>			OFF		Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.


** are blocked against each other

System 3

Solar system with 1 store and afterheating

The controller calculates the temperature difference between collector sensor S1 and store sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference, the pump (R1) will be switched on and the store will be loaded until the switch-off temperature difference or the maximum store temperature is reached.

Domestic hot water afterheating (R4) can be carried out with a thermostat function (S3). If the value at S3 reaches the switch-on temperature for the afterheating, the relay is energised. If the value exceeds the switch-off temperature for the afterheating, the relay is switched off again.

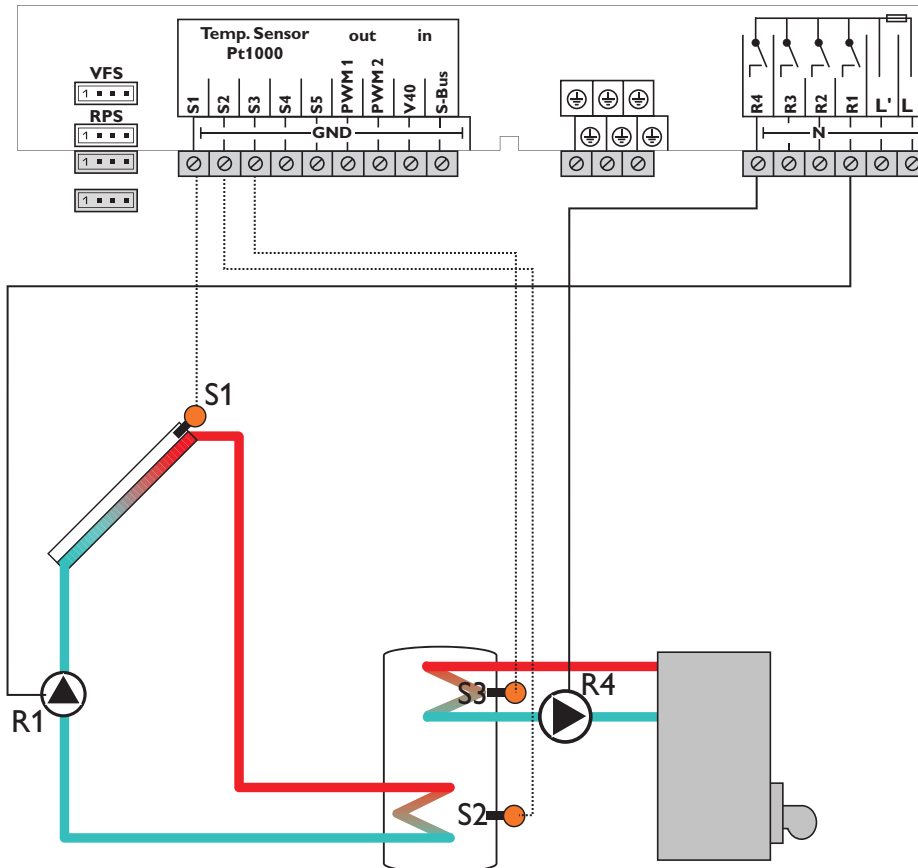

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TSTB	Temperature store base
S3	TSTT	Temperature store top
S4		Optional sensor for measurement purposes or options
S5		
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump
R2	optional:
R3	Thermal disinfection Booster pump Parallel relay Heat dump
R4	Afterheating/store loading pump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	3	System	78
LOAD >					Loading	
	DT O		6 K		Switch-on temperature difference	78
	DT F		4 K		Switch-off temperature difference	78
	DT S		10 K		Set temperature difference	78
	RIS		2 K		Rise	78
	S MAX		60 °C		Store maximum limitation	79
	S MAXS		2		Sensor store max	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80


Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	OCCO**		OFF		Option collector cooling	80
		CMAX	110 °C		Maximum collector temperature	80
	OCMI		OFF		Option collector minimum limitation	80
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
LLOGI >					Loading logic	
	ODB >		OFF		Drainback option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
AH >					Afterheating option	
	AH O		40 °C		Afterheating switch-on temperature	87
	AH F		45 °C		Afterheating switch-off temperature	87
	t1O		06:00		Switch-on time 1	88
	t1F		22:00		Switch-off time 1	88
	t2O		00:00		Switch-on time 2	88
	t2F		00:00		Switch-off time 2	88
	t3O		00:00		Switch-on time 3	88
	t3F		00:00		Switch-off time 3	88
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	
* This channel is only available if the Grundfos sensors have been registered in the GFDS channel.						
** are blocked against each other						

System 4

Solar system with 1 store and 3-port valve for store loading in layers

The controller compares the temperature at sensor S1 to the temperatures at sensors S2 and S3. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1) will be activated and

the corresponding store zone will be loaded up to the adjusted maximum temperature via the valve (R3). The priority logic effects prior loading of the upper zone of the store.

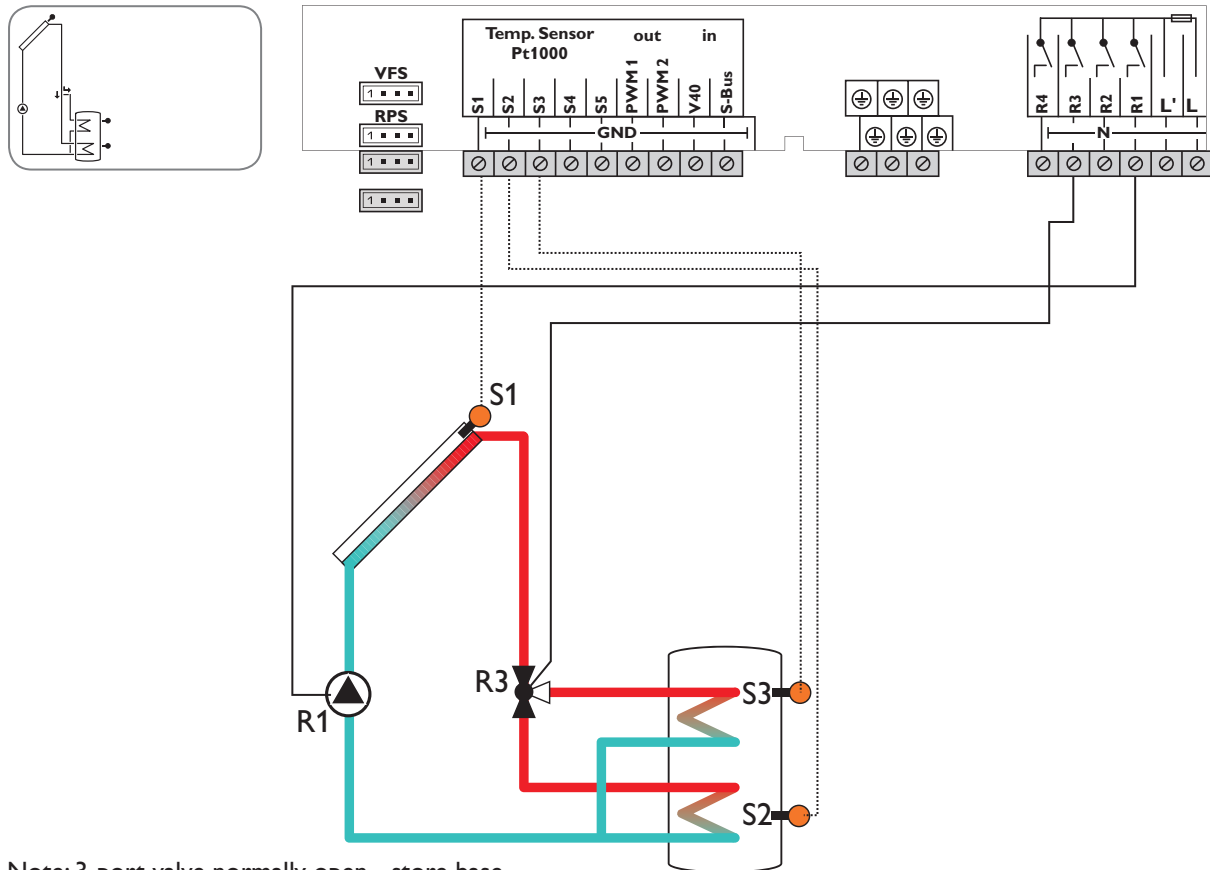

Note: 3-port valve normally open - store base

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TSTB	Temperature store base
S3	TSTT	Temperature store top
S4		Optional sensor for measurement purposes or options
S5		
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump
R2/R4	optional: Thermal disinfection Parallel relay Heat dump
R3	3-port valve store top/base

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	4	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78
	DT2F		4 K		Switch-off temperature difference 2	78
	DT2S		10 K		Set temperature difference 2	78
	RIS2		2 K		Rise 2	78

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	S2MAX		60		Store maximum limitation 2	78
	LST2		ON		Loading store 2	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		CMAX	110 °C		Maximum collector temperature	80
	OCMI		OFF		Option collector minimum limitation	80
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	2		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>			OFF		Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.


** are blocked against each other

System 5

2-store system with valve logic, 1 pump, 3 sensors and 3-port valve

The controller compares the temperature at sensor S1 to the temperatures at sensors S2 and S4. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1) will be activated and

the corresponding store will be loaded up to the adjusted maximum temperature via the valve (R3). Store 1 is loaded with priority.

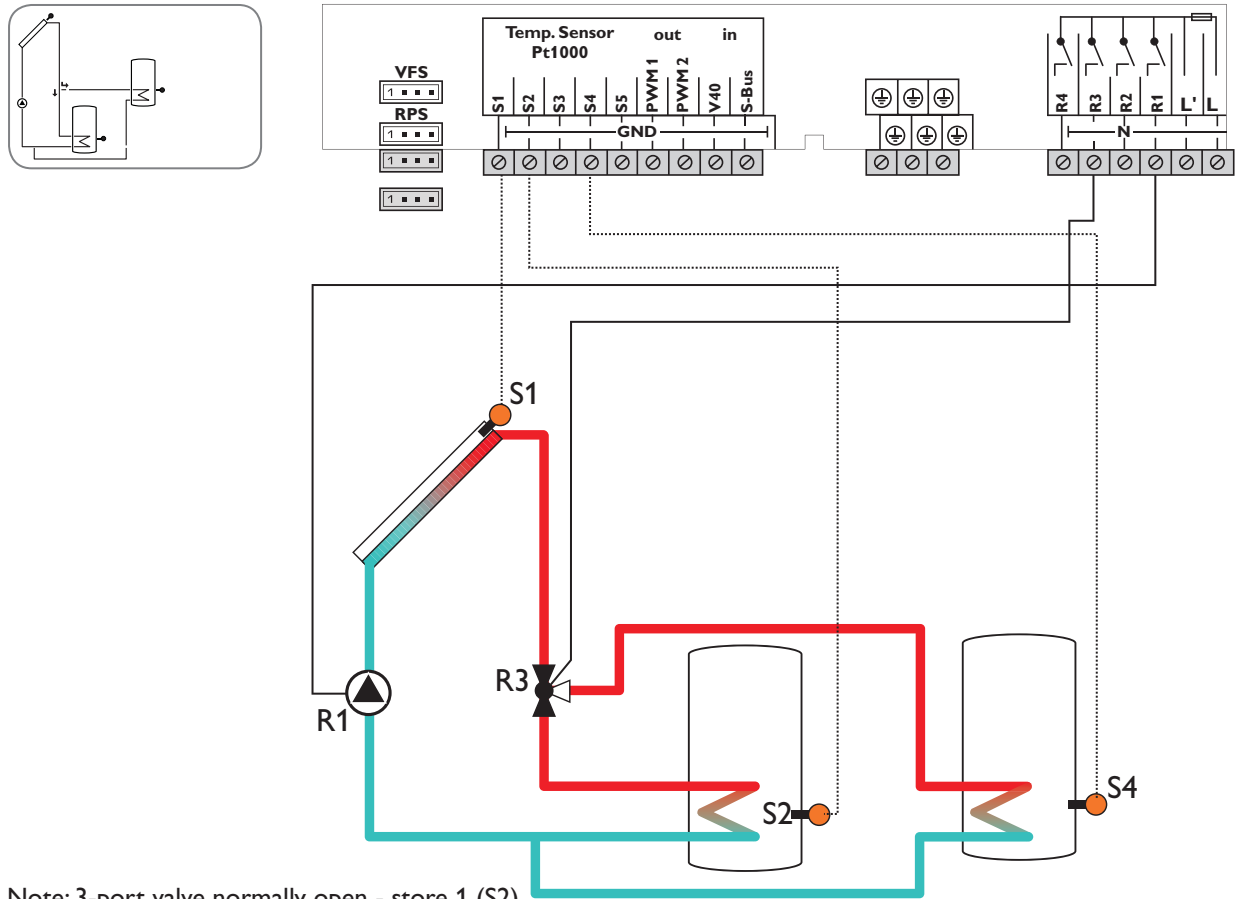

Note: 3-port valve normally open - store 1 (S2)

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TST1B	Temperature store 1 base
S3		Optional sensor for measurement purposes or options
S4	TST2B	Temperature store 2 base
S5		Optional sensor for measurement purposes or options
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump
R2/R4	optional: Thermal disinfection Parallel relay Heat dump
R3	3-port valve store 1 / 2

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	5	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	DT2F		4 K		Switch-off temperature difference 2	78
	DT2S		10 K		Set temperature difference 2	78
	RIS2		2 K		Rise 2	78
	S2MAX		60 °C		Store maximum limitation 2	78
	SMXS2		4		Sensor store max 2	79
	LST2		ON		Loading store 2	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		CMAX	110 °C		Maximum collector temperature	80
	OCMI		OFF		Option collector minimum limitation	80
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
		FRPST	1		Antifreeze store selection	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	1		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.


** are blocked against each other

System 6

2-store solar system with pump logic

The controller compares the temperature at sensor S1 to the temperatures at sensors S2 and S4. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1 and R2) will be

activated and the corresponding store will be loaded up to the adjusted maximum temperature at most.

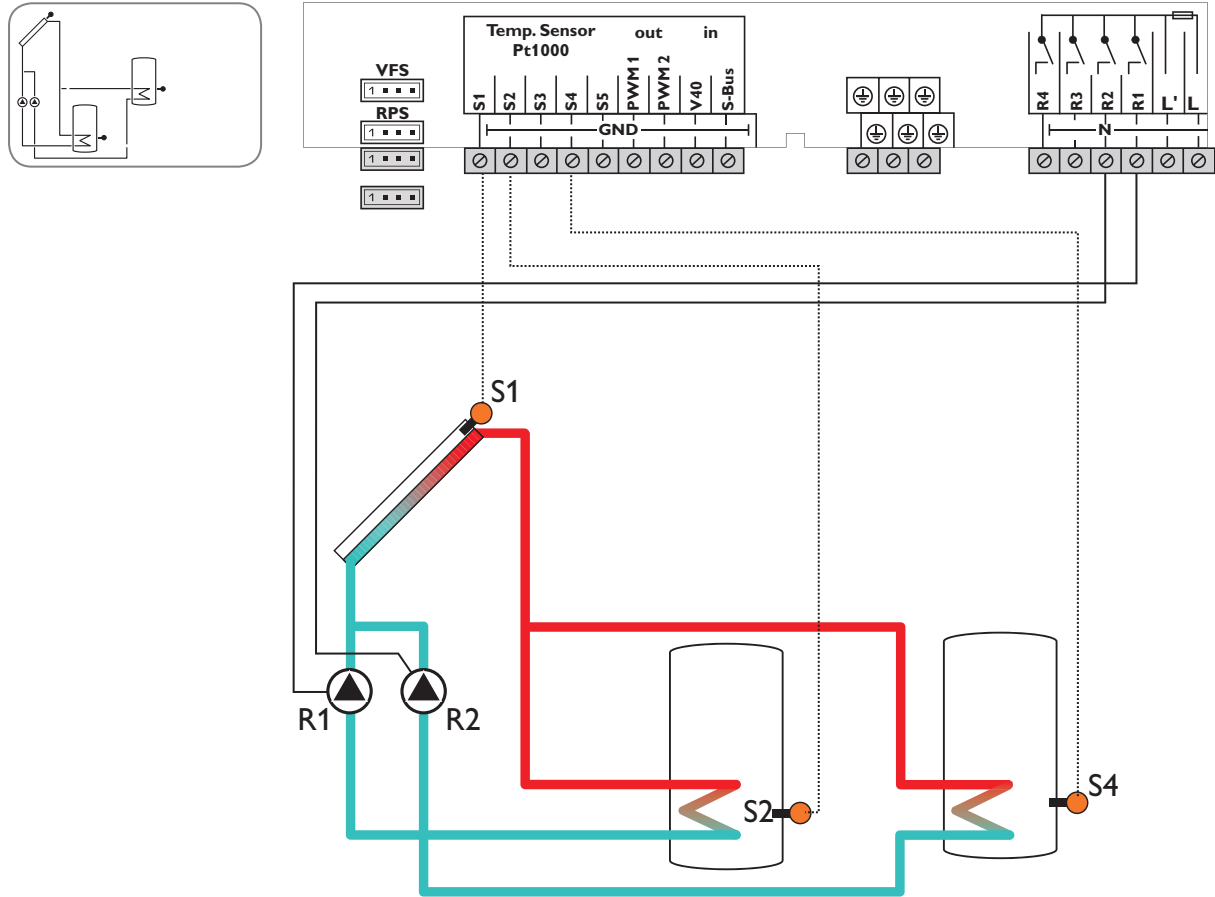

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TST1B	Temperature store 1 base
S3		Optional sensor for measurement purposes or options
S4	TST2B	Temperature store 2 base
S5		Optional sensor for measurement purposes or options
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump store 1
R2	Solar pump store 2
R3	optional:
R4	Thermal disinfection Parallel relay Heat dump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	6	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78
	DT2F		4 K		Switch-off temperature difference 2	78
	DT2S		10 K		Set temperature difference 2	78

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	RIS2		2 K		Rise 2	78
	S2MAX		60 °C		Store maximum limitation 2	78
	SMXS2		4		Sensor store max 2	79
	LST2		ON		Loading store 2	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		CMAX	110 °C		Maximum collector temperature	80
	OCMI		OFF		Option collector minimum limitation	80
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
		FRPST	1		Antifreeze store selection	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	1		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
		OSE	OFF		Spread function option	83
		DTSE	40		Spread difference	83
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			OFF		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.


** are blocked against each other

System 7

Solar system with east-/west collectors

The controller compares the temperatures at the collector sensors S1 and S5 to the store temperature at sensor S2. If one of the measured temperature differences is higher

than the adjusted switch-on temperature differences, the corresponding pump (R1, R2) will be activated and the store will be loaded.

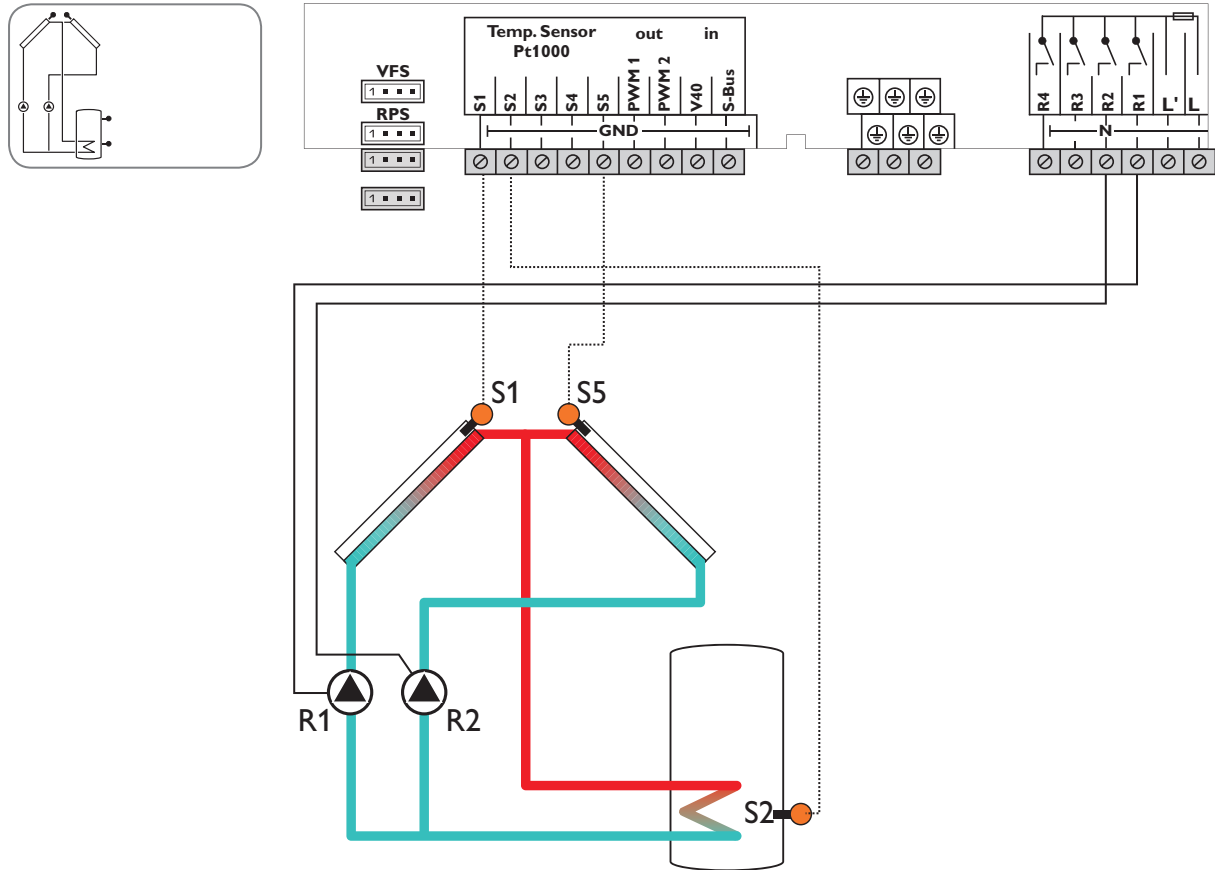

Sensor/Terminal	Designation	Description
S1	TCOL1	Temperature collector 1
S2	TSTB	Temperature store base
S3		Optional sensor for measurement purposes or options
S4		
S5	TCOL2	Temperature collector 2
VFS		Optional sensor for measurement purposes or options
RPS		
V40		

Relay	Description
R1	Solar pump collector 1
R2	Solar pump collector 2
R2/R4	optional: Thermal disinfection Parallel relay Heat dump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	7	System	78
LOAD >					Loading	
	DT O		6 K		Switch-on temperature difference	78
	DT F		4 K		Switch-off temperature difference	78
	DT1S		10 K		Set temperature difference	78
	RIS		2 K		Rise	78
	S MAX		60 °C		Store maximum limitation	78
	S MAXS		2		Sensor store max	79
COL 1 >					Collector 1	
	CEM1		130 °C		Collector emergency temperature 1	80
	OCCO1**		OFF		Option collector cooling 1	80
		C MAX1	110 °C		Maximum collector temperature 1	80
	O CMI1		OFF		Option collector minimum limitation 1	80
		C MIN1	10 °C		Minimum collector temperature 1	80

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	OTCO1		OFF		Option tube collector function 1	81
		TCST1	07:00		Tube collector starting time 1	81
		TCEN1	19:00		Tube collector ending time 1	81
		TCRU1	30 s		Tube collector runtime 1	81
		TCIN1	30 min		Tube collector standstill interval 1	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
COL 2 >					Collector 2	
	CEM2		130 °C		Collector emergency temperature 2	80
	OCCO2**		OFF		Option collector cooling 2	80
		CMAx2	110 °C		Maximum collector temperature 2	80
	OCMI2		OFF		Option collector minimum limitation 2	80
		CMIN2	10 °C		Minimum collector temperature 2	80
	OTCO2		OFF		Option tube collector function 2	81
		TCST2	07:00		Tube collector starting time 2	81
		TCEN2	19:00		Tube collector ending time 2	81
		TCRU2	30 s		Tube collector runtime 2	81
		TCIN2	30 min		Tube collector standstill interval 2	81
LLOGI >					Loading logic	
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			OFF		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.


** are blocked against each other

System 8

Solar system with 1 store and afterheating with solid fuel boiler

The controller calculates the temperature difference between collector sensor S1 and store sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference, the pump (R1) will be switched on and the store will be loaded until the switch-off temperature

difference or the maximum store temperature is reached. With another temperature differential function (S4/S3), afterheating of the store can be carried out with a solid fuel boiler (R3).

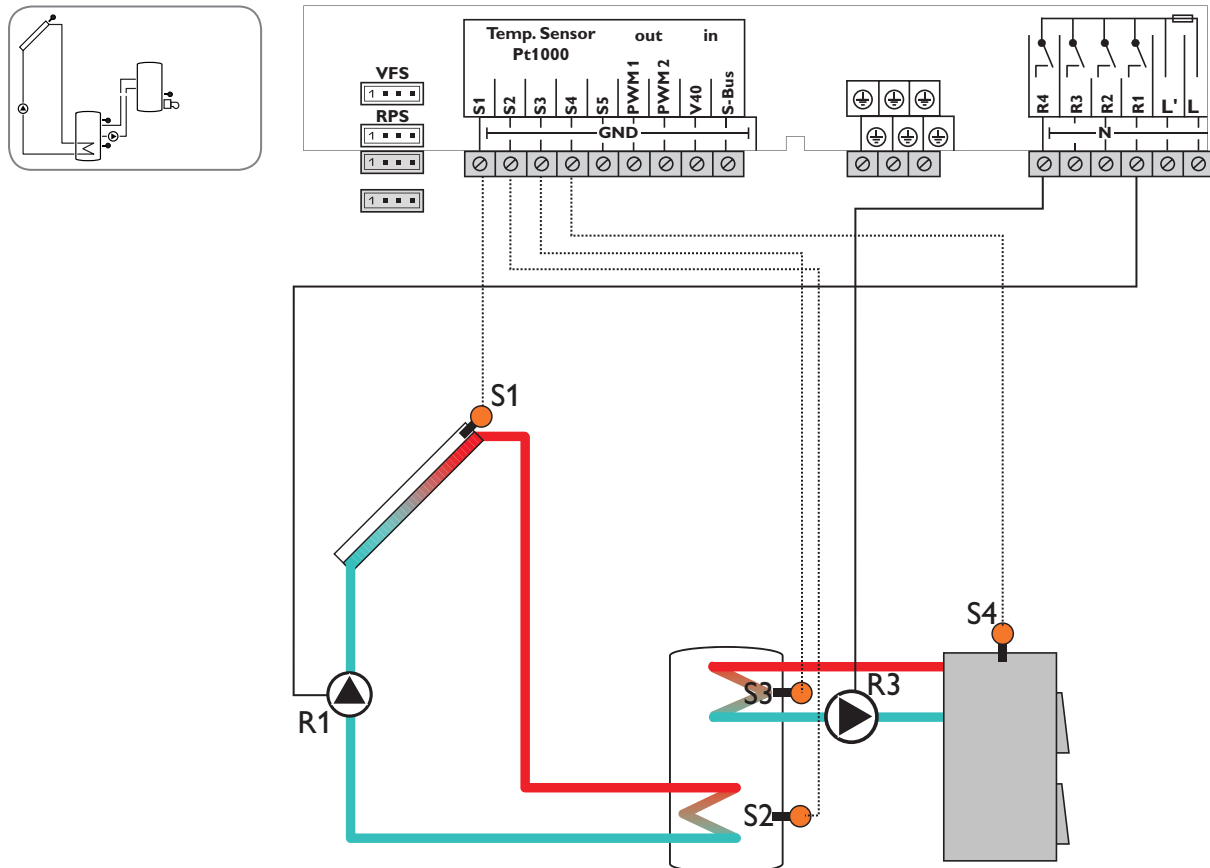

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TSTB	Temperature store base
S3	TSTT	Temperature store top
S4	TSFB	Temperature solid fuel boiler
S5		Optional sensor for measurement purposes or options
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump
R3	Loading pump solid fuel boiler
R2	optional:
R4	Thermal disinfection
	Booster pump
	Parallel relay
	Heat dump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	8	System	78
LOAD >					Loading	
	DT O		6 K		Switch-on temperature difference	78
	DT F		4 K		Switch-off temperature difference	78
	DT S		10 K		Set temperature difference	78
	RIS		2 K		Rise	78
	S MAX		60 °C		Store maximum limitation	78
	S MAXS		2		Sensor store max	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		C MAX	110 °C		Maximum collector temperature	80

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	OCMI		OFF		Option collector minimum limitation	80
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
LLOGI >					Loading logic	
	ODB >		OFF		Drainback option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
DT3 >					Solid fuel boiler	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	DT3S		10 K		Set difference	86
	RIS3		2 K		Rise	86
	MAX3O		60 °C		Switch-on temperature (maximum limitation)	86
	MAX3F		58 °C		Switch-off temperature (maximum limitation)	86
	MIN3O		60 °C		Switch-on temperature (minimum limitation)	86
	MIN3F		65 °C		Switch-off temperature (minimum limitation)	86
	S2DT3		3		Reference sensor heat sink	87
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.


** are blocked against each other

System 9

Solar system with 1 store and heating circuit return preheating

The controller calculates the temperature difference between collector sensor S1 and store sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference, the pump (R1) will be switched on and the store will be loaded until the switch-off temperature

difference or the maximum store temperature is reached. With another temperature differential function (S3/S4) heating circuit return preheating (heating circuit backup) is possible via a valve (R2).

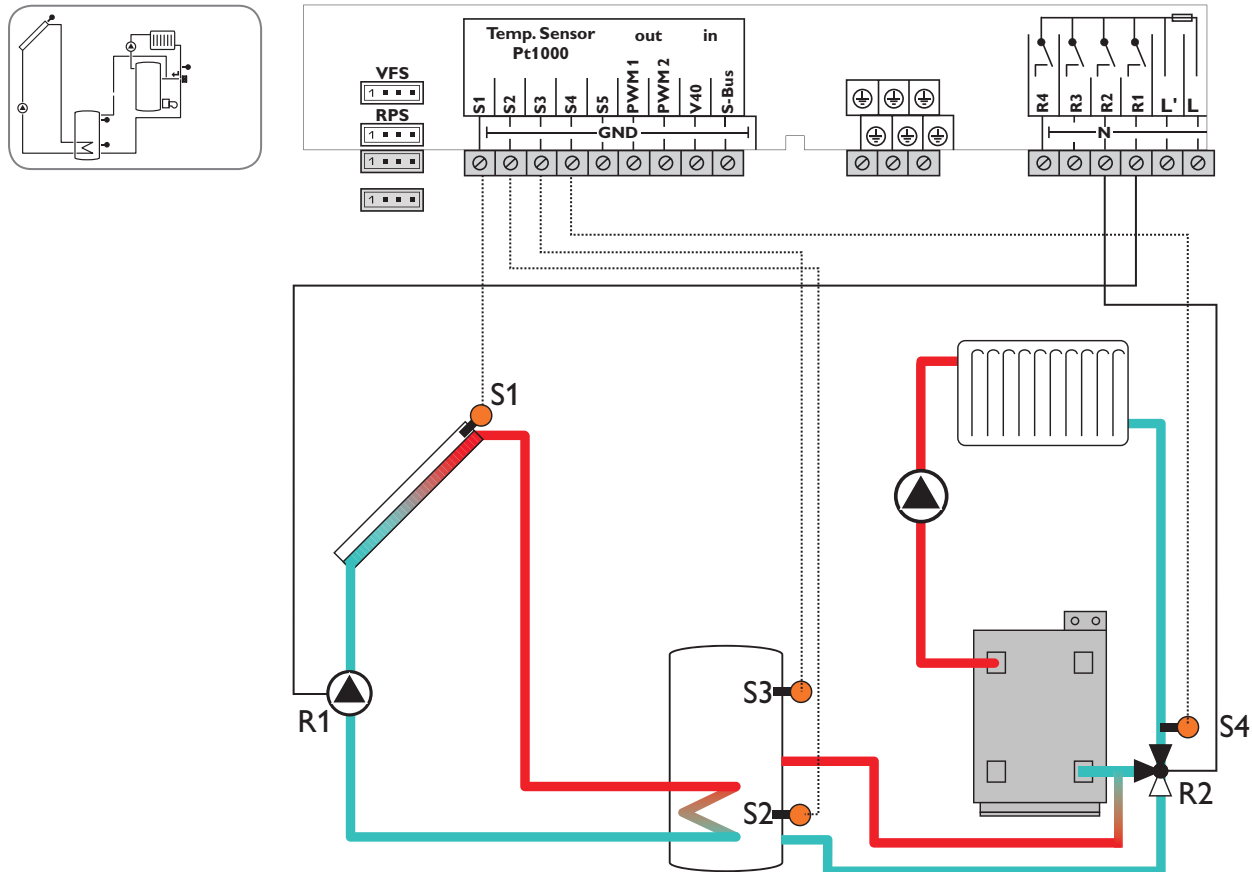

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TSTB	Temperature store base
S3	TSTR	Temp. store return preheating
S4	TRET	Temperature - return
S5		Optional sensor for measurement purposes or options
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump
R2	Return preheating
R3	optional:
R4	Thermal disinfection
	Booster pump
	Parallel relay
	Heat dump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	9	System	78
LOAD >					Loading	
	DT O		6 K		Switch-on temperature difference	78
	DT F		4 K		Switch-off temperature difference	78
	DT S		10 K		Set temperature difference	78
	RIS		2 K		Rise	78
	S MAX		60 °C		Store maximum limitation	78
	S MAXS		2		Sensor store max	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		C MAX	110 °C		Maximum collector temperature	80

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	OCMI		OFF		Option collector minimum limitation	80
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
LLOGI >					Loading logic	
	ODB >		OFF		Drainback option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
DT3 >					Solid fuel boiler	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	S2DT3		3		Reference sensor heat source	87
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>			OFF		Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.


** are blocked against each other

System 10

Solar system with 1 store, heating circuit return preheating and thermostatic afterheating

The controller calculates the temperature difference between collector sensor S1 and store sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference, the pump (R1) will be switched on and the store will be loaded until the switch-off temperature

difference or the maximum store temperature is reached. With another temperature differential function (S3/S4) heating circuit backup (heating circuit return preheating) is possible via a valve (R2). With a thermostat function (S3) domestic hot water afterheating (R4) can be carried out.

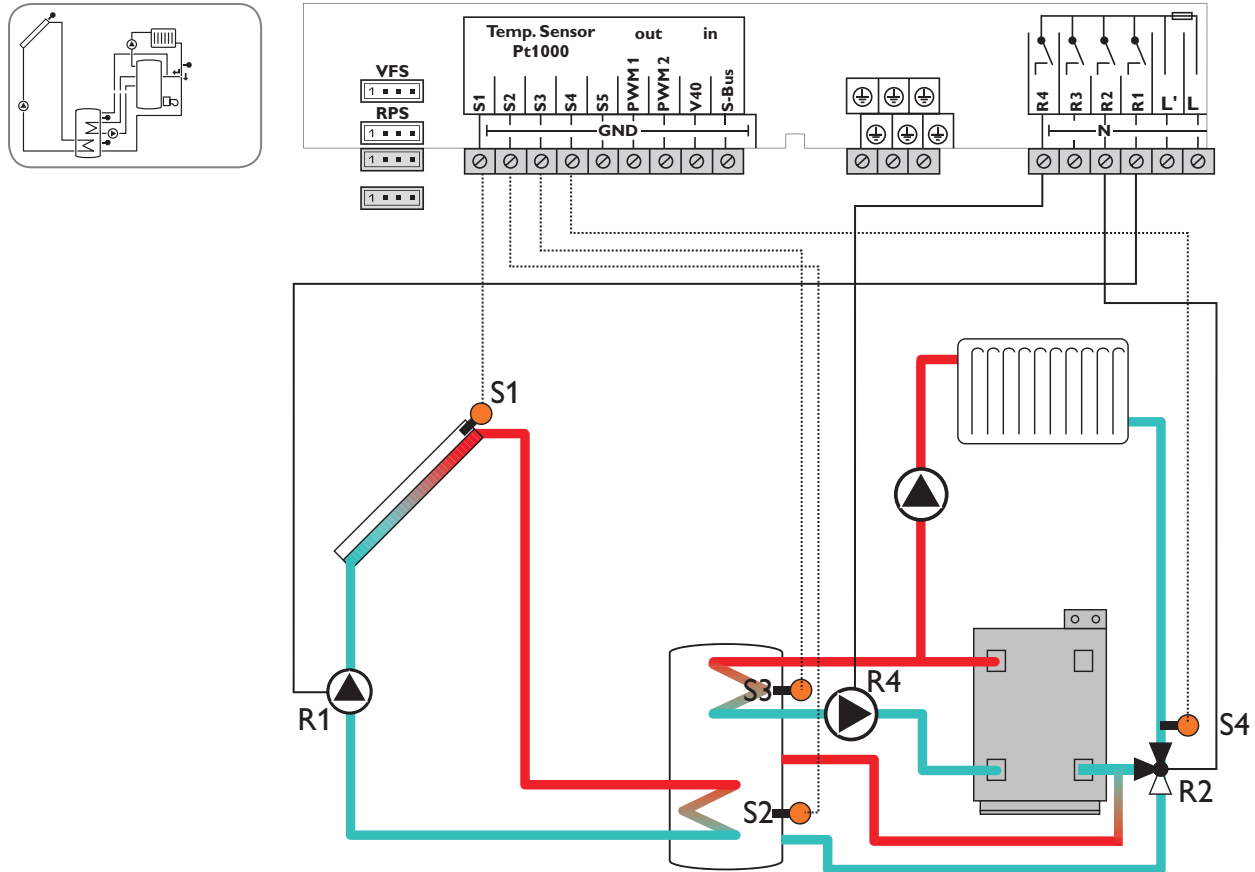

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TSTB	Temperature store base
S3	TSTT/TSTR	Temperature store top/ Temp. store return preheating
S4	TRET	Temperature - return
S5		Optional sensor for measurement purposes or options
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump
R2	Return preheating
R3	optional: Thermal disinfection Booster pump Parallel relay Heat dump
R4	Afterheating/store loading pump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	10	System	78
LOAD >					Loading	
	DT O		6 K		Switch-on temperature difference	78
	DT F		4 K		Switch-off temperature difference	78
	DT S		10 K		Set temperature difference	78
	RIS		2 K		Rise	78
	S MAX		60 °C		Store maximum limitation	78
	S MAXS		2		Sensor store max	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
		CMAX	110 °C		Maximum collector temperature	80
	OCMI		OFF		Option collector minimum limitation	80
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
LLOGI >					Loading logic	
	ODB >		OFF		Drainback option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
DT3 >					Return preheating	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	S2DT3		3		Reference sensor heat source	87
AH >					Afterheating option	
	AH O		40 °C		Afterheating switch-on temperature	87
	AH F		45 °C		Afterheating switch-off temperature	87
	t1O		06:00		Switch-on time 1	88
	t1F		22:00		Switch-off time 1	88
	t2O		00:00		Switch-on time 2	88
	t2F		00:00		Switch-off time 2	88
	t3O		00:00		Switch-on time 3	88
	t3F		00:00		Switch-off time 3	88
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.

** are blocked against each other


System 11

Solar system with store loading in layers and heat exchange control

The controller compares the temperature at sensor S1 to the temperatures at sensors S2 and S3. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1) will be activated and the corresponding store zone will be loaded up to the adjusted maximum temperature via the valve (R3).

The priority logic effects prior loading of the upper zone of the store.

Heat exchange control to an existent store via an additional pump (R2) can be carried out with another temperature differential function (S3 heat source/S4 heat sink).

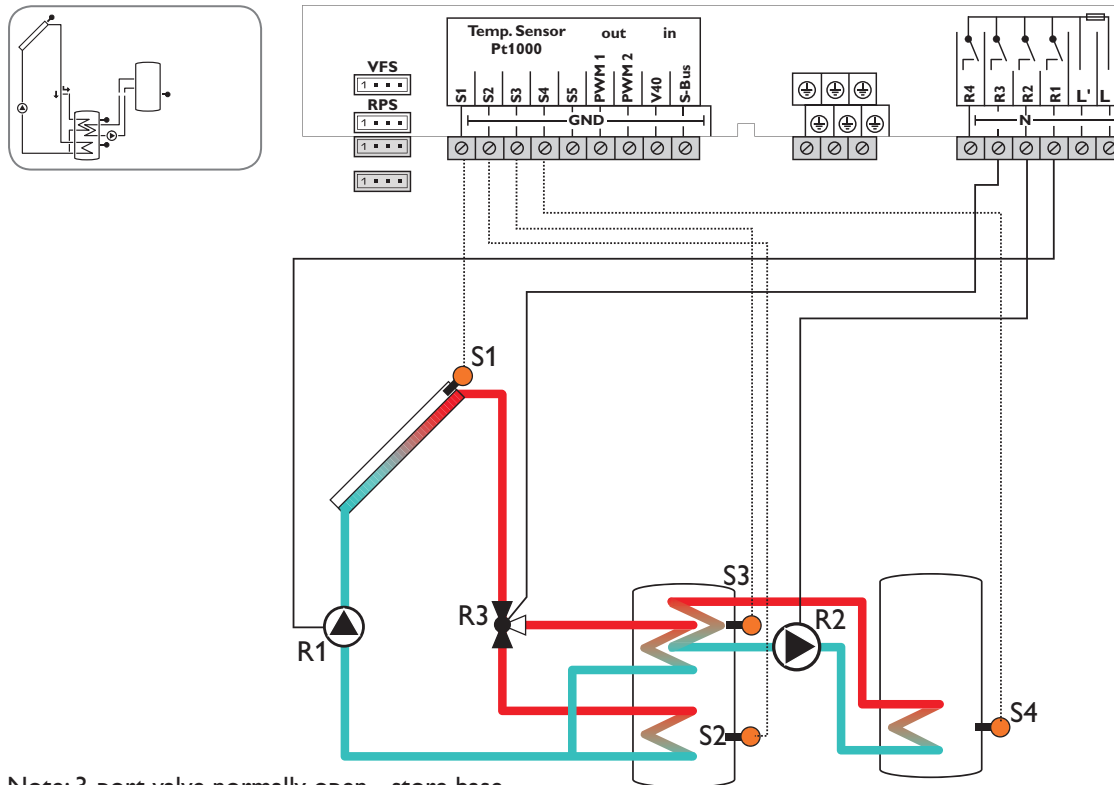

Note: 3-port valve normally open - store base

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TST1B	Temperature store 1 base
S3	TSTT	Temperature store 1 top
S4	TST2B	Temperature store 2 base
S5		Optional sensor for measurement purposes or options
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump
R2	Heat exchange pump
R3	3-port valve store top/base
R4	optional: Thermal disinfection Parallel relay Heat dump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	11	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78
	DT2F		4 K		Switch-off temperature difference 2	78
	DT2S		10 K		Set temperature difference 2	78
	RIS2		2 K		Rise 2	78
	S2MAX		60 °C		Store maximum limitation 2	78

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
COL >	LST2		ON		Loading store 2	79
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		CMAX	110 °C		Maximum collector temperature	80
	OCMI		OFF		Option collector minimum limitation	80
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	2		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
DT3 >					Heat exchange	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	DT3S		10 K		Set difference	86
	RIS3		2 K		Rise	86
	MAX3O		60 °C		Switch-on temperature (maximum limitation)	86
	MAX3F		58 °C		Switch-off temperature (maximum limitation)	86
	MIN3O		5 °C		Switch-on temperature (minimum limitation)	86
	MIN3F		10 °C		Switch-off temperature (minimum limitation)	86
	S2DT3		4		Reference sensor heat sink	87
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.

** are blocked against each other


System 12

Solar system with store loading in layers and thermostatic afterheating

The controller compares the temperature at sensor S1 to the temperatures at sensors S2 and S3. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1) will be activated and the corresponding store zone will be loaded up to the adju-

sted maximum temperature via the valve (R3). The priority logic effects prior loading of the upper zone of the store.

Domestic hot water afterheating (R4) can be carried out with a thermostat function (S3).

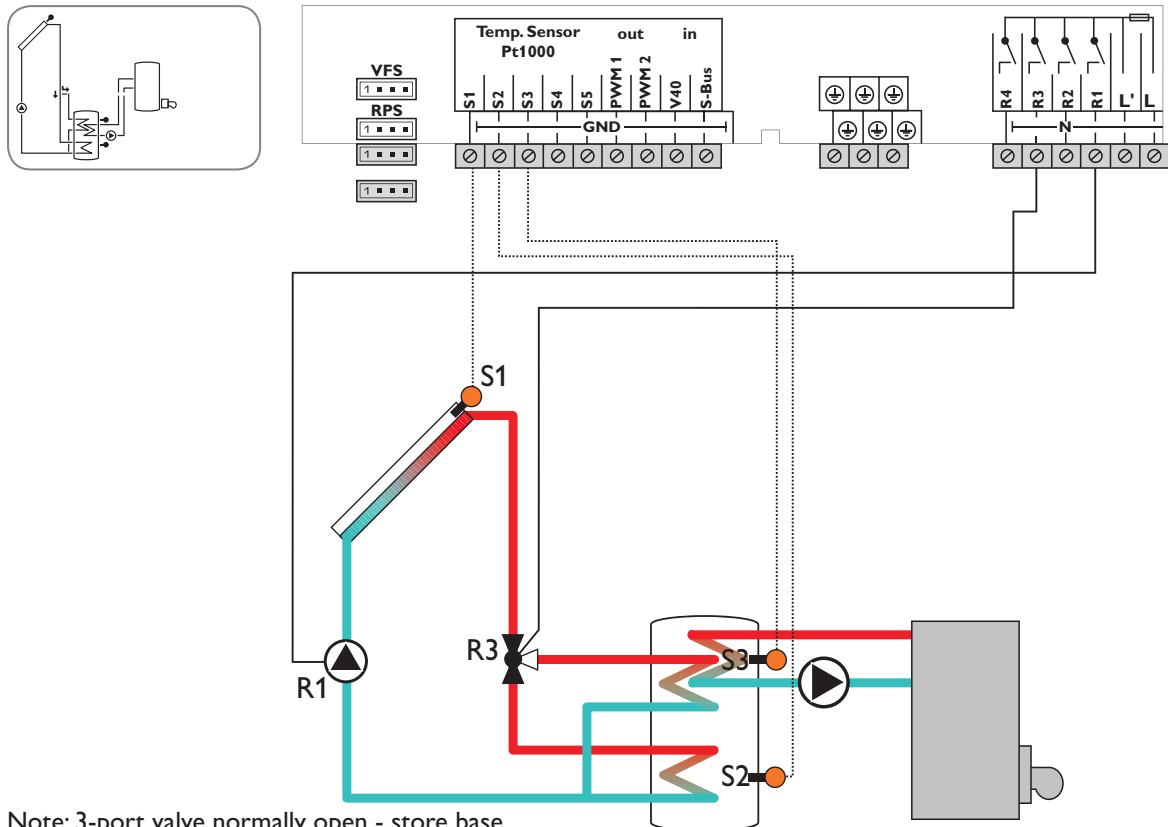

Note: 3-port valve normally open - store base

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TSTB	Temperature store base
S3	TSTT	Temperature store top
S4		Optional sensor for measurement purposes or options
S5		
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump
R2	optional: Thermal disinfection Parallel relay Heat dump
R3	3-port valve store top/base
R4	Afterheating/store loading pump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	12	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78
	DT2F		4 K		Switch-off temperature difference 2	78
	DT2S		10 K		Set temperature difference 2	78
	RIS2		2 K		Rise 2	78

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	S2MAX		60 °C		Store maximum limitation 2	78
	LST2		ON		Loading store 2	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		C MAX	110 °C		Maximum collector temperature	80
	OCMI		OFF		Option collector minimum limitation	80
		C MIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	2		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
AH >					Afterheating option	
	AH O		40 °C		Afterheating switch-on temperature	87
	AH F		45 °C		Afterheating switch-off temperature	87
	t1O		06:00		Switch-on time 1	88
	t1F		22:00		Switch-off time 1	88
	t2O		00:00		Switch-on time 2	88
	t2F		00:00		Switch-off time 2	88
	t3O		00:00		Switch-on time 3	88
	t3F		00:00		Switch-off time 3	88
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.


** are blocked against each other

System 13

Solar system with store loading in layers and afterheating with solid fuel boiler

The controller compares the temperature at sensor S1 to the temperatures at sensors S2 and S3. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1) will be activated and the corresponding store zone will be loaded up to the adju-

sted maximum temperature via the valve (R4). The priority logic effects prior loading of the upper zone of the store. With another temperature differential function (S4/S3), afterheating of the store can be carried out with a solid fuel boiler (R3).

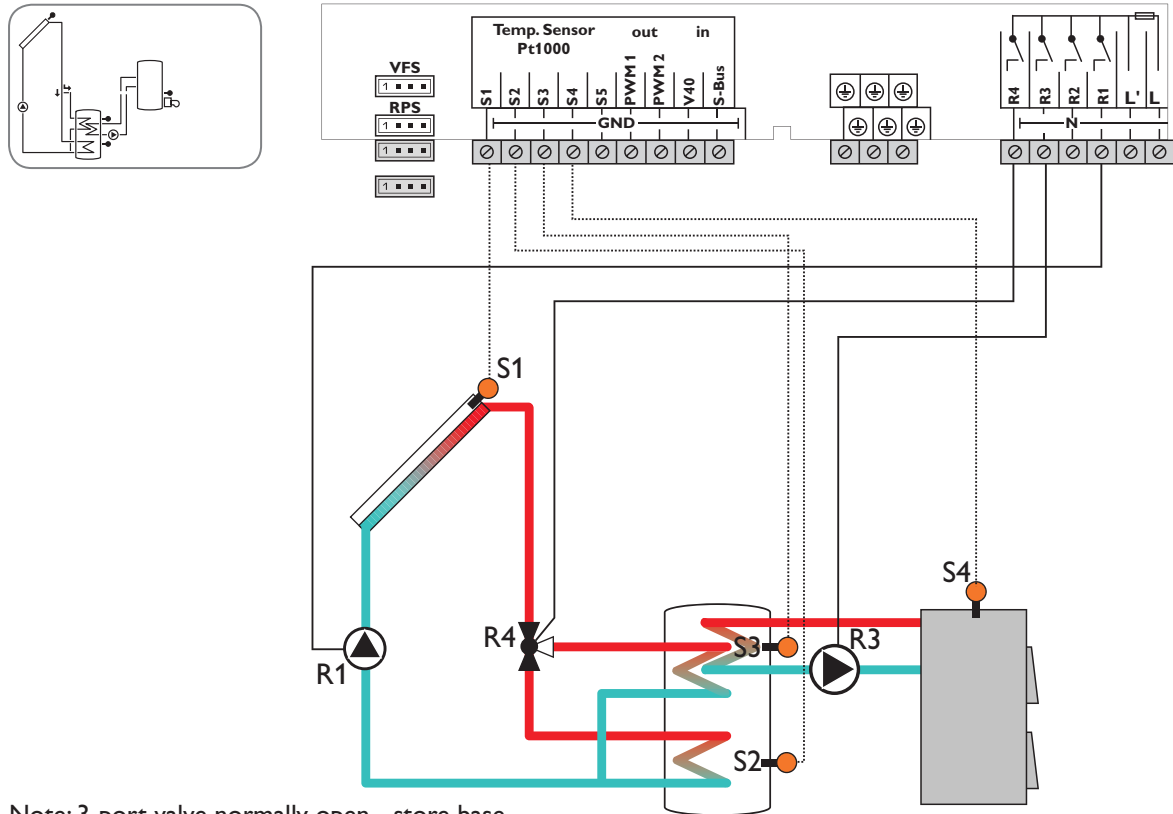

Note: 3-port valve normally open - store base

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TSTB	Temperature store base
S3	TSTT	Temperature store top
S4	TSFB	Temperature solid fuel boiler
S5		Optional sensor for measurement purposes or options
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump
R2	optional: Thermal disinfection Parallel relay Heat dump
R3	Loading pump/solid fuel boiler
R4	3-port valve store top/base

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	13	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78
	DT2F		4 K		Switch-off temperature difference 2	78
	DT2S		10 K		Set temperature difference 2	78
	RIS2		2 K		Rise 2	78
	S2MAX		60 °C		Store maximum limitation 2	78

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	LST2		ON		Loading store 2	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		CMAX	110 °C		Maximum collector temperature	80
	OCMI		OFF		Option collector minimum limitation	80
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	2		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
DT3 >					Solid fuel boiler	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	DT3S		10 K		Set difference	86
	RIS3		2 K		Rise	86
	MAX3O		60 °C		Switch-on temperature (maximum limitation)	86
	MAX3F		58 °C		Switch-off temperature (maximum limitation)	86
	MIN3O		60 °C		Switch-on temperature (minimum limitation)	86
	MIN3F		65 °C		Switch-off temperature (minimum limitation)	86
	S2DT3		3		Reference sensor heat sink	87
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the GFDS channel.

**are blocked against each other


System 14

Solar system with store loading in layers and return preheating

The controller compares the temperature at sensor S1 to the temperatures at sensors S2 and S3. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1) will be activated and the corresponding store zone will be loaded up to the adju-

sted maximum temperature via the valve (R3). The priority logic effects prior loading of the upper zone of the store.

With another temperature differential function (S3-heat source/S4-heat sink) heating circuit return preheating (heating circuit backup) is possible via another valve (R2).

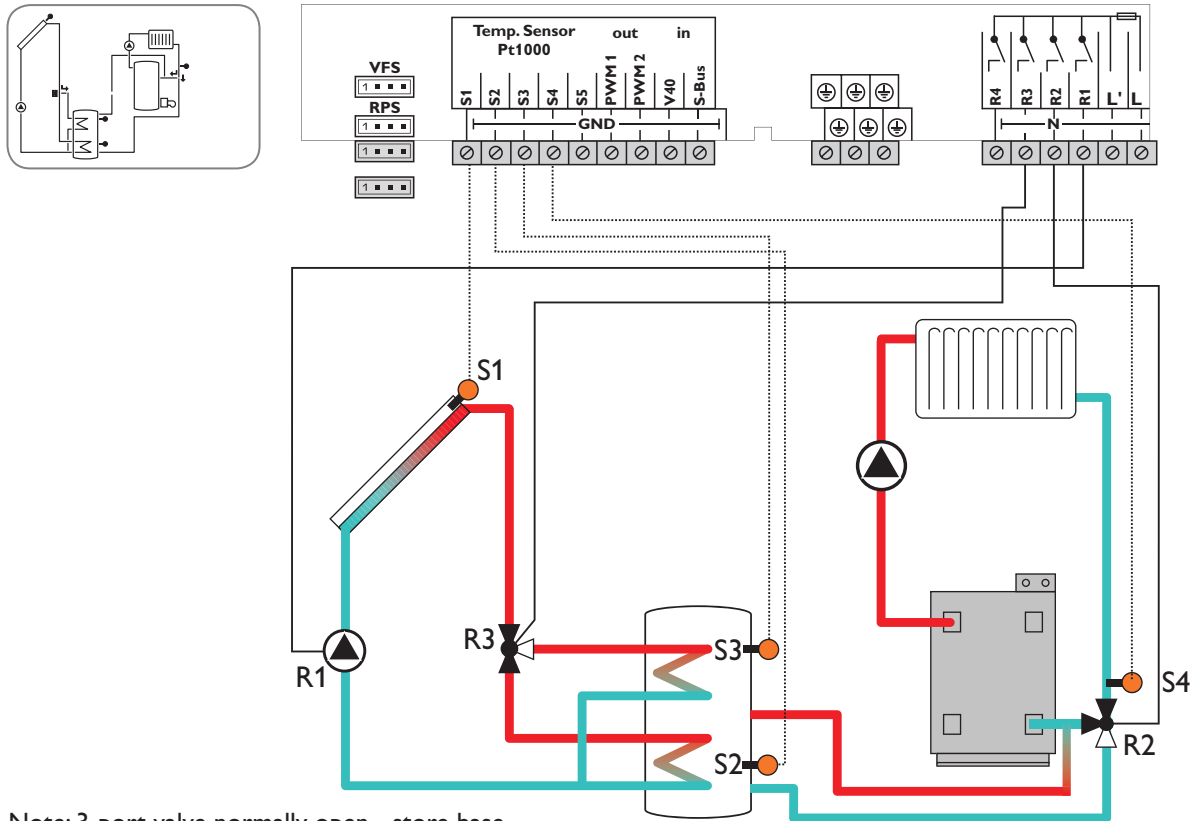

Note: 3-port valve normally open - store base

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TSTB	Temperature store base
S3	TSTT/TSTR	Temperature store top/ Temp. store return preheating
S4	TRET	Temperature return
S5		Optional sensor for measurement purposes or options
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump
R2	Return preheating
R3	3-port valve store top/base
R4	optional: Thermal disinfection Parallel relay Heat dump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	14	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78
	DT2F		4 K		Switch-off temperature difference 2	78
	DT2S		10 K		Set temperature difference 2	78

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	RIS2		2 K		Rise 2	78
	S2MAX		60 °C		Store maximum limitation 2	78
	LST2		ON		Loading store 2	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		CMAX	110 °C		Maximum collector temperature	80
	OCMI		OFF		Option collector minimum limitation	80
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	2		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
DT3 >					Return preheating	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	S2DT3		3		Reference sensor heat source	87
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.

** are blocked against each other


System 15

Solar system with store loading in layers and afterheating via heating backup

The controller compares the temperature at sensor S1 to the temperatures at sensors S2 and S3. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1) will be activated and the corresponding store zone will be loaded up to the adjusted maximum temperature at most via the valve (R3). The priority logic effects prior loading of the upper zone

of the store.

With another temperature differential function (S3-heat source/S4-heat sink) heating circuit return preheating (heating circuit backup) is possible via another valve (R2). Domestic hot water afterheating (R4) can be carried out with a thermostat function (S3).

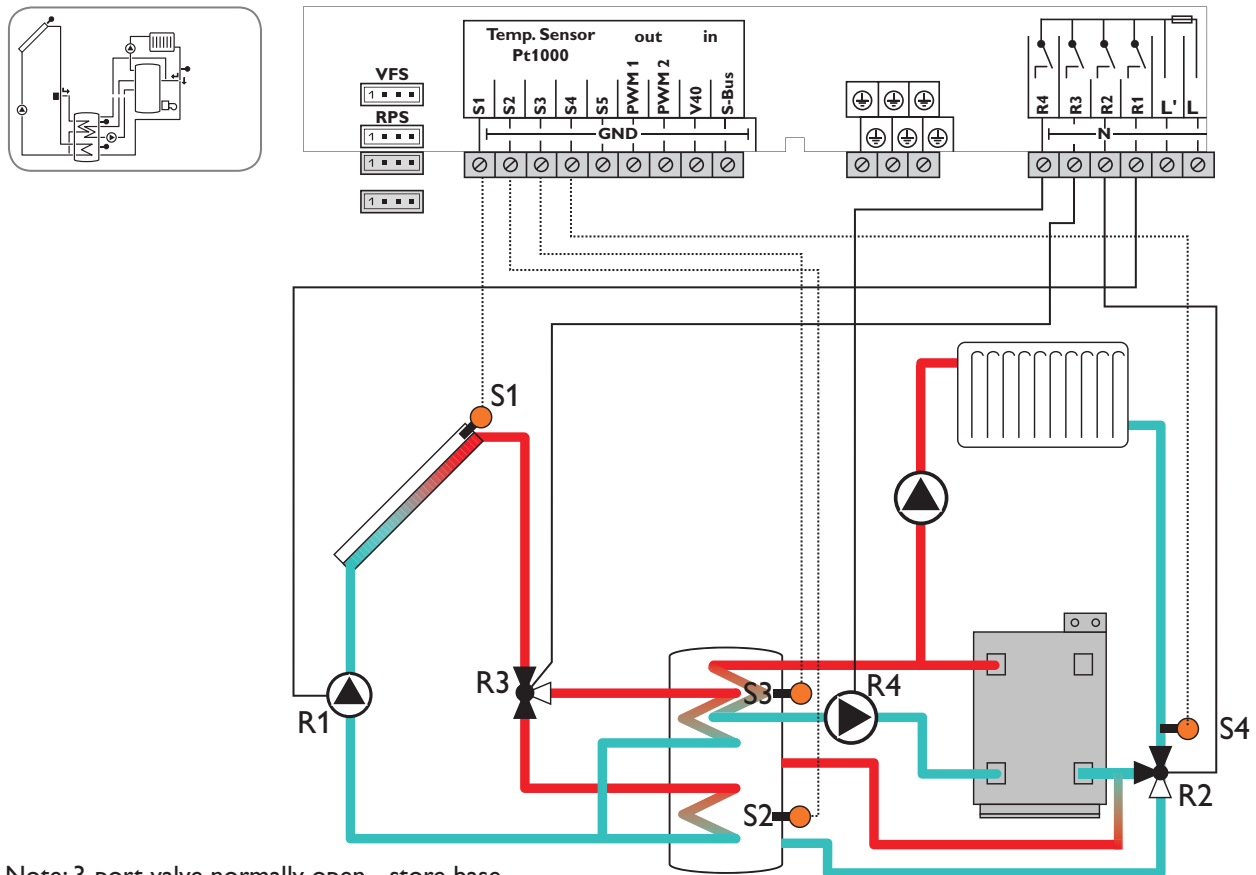

Note: 3-port valve normally open - store base

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TSTB	Temperature store base
S3	TSTT/TSTR	Temperature store top/Temp. store return preheating
S4	TRET	Temperature return
S5		Optional sensor for measurement purposes or options
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump
R2	Return preheating
R3	3-port valve store top/base
R4	Afterheating/store loading pump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	15	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79


Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78
	DT2F		4 K		Switch-off temperature difference 2	78
	DT2S		10 K		Set temperature difference 2	78
	RIS2		2 K		Rise 2	78
	S2MAX		60 °C		Store maximum limitation 2	78
	LST2		ON		Loading store 2	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		CMAX	110 °C		Maximum collector temperature	80
	OCMI		OFF		Option collector minimum limitation	80
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	2		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
DT3 >					Return preheating	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	S2DT3		3 K		Reference sensor heat source	87
AH >					Afterheating option	
	AH O		40 °C		Afterheating switch-on temperature	87
	AH F		45 °C		Afterheating switch-off temperature	87
	t1O		06:00		Switch-on time 1	88
	t1F		22:00		Switch-off time 1	88
	t2O		00:00		Switch-on time 2	88
	t2F		00:00		Switch-off time 2	88
	t3O		00:00		Switch-on time 3	88
	t3F		00:00		Switch-off time 3	88
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	
* This channel is only available if the Grundfos sensors have been registered in the GFDS channel.						
** are blocked against each other						

System 16

2-store solar system with valve logic and heat exchange control

The controller compares the temperature at sensor S1 to the temperatures at sensors S2 and S4. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1) will be activated and the corresponding store zone will be loaded up to the adjusted maximum temperature via the valve (R3). Store 1 is loaded with priority. Heat exchange from store 1 to store 2 (R2) is possible with another temperature differential function (S3-heat source/S4-heat sink).

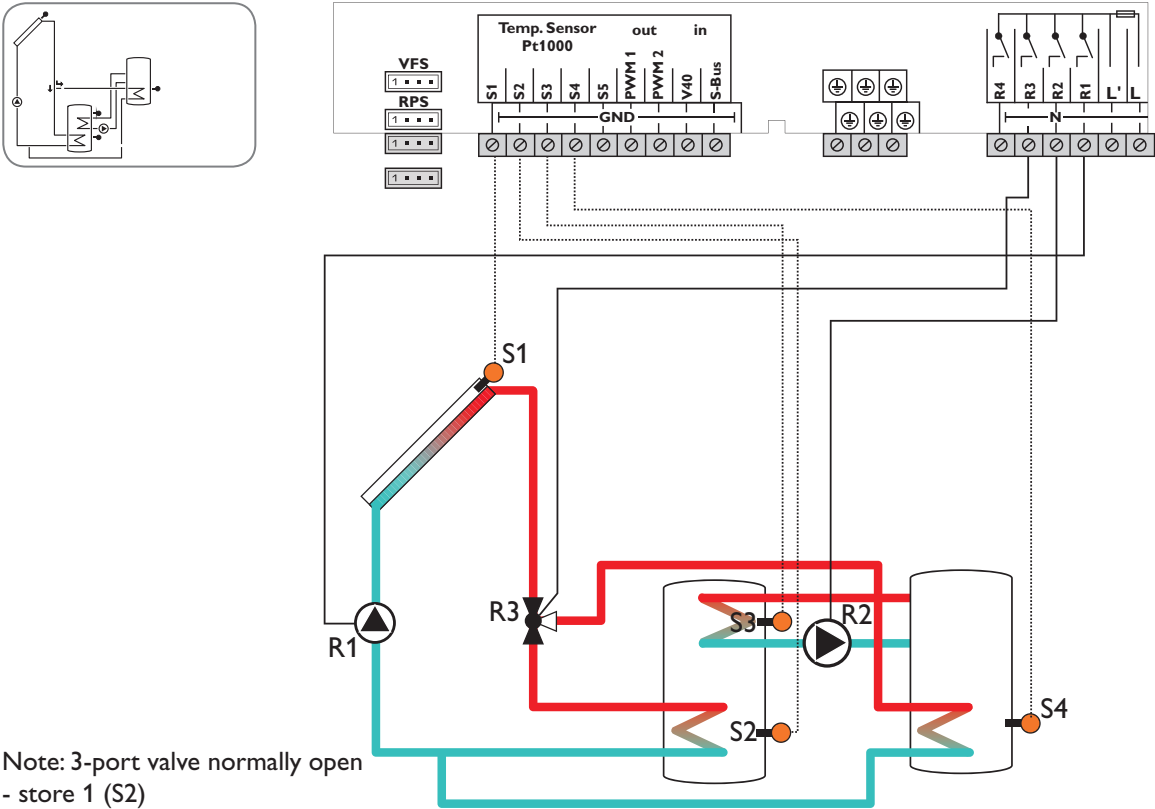

Note: 3-port valve normally open - store 1 (S2)

Sensor/Ter-minal	Designation	Description	Relay	Description
S1	TCOL	Temperature collector	R1	Solar pump
S2	TST1B	Temperature store 1 base	R2	Heat exchange pump
S3	TSTT	Temperature store 1 top	R3	3-port valve store 1 / 2
S4	TST2B	Temperature store 2 base	R4	optional: Thermal disinfection Parallel relay Heat dump
S5		Optional sensor for measurement purposes or options		
VFS				
RPS				
V40				

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	16	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78
	DT2F		4 K		Switch-off temperature difference 2	78
	DT2S		10 K		Set temperature difference 2	78
	RIS2		2 K		rise 2	78
	S2MAX		60 °C		Store maximum limitation 2	78
	SMXS2		4		Sensor store max 2	79
	LST2		ON		Loading store 2	79

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		C MAX	110 °C		Maximum collector temperature	80
	OCMI		OFF		Option collector minimum limitation	80
		C MIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
		FRPST	1		Antifreeze store selection	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	1		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
DT3 >					Heat exchange	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	DT3S		10 K		Set difference	86
	RIS3		2 K		Rise	86
	MAX3O		60 °C		Switch-on temperature (maximum limitation)	86
	MAX3F		58 °C		Switch-off temperature (maximum limitation)	86
	MIN3O		5 °C		Switch-on temperature (minimum limitation)	86
	MIN3F		10 °C		Switch-off temperature (minimum limitation)	86
	S2DT3		4		Reference sensor heat sink	87
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			ON		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.

** are blocked against each other


System 17

2-store solar system with pump logic and heat exchange control

The controller compares the temperature at sensor S1 to the temperatures at sensors S2 and S4. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1 and R2) will be activated and the corresponding store will be loaded up to

the adjusted maximum temperature. Store 1 is loaded with priority.

Heat exchange from store 1 to store 2 (R3) is possible with another temperature differential function (S3-heat source/ S4-heat sink).

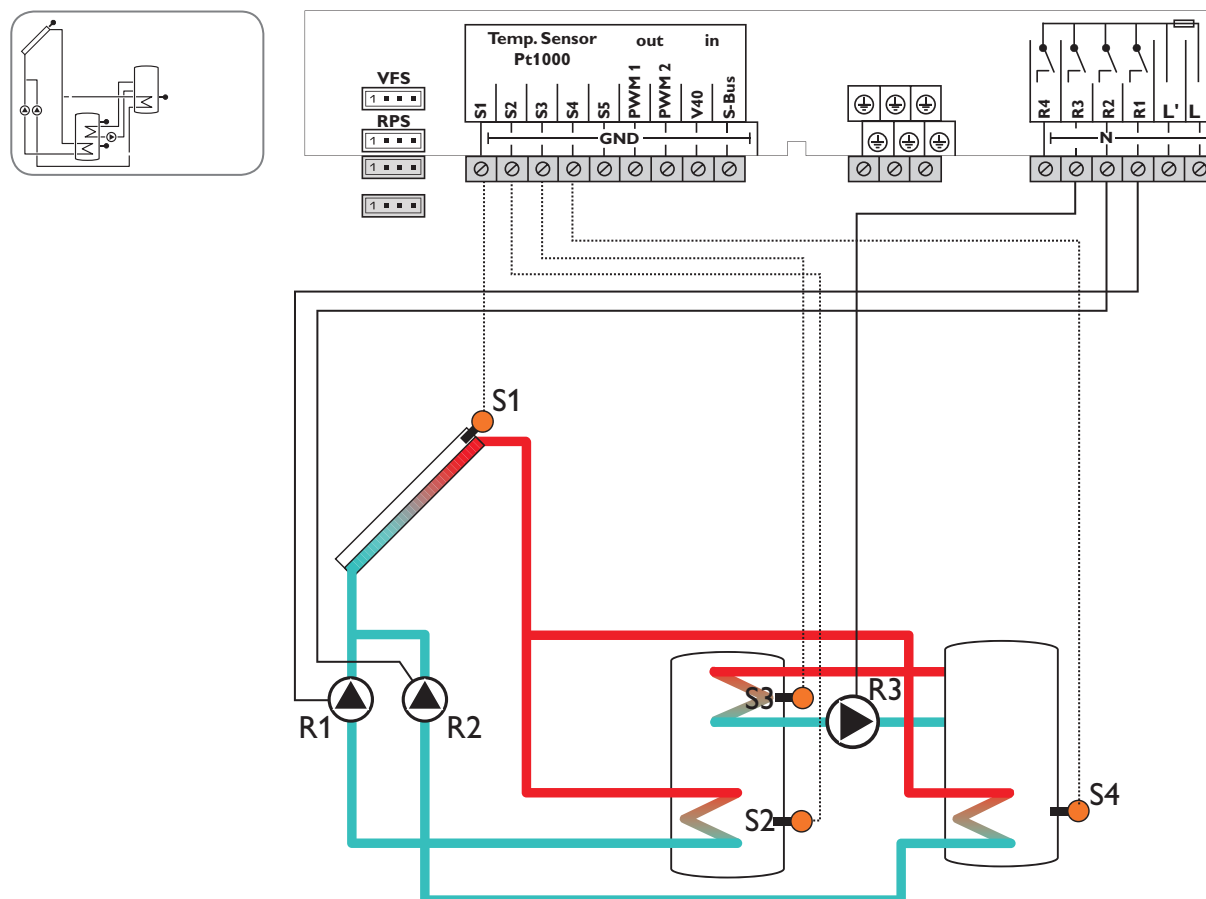

Sensor/Terminal	Designation	Description
S1	TCOL	Temperature collector
S2	TST1B	Temperature store 1 base
S3	TSTT	Temperature store 1 top
S4	TST2B	Temperature store 2 base
S5		Optional sensor for measurement purposes or options
VFS		
RPS		
V40		

Relay	Description
R1	Solar pump store 1
R2	Solar pump store 2
R3	Heat exchange pump
R4	optional: Thermal disinfection Parallel relay Heat dump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	17	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78
	DT2F		4 K		Switch-off temperature difference 2	78
	DT2S		10 K		Set temperature difference 2	78

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	RIS2		2 K		Rise 2	78
	S2MAX		60 °C		Store maximum limitation 2	78
	SMXS2		4		Sensor store max 2	79
	LST2		ON		Loading store 2	79
COL >					Collector	
	CEM		130 °C		Collector emergency temperature	80
	OCCO**		OFF		Option collector cooling	80
		CMAX	110 °C		Maximum collector temperature	80
	OCMI		OFF		Option collector minimum limitation	80
		CMIN	10 °C		Minimum collector temperature	80
	OTCO		OFF		Option tube collector function	81
		TCST	07:00		Tube collector starting time	81
		TCEN	19:00		Tube collector ending time	81
		TCRU	30 s		Tube collector runtime	81
		TCIN	30 min		Tube collector standstill interval	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
		FRPST	1		Antifreeze store selection	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	1		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
		OSE	OFF		Spread function option	83
		DTSE	40		Spread difference	83
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
DT3 >					Heat exchange	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	DT3S		10 K		Set difference	86
	RIS3		2 K		Rise	86
	MAX3O		60 °C		Switch-on temperature (maximum limitation)	86
	MAX3F		58 °C		Switch-off temperature (maximum limitation)	86
	MIN3O		5 °C		Switch-on temperature (minimum limitation)	86
	MIN3F		10 °C		Switch-off temperature (minimum limitation)	86
	S2DT3		4		Reference sensor heat sink	87
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			OFF		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92


Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	
* This channel is only available if the Grundfos sensors have been registered in the GFDS channel.						
** are blocked against each other						

System 18

Solar system with east-/west collectors and heat exchange control

The controller compares the temperatures at the collector sensors S1 and S5 to the store temperature at sensor S2. If one of the measured temperature differences is higher than the adjusted switch-on temperature differences, the corresponding pump (R1, R2) or both

pumps will be activated and the store will be loaded. Heat transfer control to an existent store (R3) can be carried out with another temperature differential function (S3-heat source/S4-heat sink).

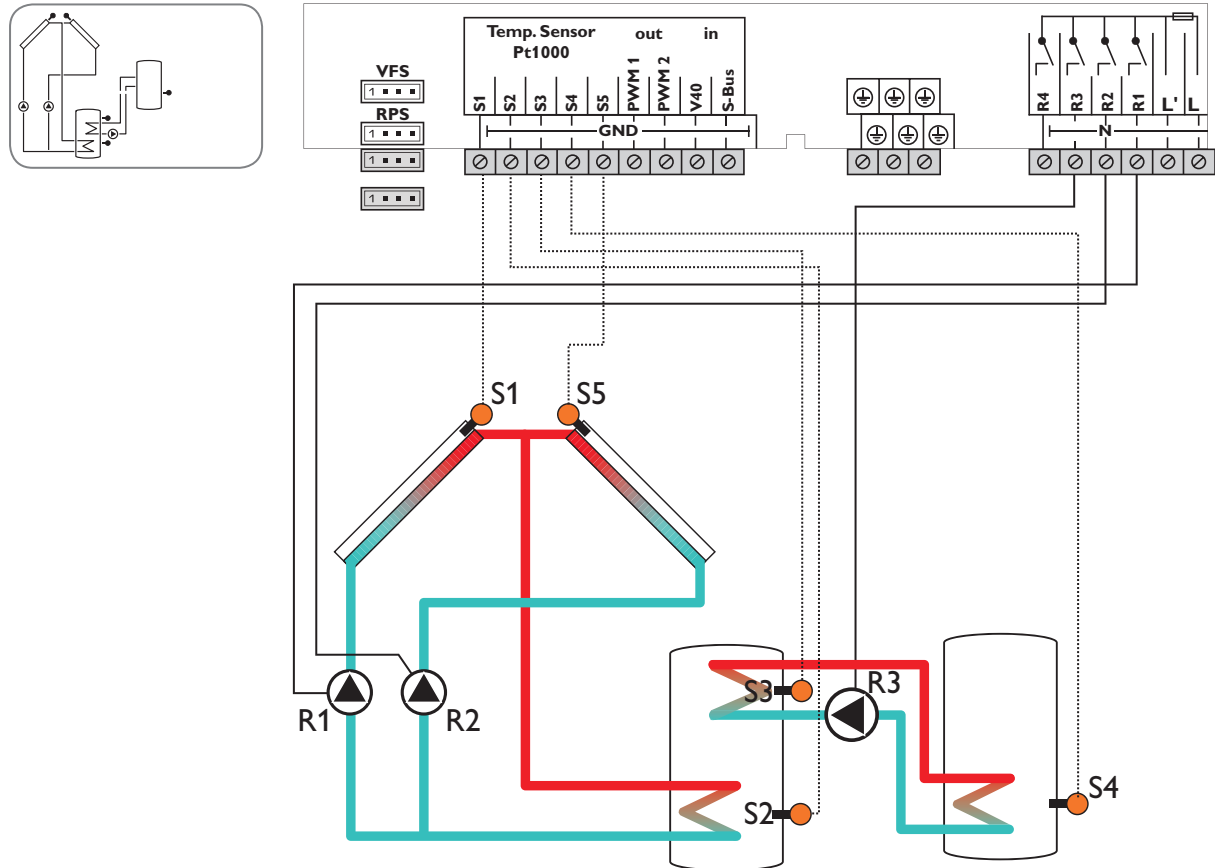

Sensor/Terminal	Designation	Description
S1	TCOL1	Temperature collector 1
S2	TST1B	Temperature store 1 base
S3	TSTT	Temperature store 1 top
S4	TST2B	Temperature store 2 base
S5	TCOL2	Temperature collector 2
VFS		Optional sensor for measurement purposes or options
RPS		
V40		

Relay	Description
R1	Solar pump collector 1
R2	Solar pump collector 2
R3	Heat exchange pump
R4	optional: Thermal disinfection Parallel relay Heat dump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	18	System	78
LOAD >					Loading	
	DT O		6 K		Switch-on temperature difference	78
	DT F		4 K		Switch-off temperature difference	78
	DT S		10 K		Set temperature difference	78
	RIS		2 K		Rise	78
	S MAX		60 °C		Store maximum limitation	78
	S MAXS		2		Sensor store max	79
COL 1 >					Collector 1	
	CEM1		130 °C		Collector emergency temperature 1	80
	OCCO1**		OFF		Option collector cooling 1	80
		C MAX1	110 °C		Maximum collector temperature 1	80
	O CMI1		OFF		Option collector minimum limitation 1	80

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
		CMIN1	10 °C		Minimum collector temperature 1	80
	OTCO1		OFF		Option tube collector function 1	81
		TCST1	07:00		Tube collector starting time 1	81
		TCEN1	19:00		Tube collector ending time 1	81
		TCRU1	30 s		Tube collector runtime 1	81
		TCIN1	30 min		Tube collector standstill interval 1	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
COL 2 >					Collector 2	
	CEM2		130 °C		Collector emergency temperature 2	80
	OCCO2**		OFF		Option collector cooling 2	80
		CMAX2	110 °C		Maximum collector temperature 2	80
	OCMI2		OFF		Option collector minimum limitation 2	80
		CMIN2	10 °C		Minimum collector temperature 2	80
	OTCO2		OFF		Option tube collector function 2	81
		TCST2	07:00		Tube collector starting time 2	81
		TCEN2	19:00		Tube collector ending time 2	81
		TCRU2	30 s		Tube collector runtime 2	81
		TCIN2	30 min		Tube collector standstill interval 2	81
LLOGI >					Loading logic	
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
DT3 >					Heat exchange	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	DT3S		10 K		Set difference	86
	RIS3		2 K		Rise	86
	MAX3O		60 °C		Switch-on temperature (maximum limitation)	86
	MAX3F		58 °C		Switch-off temperature (maximum limitation)	86
	MIN3O		5 °C		Switch-on temperature (minimum limitation)	86
	MIN3F		10 °C		Switch-off temperature (minimum limitation)	86
	S2DT3		4		Reference sensor heat sink	87
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			OFF		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.


** are blocked against each other

System 19

Solar system with east-/west collectors and thermostatic afterheating

The controller compares the temperatures at the collector sensors S1 and S5 to the store temperature at sensor S2. If one of the measured temperature differences is higher than the adjusted switch-on temperature differences, the corre-

sponding pump (R1, R2) or both pumps will be activated and the store will be loaded. Domestic hot water afterheating (R4) can be carried out with a thermostat function (S3).

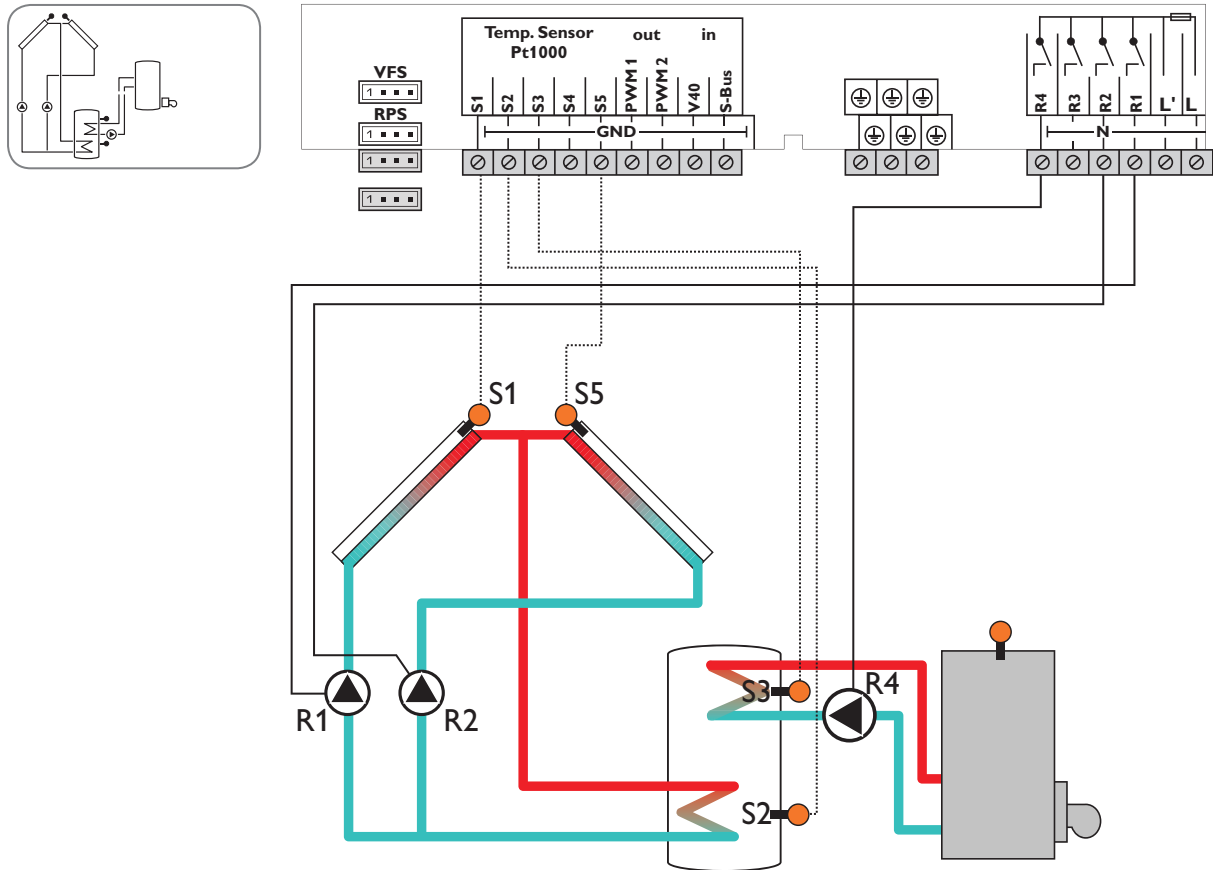

Sensor/Terminal	Designation	Description
S1	TCOL1	Temperature collector 1
S2	TSTB	Temperature store base
S3	TSTT	Temperature store top
S4		Optional sensor for measurement purposes or options
S5	TCOL2	Temperature collector 2
VFS		Optional sensor for measurement purposes or options
RPS		
V40		

Relay	Description
R1	Solar pump collector 1
R2	Solar pump collector 2
R3	optional: Thermal disinfection Parallel relay
R4	Heat dump Afterheating/store loading pump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	19	System	78
LOAD >					Loading	
	DT O		6 K		Switch-on temperature difference	78
	DT F		4 K		Switch-off temperature difference	78
	DT S		10 K		Set temperature difference	78
	RIS		2 K		Rise	78
	S MAX		60 °C		Store maximum limitation	78
	S MAXS		2		Sensor store max	79
COL 1 >					Collector 1	
	CEM1		130 °C		Collector emergency temperature 1	80
	OCCO1**		OFF		Option collector cooling 1	80
		C MAX1	110 °C		Maximum collector temperature 1	80
	OCMI1		OFF		Option collector minimum limitation 1	80

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
		CMIN1	10 °C		Minimum collector temperature 1	80
	OTCO1		OFF		Option tube collector function 1	81
		TCST1	07:00		Tube collector starting time 1	81
		TCEN1	19:00		Tube collector ending time 1	81
		TCRU1	30 s		Tube collector runtime 1	81
		TCIN1	30 min		Tube collector standstill interval 1	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
COL 2 >					Collector 2	
	CEM2		130 °C		Collector emergency temperature 2	80
	OCCO2**		OFF		Option collector cooling 2	80
		CMAX2	110 °C		Maximum collector temperature 2	80
	OCMI2		OFF		Option collector minimum limitation 2	80
		CMIN2	10 °C		Minimum collector temperature 2	80
	OTCO2		OFF		Option tube collector function 2	81
		TCST2	07:00		Tube collector starting time 2	81
		TCEN2	19:00		Tube collector ending time 2	81
		TCRU2	30 s		Tube collector runtime 2	81
		TCIN2	30 min		Tube collector standstill interval 2	81
LLOGI >					Loading logic	
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
AH >					Afterheating option	
	AH O		40 °C		Afterheating switch-on temperature	87
	AH F		45 °C		Afterheating switch-off temperature	87
	t1O		06:00		Switch-on time 1	88
	t1F		22:00		Switch-off time 1	88
	t2O		00:00		Switch-on time 2	88
	t2F		00:00		Switch-off time 2	88
	t3O		00:00		Switch-on time 3	88
	t3F		00:00		Switch-off time 3	88
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			OFF		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.


** are blocked against each other

System 20

Solar system with east-/west collectors, thermostatic afterheating and return preheating

The controller compares the temperatures at the collector sensors S1 and S5 to the store temperature at sensor S2. If one of the measured temperature differences is higher than the adjusted switch-on temperature differences, the corresponding pump (R1, R2) or both pumps will be activated and the store will be loaded.

With another temperature differential function (S3-heat source/S4-heat sink) heating circuit return preheating (heating circuit backup) is possible with another valve (R3). Domestic hot water afterheating (R4) can be carried out with a thermostat function (S3).

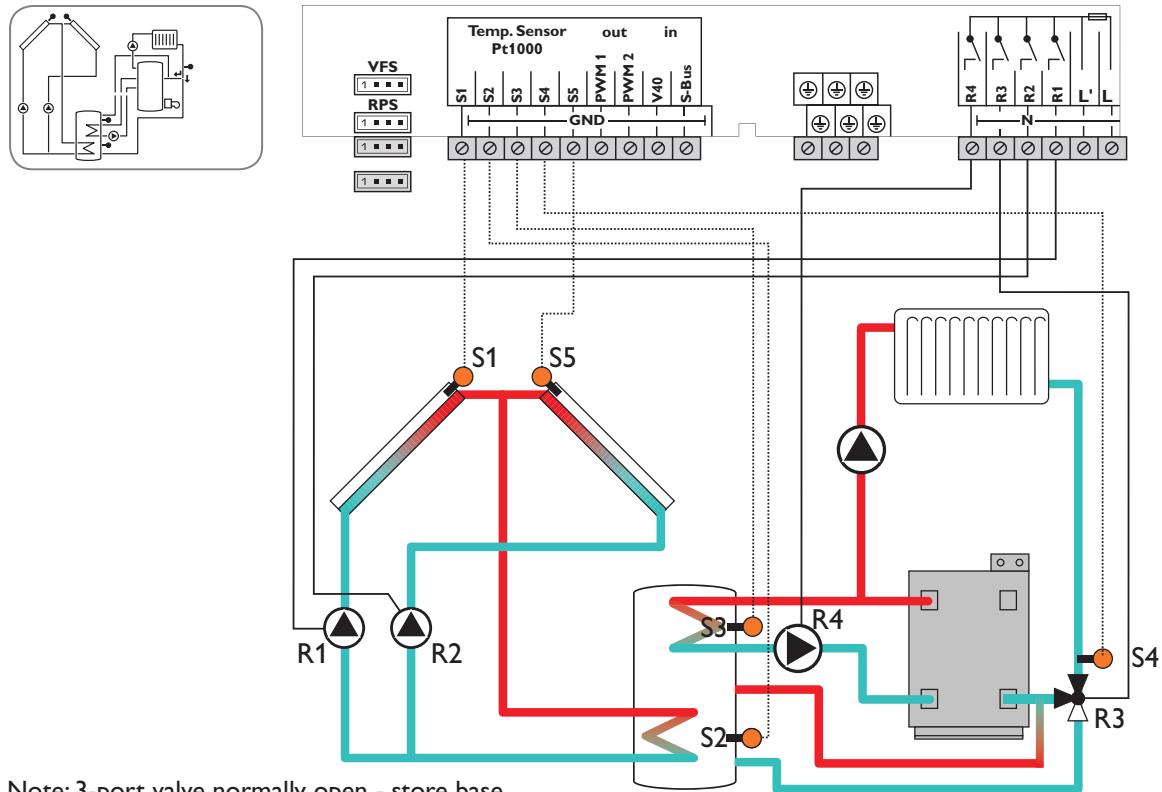

Note: 3-port valve normally open - store base

Sensor/Terminal	Designation	Description
S1	TCOL1	Temperature collector 1
S2	TSTB	Temperature store base
S3	TSTT/TSTR	Temperature store top/ Temp. store return preheating
S4	TRET	Temperature - return
S5	TCOL2	Temperature collector 2
VFS		Optional sensor for measurement purposes or options
RPS		
V40		

Relay	Description
R1	Solar pump collector 1
R2	Solar pump collector 2
R3	Return preheating
R4	Afterheating/store loading pump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	20	System	78
LOAD >					Loading	
	DT O		6 K		Switch-on temperature difference	78
	DT F		4 K		Switch-off temperature difference	78
	DT S		10 K		Set temperature difference	78
	RIS		2 K		Rise	78
	S MAX		60 °C		Store maximum limitation	78
	S MAXS		2		Sensor store max	79
COL 1 >					Collector 1	
	CEM1		130 °C		Collector emergency temperature 1	80
	OCCO1**		OFF		Option collector cooling 1	80
		C MAX1	110 °C		Maximum collector temperature 1	80
	O CMI1		OFF		Option collector minimum limitation 1	80

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
		CMIN1	10 °C		Minimum collector temperature 1	80
	OTCO1		OFF		Option tube collector function 1	81
		TCST1	07:00		Tube collector starting time 1	81
		TCEN1	19:00		Tube collector ending time 1	81
		TCRU1	30 s		Tube collector runtime 1	81
		TCIN1	30 min		Tube collector standstill interval 1	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
		FRPST	1		Antifreeze store selection	81
COL 2 >					Collector 2	
	CEM2		130 °C		Collector emergency temperature 2	80
	OCCO2**		OFF		Option collector cooling 2	80
		CMAx2	110 °C		Maximum collector temperature 2	80
	OCMI2		OFF		Option collector minimum limitation 2	80
		CMIN2	10 °C		Minimum collector temperature 2	80
	OTCO2		OFF		Option tube collector function 2	81
		TCST2	07:00		Tube collector starting time 2	81
		TCEN2	19:00		Tube collector ending time 2	81
		TCRU2	30 s		Tube collector runtime 2	81
		TCIN2	30 min		Tube collector standstill interval 2	81
LLOGI >					Loading logic	
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
DT3 >					Return preheating	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	S2DT3		3		Reference sensor heat source	87
AH >					Afterheating option	
	AH O		40 °C		Afterheating switch-on temperature	87
	AH F		45 °C		Afterheating switch-off temperature	87
	t1O		06:00		Switch-on time 1	88
	t1F		22:00		Switch-off time 1	88
	t2O		00:00		Switch-on time 2	88
	t2F		00:00		Switch-off time 2	88
	t3O		00:00		Switch-on time 3	88
	t3F		00:00		Switch-off time 3	88
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			OFF		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.

** are blocked against each other


System 21

Solar system with east-/west collectors and heating circuit return preheating

The controller compares the temperatures at the collector sensors S1 and S5 to the store temperature at sensor S2. If one of the measured temperature differences is higher than the adjusted switch-on temperature differences, the corresponding pump (R1, R2) or both pumps will be activated and

the store will be loaded.

With another temperature differential function (S3-heat source/S4-heat sink) heating circuit return preheating (heating circuit backup) is possible with another valve (R3).

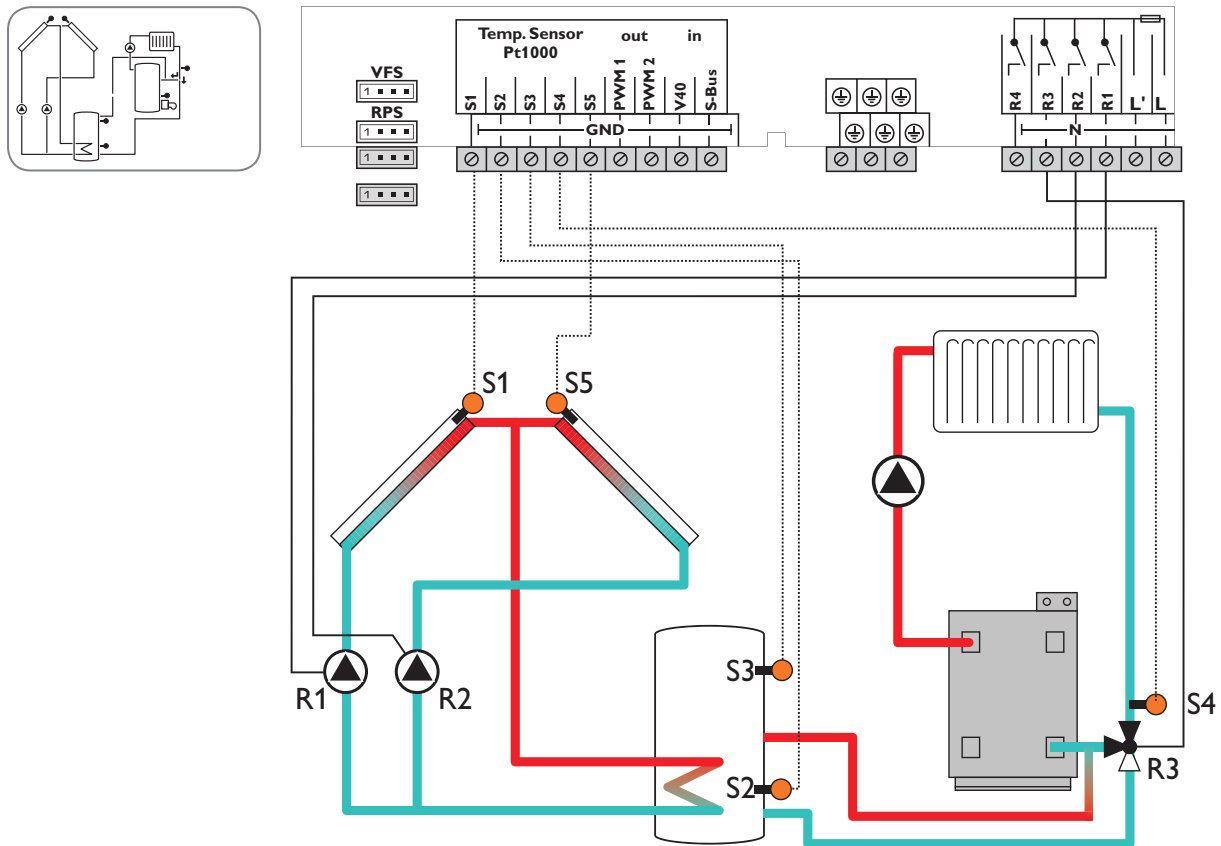

Sensor/Terminal	Designation	Description
S1	TCOL1	Temperature collector 1
S2	TSTB	Temperature store base
S3	TSTT	Temperature store top
S4	TRET	Temperature - return
S5	TCOL2	Temperature collector 2
VFS		Optional sensor for measurement purposes or options
RPS		
V40		

Relay	Description
R1	Solar pump collector 1
R2	Solar pump collector 2
R3	Return preheating
R4	optional: Thermal disinfection Parallel relay Heat dump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	21	System	78
LOAD >					Loading	
	DT O		6 K		Switch-on temperature difference	78
	DT F		4 K		Switch-off temperature difference	78
	DT S		10 K		Set temperature difference	78
	RIS		2 K		Rise	78
	S MAX		60 °C		Store maximum limitation	78
	SMAXS		2		Sensor store max	79
COL 1 >					Collector 1	
	CEM1		130 °C		Collector emergency temperature 1	80
	OCCO1**		OFF		Option collector cooling 1	80
		CMA1	110 °C		Maximum collector temperature 1	80
	OCCI1		OFF		Option collector minimum limitation 1	80
		CMIN1	10 °C		Minimum collector temperature 1	80

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	OTCO1		OFF		Option tube collector function 1	81
		TCST1	07:00		Tube collector starting time 1	81
		TCEN1	19:00		Tube collector ending time 1	81
		TCRU1	30 s		Tube collector runtime 1	81
		TCIN1	30 min		Tube collector standstill interval 1	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
COL 2 >					Collector 2	
	CEM2		130 °C		Collector emergency temperature 2	80
	OCCO2**		OFF		Option collector cooling 2	80
		CMAx2	110 °C		Maximum collector temperature 2	80
	OCMI2		OFF		Option collector minimum limitation 2	80
		CMIN2	10 °C		Minimum collector temperature 2	80
	OTCO2		OFF		Option tube collector function 2	81
		TCST2	07:00		Tube collector starting time 2	81
		TCEN2	19:00		Tube collector ending time 2	81
		TCRU2	30 s		Tube collector runtime 2	81
		TCIN2	30 min		Tube collector standstill interval 2	81
LLOGI >					Loading logic	
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
DT3 >					Return preheating	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	S2DT3		3		Reference sensor heat source	87
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			OFF		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.


** are blocked against each other

System 22

Solar system with store loading in layers and east-/west collectors

The controller compares the temperatures at the collector sensors S1 and S5 to the store temperatures at the sensors S2 and S3. If one of the measured temperature differences is higher than the adjusted switch-on temperature differences, the corresponding pump (R1, R2) or both pumps will be

activated and the corresponding store zone will be loaded up to the adjusted maximum temperature via the valve (R3). The priority logic effects prior loading of the upper zone of the store.

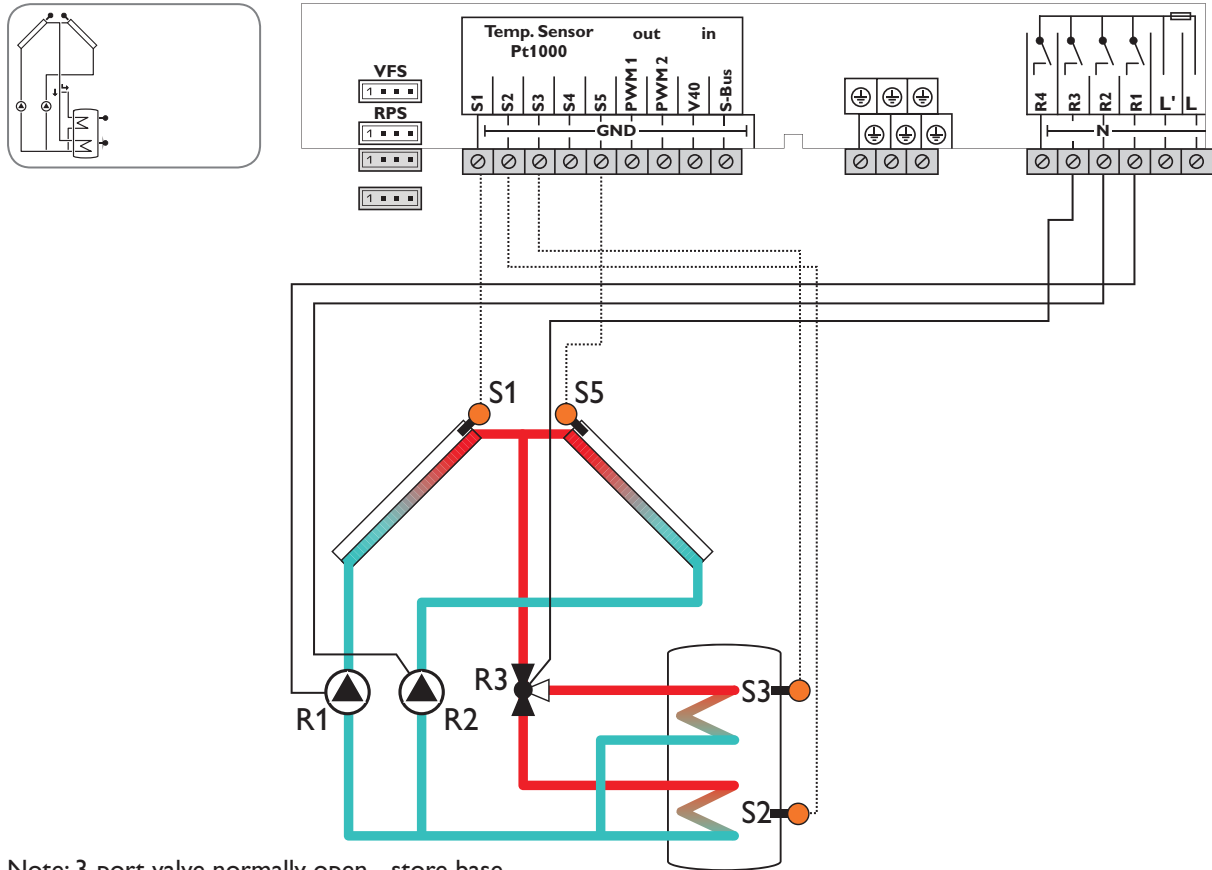

Note: 3-port valve normally open - store base

Sensor/Terminal	Designation	Description
S1	TCOL1	Temperature collector 1
S2	TSTB	Temperature store base
S3	TSTT	Temperature store top
S4		Optional sensor for measurement purposes or options
S5	TCOL2	Temperature collector 2
VFS		Optional sensor for measurement purposes or options
RPS		
V40		

Relay	Description
R1	Solar pump collector 1
R2	Solar pump collector 2
R3	3-port valve store top/base
R4	optional: Thermal disinfection Parallel relay Heat dump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	22	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78
	DT2F		4 K		Switch-off temperature difference 2	78

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	DT2S		10 K		Set temperature difference 2	78
	RIS2		2 K		Rise 2	78
	S2MAX		60 °C		Store maximum limitation 2	78
	LST2		ON		Loading store 2	79
COL 1 >					Collector 1	
	CEM1		130 °C		Collector emergency temperature 1	80
	OCCO1**		OFF		Option collector cooling 1	80
		CMAx1	110 °C		Maximum collector temperature 1	80
	OCMI1		OFF		Option collector minimum limitation 1	80
		CMIN1	10 °C		Minimum collector temperature 1	80
	OTCO1		OFF		Option tube collector function 1	81
		TCST1	07:00		Tube collector starting time 1	81
		TCEN1	19:00		Tube collector ending time 1	81
		TCRU1	30 s		Tube collector runtime 1	81
		TCIN1	30 min		Tube collector standstill interval 1	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
COL 2 >					Collector 2	
	CEM2		130 °C		Collector emergency temperature 2	80
	OCCO2**		OFF		Option collector cooling 2	80
		CMAx2	110 °C		Maximum collector temperature 2	80
	OCMI2		OFF		Option collector minimum limitation 2	80
		CMIN2	10 °C		Minimum collector temperature 2	80
	OTCO2		OFF		Option tube collector function 2	81
		TCST2	07:00		Tube collector starting time 2	81
		TCEN2	19:00		Tube collector ending time 2	81
		TCRU2	30 s		Tube collector runtime 2	81
		TCIN2	30 min		Tube collector standstill interval 2	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	2		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
		DTSE	40 K		Spread difference	83
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			OFF		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93


Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	
* This channel is only available if the Grundfos sensors have been registered in the GFDS channel.						
** are blocked against each other						

System 23

Solar system with east-/west collectors and 2 stores (valve logic)

The controller compares the temperatures at the collector sensors S1 and S5 to the temperatures at S2 and S4. If one of the measured temperature differences is higher than the adjusted switch-on temperature differences, the correspon-

ding pump (R1, R2) or both pumps will be activated and the corresponding store will be loaded up to the adjusted maximum temperature via the valve (R3).

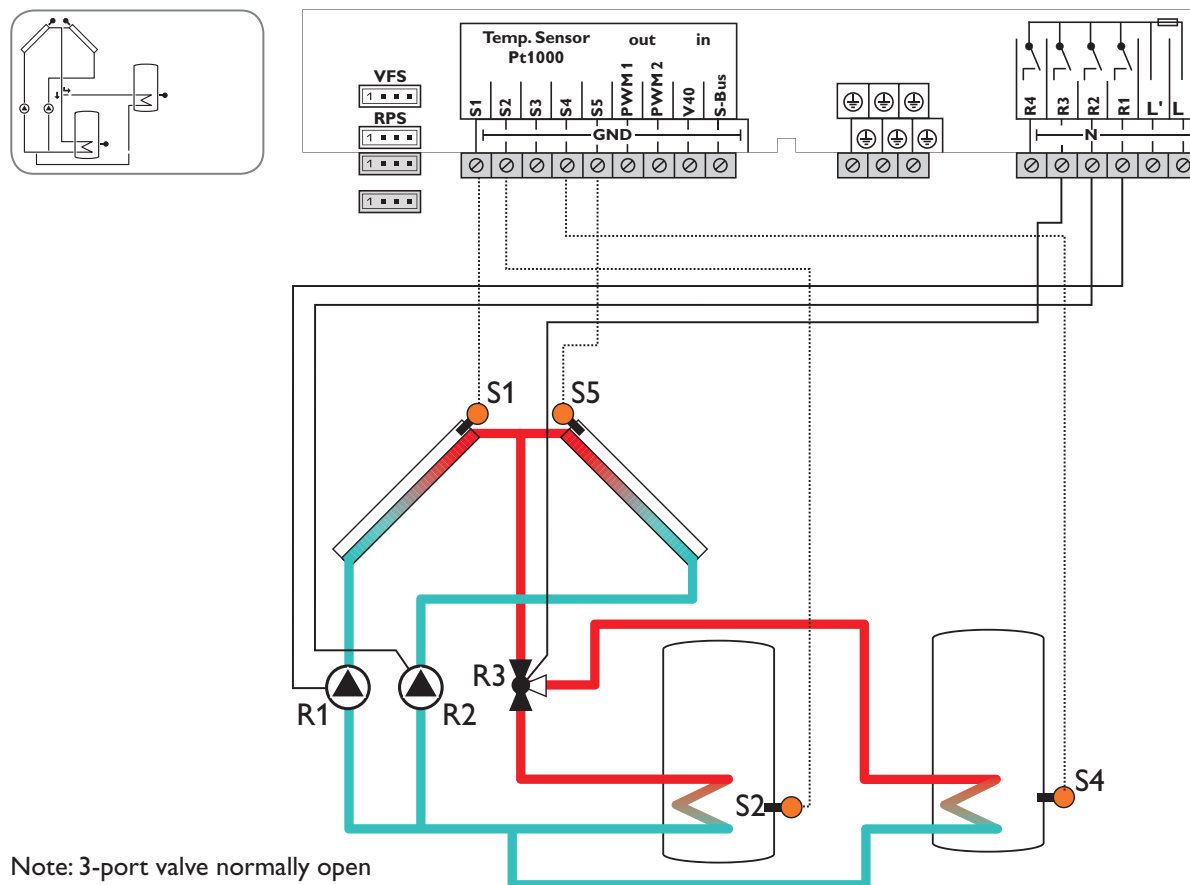

Note: 3-port valve normally open
- store 1 (S2)

Sensor/Terminal	Designation	Description
S1	TCOL1	Temperature collector 1
S2	TST1B	Temperature store 1 base
S3		Optional sensor for measurement purposes or options
S4	TST2B	Temperature store 2 base
S5	TCOL2	Temperature collector 2
VFS		Optional sensor for measurement purposes or options
RPS		
V40		

Relay	Description
R1	Solar pump collector 1
R2	Solar pump collector 2
R3	3-port valve store 1 / 2
R4	optional: Thermal disinfection Parallel relay Heat dump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	23	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78
	DT2F		4 K		Switch-off temperature difference 2	78
	DT2S		10 K		Set temperature difference 2	78

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	RIS2		2 K		Rise 2	78
	S2MAX		60 °C		Store maximum limitation 2	78
	SMXS2		4		Sensor store max 2	79
	LST2		ON		Loading store 2	79
COL 1 >					Collector 1	
	CEM1		130 °C		Collector emergency temperature 1	80
	OCCO1**		OFF		Option collector cooling 1	80
		CMAx1	110 °C		Maximum collector temperature 1	80
	OCMI1		OFF		Option collector minimum limitation 1	80
		CMIN1	10 °C		Minimum collector temperature 1	80
	OTCO1		OFF		Option tube collector function 1	81
		TCST1	07:00		Tube collector starting time 1	81
		TCEN1	19:00		Tube collector ending time 1	81
		TCRU1	30 s		Tube collector runtime 1	81
		TCIN1	30 min		Tube collector standstill interval 1	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
		FRPST	1		Antifreeze store selection	81
COL 2 >					Collector 2	
	CEM2		130 °C		Collector emergency temperature 2	80
	OCCO2**		OFF		Option collector cooling 2	80
		CMAx2	110 °C		Maximum collector temperature 2	80
	OCMI2		OFF		Option collector minimum limitation 2	80
		CMIN2	10 °C		Minimum collector temperature 2	80
	OTCO2		OFF		Option tube collector function 2	81
		TCST2	07:00		Tube collector starting time 2	81
		TCEN2	19:00		Tube collector ending time 2	81
		TCRU2	30 s		Tube collector runtime 2	81
		TCIN2	30 min		Tube collector standstill interval 2	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	1		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
		DTSE	40 °C		Spread difference	83
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			OFF		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92


Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	
* This channel is only available if the Grundfos sensors have been registered in the GFDS channel.						
** are blocked against each other						

System 24

Solar system with east-/west collectors, store loading in layers and heat exchange

The controller compares the temperatures at the collector sensors S1 and S5 to the temperatures at S2 and S3. If one of the measured temperature differences is higher than the adjusted switch-on temperature differences, the corresponding pump (R1, R2) or both pumps will be activated and the

corresponding store zone will be loaded up to the adjusted maximum temperature via the valve (R3). The upper store zone is loaded with priority. Heat exchange from store 1 to store 2 (R4) is possible with another temperature differential function (S3-heat source/S4-heat sink).

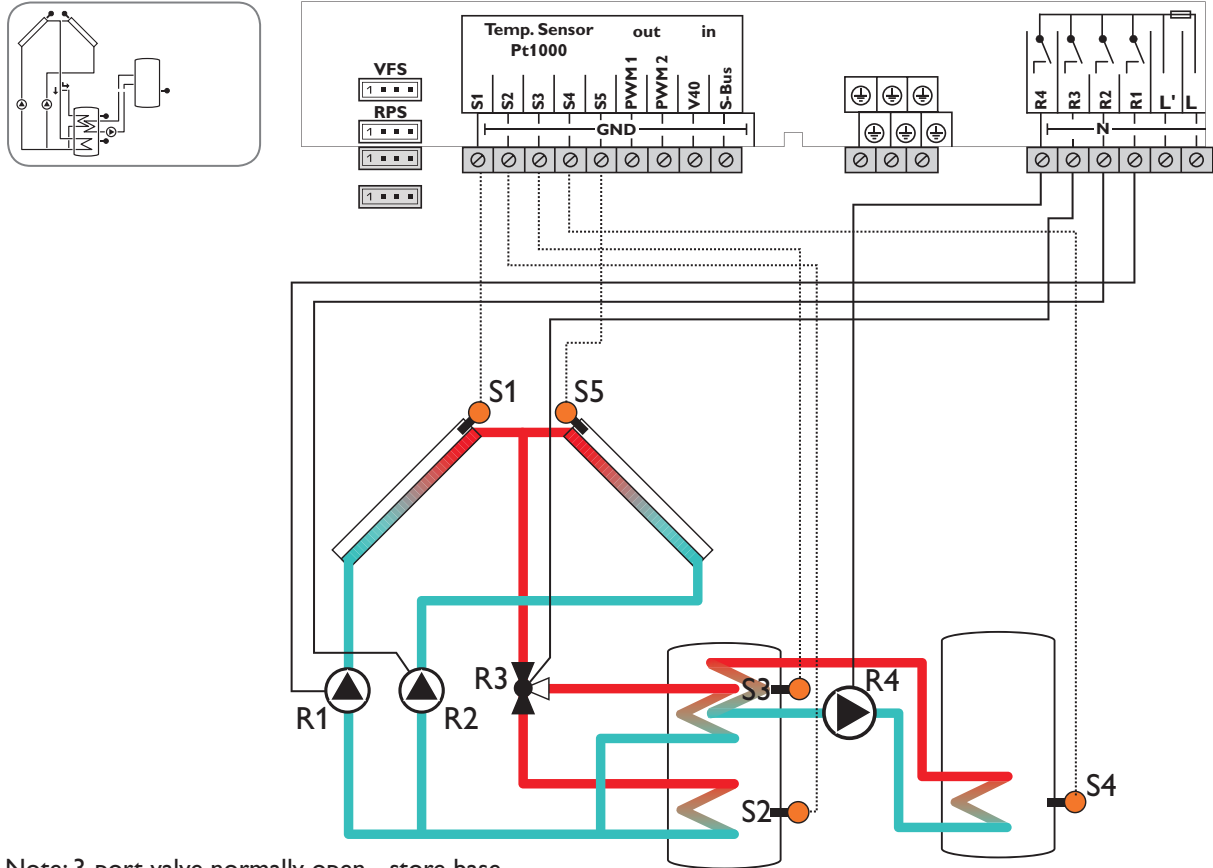

Note: 3-port valve normally open - store base

Sensor/Terminal	Designation	Description
S1	TCOL1	Temperature collector 1
S2	TSTB	Temperature store base
S3	TSTT	Temperature store top
S4	TST2B	Temperature store 2 base
S5	TCOL2	Temperature collector 2
VFS		Optional sensor for measurement purposes or options
RPS		
V40		

Relay	Description
R1	Solar pump collector 1
R2	Solar pump collector 2
R3	3-port valve store 1 / 2
R4	Heat exchange pump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	24	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78
	DT2F		4 K		Switch-off temperature difference 2	78
	DT2S		10 K		Set temperature difference 2	78

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	RIS2		2 K		Rise 2	78
	S2MAX		60 °C		Store maximum limitation 2	78
	LST2		ON		Loading store 2	79
COL 1 >					Collector 1	
	CEM1		130 °C		Collector emergency temperature 1	80
	OCCO1**		OFF		Option collector cooling 1	80
		CMAX1	110 °C		Maximum collector temperature 1	80
	OCMI1		OFF		Option collector minimum limitation 1	80
		CMIN1	10 °C		Minimum collector temperature 1	80
	OTCO1		OFF		Option tube collector function 1	81
		TCST1	07:00		Tube collector starting time 1	81
		TCEN1	19:00		Tube collector ending time 1	81
		TCRU1	30 s		Tube collector runtime 1	81
		TCIN1	30 min		Tube collector standstill interval 1	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
COL 2 >					Collector 2	
	CEM2		130 °C		Collector emergency temperature 2	80
	OCCO2**		OFF		Option collector cooling 2	80
		CMAX2	110 °C		Maximum collector temperature 2	80
	OCMI2		OFF		Option collector minimum limitation 2	80
		CMIN2	10 °C		Minimum collector temperature 2	80
	OTCO2		OFF		Option tube collector function 2	81
		TCST2	07:00		Tube collector starting time 2	81
		TCEN2	19:00		Tube collector ending time 2	81
		TCRU2	30 s		Tube collector runtime 2	81
		TCIN2	30 min		Tube collector standstill interval 2	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	2		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
		DTSE	40 K		Spread difference	83
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	80
DT3 >					Heat exchange	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	DT3S		10 K		Set difference	86
	RIS3		2 K		Rise	86
	MAX3O		60 °C		Switch-on temperature (maximum limitation)	86
	MAX3F		58 °C		Switch-off temperature (maximum limitation)	86
	MIN3O		5 °C		Switch-on temperature (minimum limitation)	86
	MIN3F		10 °C		Switch-off temperature (minimum limitation)	86
	S2DT3		4		Reference sensor heat sink	87
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88
	MAN3		Auto		Manual mode 3	88

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			OFF		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	
* This channel is only available if the Grundfos sensors have been registered in the GFDS channel.						
** are blocked against each other						


System 25

Solar system with east-/west collectors, store loading in layers and thermostatic afterheating

The controller compares the temperatures at the collector sensors S1 and S5 to the store temperatures at the sensors S2 and S3. If one of the measured temperature differences is higher than the adjusted switch-on temperature differences, the corresponding pump (R1, R2) or both pumps will be activated and the corresponding store zone will be loaded

up to the adjusted maximum temperature via the valve (R3). The priority logic effects prior loading of the upper zone of the store.

Domestic hot water afterheating (R4) can be carried out with a thermostat function (S3).

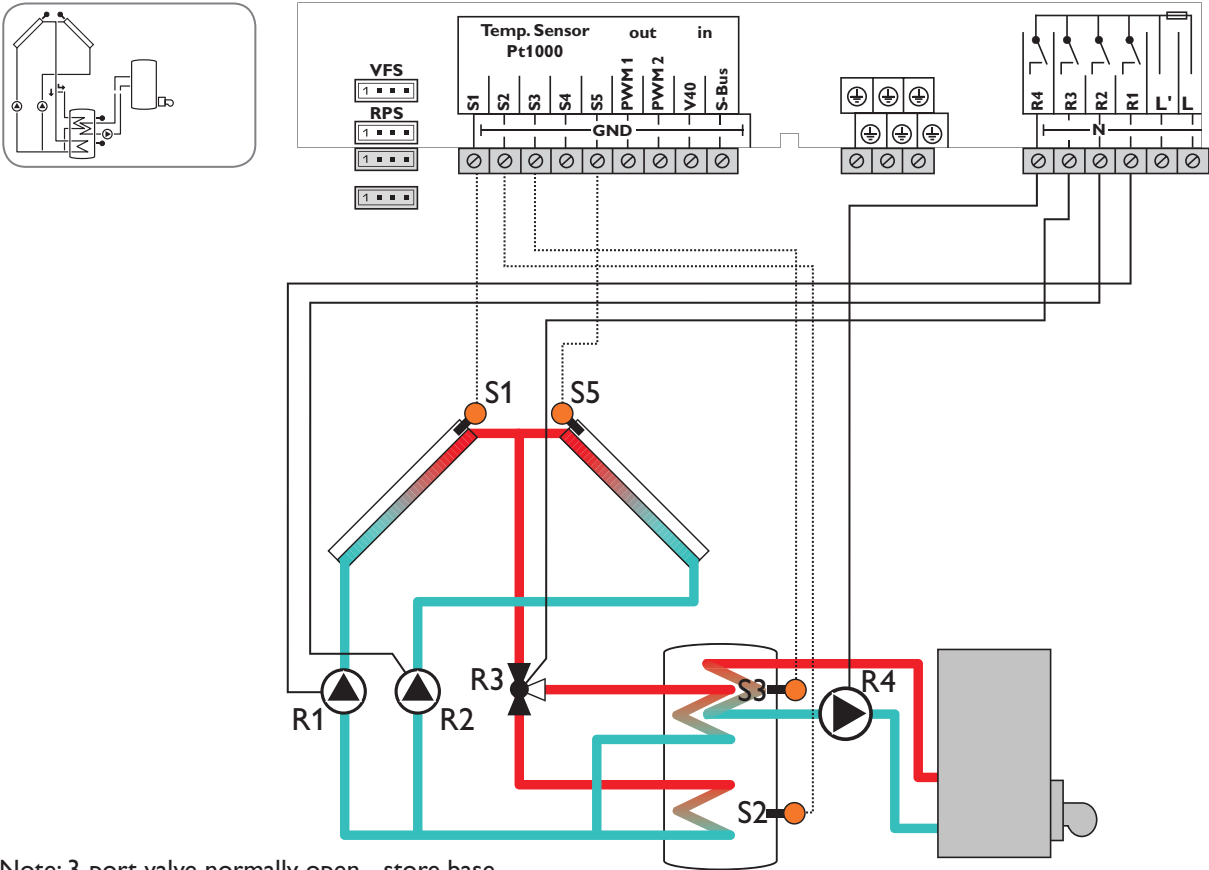

Note: 3-port valve normally open - store base

Sensor/Ter- minal	Designation	Description
S1	TCOL1	Temperature collector 1
S2	TSTB	Temperature store base
S3	TSTT	Temperature store top
S4		Optional sensor for measurement purposes or options
S5	TCOL2	Temperature collector 2
VFS		Optional sensor for measurement purposes or options
RPS		
V40		

Relay	Description
R1	Solar pump collector 1
R2	Solar pump collector 2
R3	3-port valve store top/base
R4	Afterheating/store loading pump

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	25	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	DT2F		4 K		Switch-off temperature difference 2	78
	DT2S		10 K		Set temperature difference 2	78
	RIS2		2 K		Rise 2	78
	S2MAX		60 °C		Store maximum limitation 2	78
	LST2		ON		Loading store 2	79
COL 1 >					Collector 1	
	CEM1		130 °C		Collector emergency temperature 1	80
	OCCO1**		OFF		Option collector cooling 1	80
		CMAX1	110 °C		Maximum collector temperature 1	80
	OCMI1		OFF		Option collector minimum limitation 1	80
		CMIN1	10 °C		Minimum collector temperature 1	80
	OTCO1		OFF		Option tube collector function 1	81
		TCST1	07:00		Tube collector starting time 1	81
		TCEN1	19:00		Tube collector ending time 1	81
		TCRU1	30 s		Tube collector runtime 1	81
		TCIN1	30 min		Tube collector standstill interval 1	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
COL 2 >					Collector 2	
	CEM2		130 °C		Collector emergency temperature 2	80
	OCCO2**		OFF		Option collector cooling 2	80
		CMAX2	110 °C		Maximum collector temperature 2	80
	OCMI2		OFF		Option collector minimum limitation 2	80
		CMIN2	10 °C		Minimum collector temperature 2	80
	OTCO2		OFF		Option tube collector function 2	81
		TCST2	07:00		Tube collector starting time 2	81
		TCEN2	19:00		Tube collector ending time 2	81
		TCRU2	30 s		Tube collector runtime 2	81
		TCIN2	30 min		Tube collector standstill interval 2	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	2		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
		DTSE	40 K		Spread difference	83
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
AH >					Afterheating option	
	AH O		40 °C		Afterheating switch-on temperature	87
	AH F		45 °C		Afterheating switch-off temperature	87
	t1O		06:00		Switch-on time 1	88
	t1F		22:00		Switch-off time 1	88
	t2O		00:00		Switch-on time 2	88
	t2F		00:00		Switch-off time 2	88
	t3O		00:00		Switch-on time 3	88
	t3F		00:00		Switch-off time 3	88
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			OFF		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	
* This channel is only available if the Grundfos sensors have been registered in the GFDS channel.						
** are blocked against each other						


System 26

Solar system with east-/west collectors, store loading in layers and afterheating with solid fuel boiler

The controller compares the temperatures at the collector sensors S1 and S5 to the store temperatures at the sensors S2 and S3. If one of the measured temperature differences is higher than the adjusted switch-on temperature differences, the corresponding pump (R1, R2) or both pumps will be activated and the corresponding store zone will be loaded

up to the adjusted maximum temperature via the valve (R4). The priority logic effects prior loading of the upper zone of the store.

With another temperature differential function (S4/S3), afterheating of the store can be carried out with a solid fuel boiler (R3).

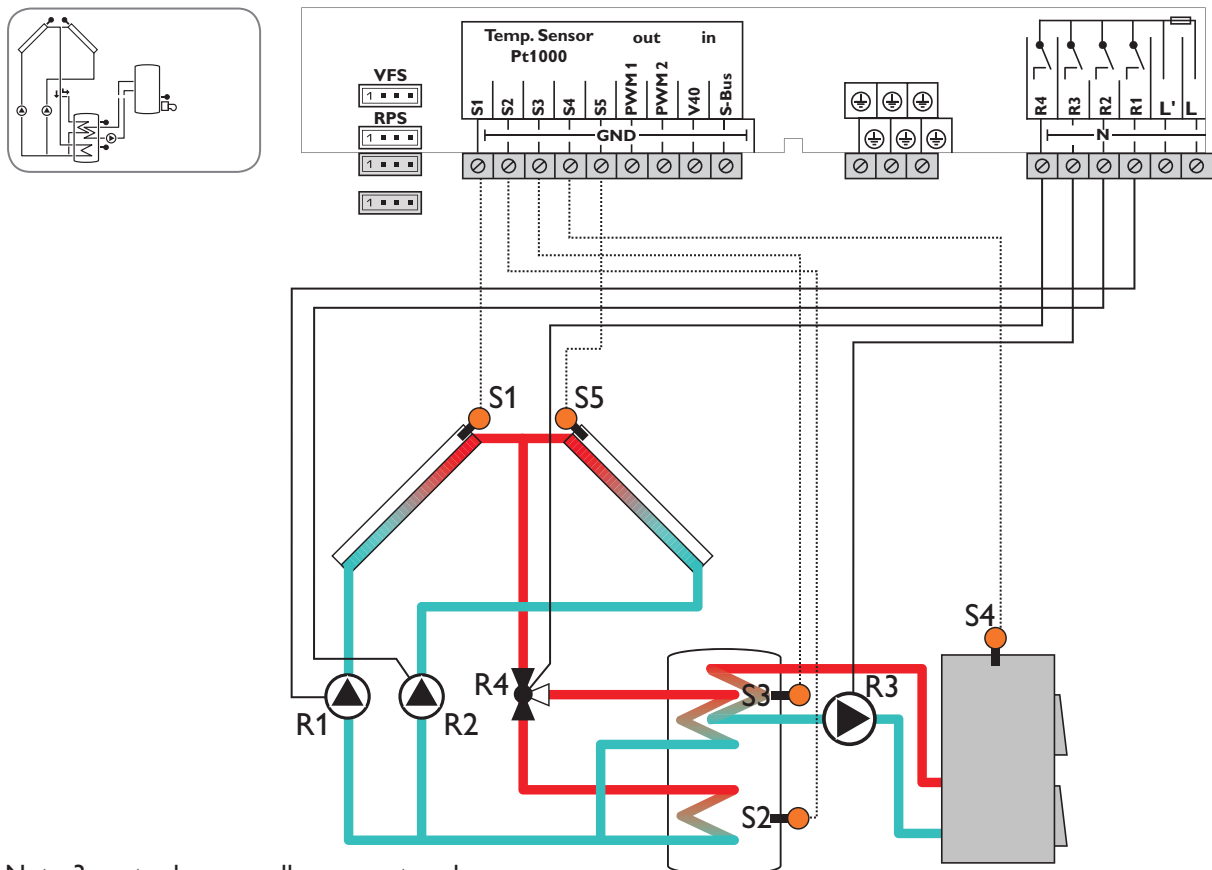

Note: 3-port valve normally open - store base

Sensor/Terminal	Designation	Description
S1	TCOL1	Temperature collector 1
S2	TSTB	Temperature store base
S3	TSTT	Temperature store top
S4	TSFB	Temperature solid fuel boiler
S5	TCOL2	Temperature collector 2
VFS		Optional sensor for measurement purposes or options
RPS		
V40		

Relay	Description
R1	Solar pump collector 1
R2	Solar pump collector 2
R3	Loading pump solid fuel boiler
R4	3-port valve store top/base

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR			1	26	System	78
LOAD1 >					Loading 1	
	DT1O		6 K		Switch-on temperature difference 1	78
	DT1F		4 K		Switch-off temperature difference 1	78
	DT1S		10 K		Set temperature difference 1	78
	RIS1		2 K		Rise 1	78
	S1MAX		60 °C		Store maximum limitation 1	78
	SMXS1		2		Sensor store max 1	79
LOAD2 >					Loading 2	
	DT2O		6 K		Switch-on temperature difference 2	78
	DT2F		4 K		Switch-off temperature difference 2	78


Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	DT2S		10 K		Set temperature difference 2	78
	RIS2		2 K		Rise 2	78
	S2MAX		60 °C		Store maximum limitation 2	78
	LST2		ON		Loading store 2	79
COL 1 >					Collector 1	
	CEM1		130 °C		Collector emergency temperature 1	80
	OCCO1**		OFF		Option collector cooling 1	80
		CMAX1	110 °C		Maximum collector temperature 1	80
	OCMI1		OFF		Option collector minimum limitation 1	80
		CMIN1	10 °C		Minimum collector temperature 1	80
	OTCO1		OFF		Option tube collector function 1	81
		TCST1	07:00		Tube collector starting time 1	81
		TCEN1	19:00		Tube collector ending time 1	81
		TCRU1	30 s		Tube collector runtime 1	81
		TCIN1	30 min		Tube collector standstill interval 1	81
	OCFR		OFF		Option collector frost protection	81
		CFR O	4 °C		Antifreeze temperature collector on	81
		CFR F	5 °C		Antifreeze temperature collector off	81
COL 2 >					Collector 2	
	CEM2		130 °C		Collector emergency temperature 2	80
	OCCO2**		OFF		Option collector cooling 2	80
		CMAX2	110 °C		Maximum collector temperature 2	80
	OCMI2		OFF		Option collector minimum limitation 2	80
		CMIN2	10 °C		Minimum collector temperature 2	80
	OTCO2		OFF		Option tube collector function 2	81
		TCST2	07:00		Tube collector starting time 2	81
		TCEN2	19:00		Tube collector ending time 2	81
		TCRU2	30 s		Tube collector runtime 2	81
		TCIN2	30 min		Tube collector standstill interval 2	81
LLOGI >					Loading logic	
	PRIO				Priority logic	82
		PRIO	2		Priority logic	82
		OSTS	OFF		Store set option	82
		TST1	45 °C		Set store temperature store 1	82
		TST2	45 °C		Set store temperature store 2	82
		DTSE	40 K		Spread difference	83
	tLB		2 min		Loading break time	82
	tRUN		15 min		Circulation runtime	82
	PSPEE		OFF		Pause speed option	83
	PDELA		OFF		Pump delay option	83
	OOVRU*		OFF		Overrun option	84
COOL >					Cooling functions	
	OSYC**		OFF		System cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
DT3 >					Solid fuel boiler	
	DT3O		6 K		Switch-on difference	86
	DT3F		4 K		Switch-off difference	86
	DT3S		10 K		Set difference	86
	RIS3		2 K		Rise	86
	MAX3O		60 °C		Switch-on temperature (maximum limitation)	86
	MAX3F		58 °C		Switch-off temperature (maximum limitation)	86
	MIN3O		60 °C		Switch-on temperature (minimum limitation)	86
	MIN3F		65 °C		Switch-off temperature (minimum limitation)	86
	S2DT3		3		Reference sensor heat sink	87
PUMP >					Pump speed	
	PUMP1		A		Speed variant pump 1	79
	PUMP2		A		Speed variant pump 2	79
	PUMP3		OnOF		Speed variant pump 3	79
MAN >					Manual mode	
	MAN1		Auto		Manual mode 1	88
	MAN2		Auto		Manual mode 2	88

Adjustment channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
	MAN3		Auto		Manual mode 3	88
	MAN4		Auto		Manual mode 4	88
BLPR >			OFF		Blocking protection	88
OTDIS >			OFF		Thermal disinfection option	89
OPARR >			OFF		Parallel relay option	90
OHQM >			OFF		Heat quantity measurement option	90
GFDS >			ON		Registration Grundfos sensors	90
PRS* >			OFF		Pressure monitoring option	92
DATE>					Enter date	92
LANG >			En		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	96
RESET			OFF		Factory setting	
* This channel is only available if the Grundfos sensors have been registered in the GFDS channel.						
** are blocked against each other						

Electrical connection of a high-efficiency pump (HE pump)

Speed control of a HE pump is possible via a PWM signal. For this purpose, the pump has to be connected to the relay as well as to one of the PWM outputs of the controller (see

page 4). In the PUMP adjustment channel one of the PWM control types has to be selected.

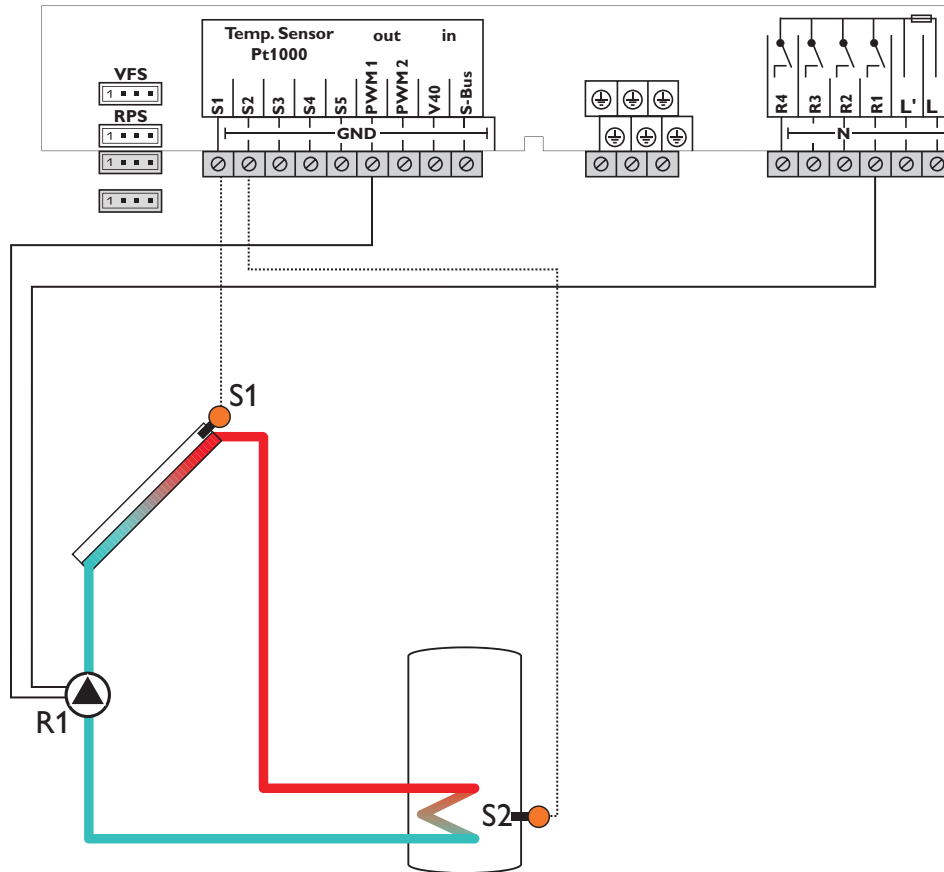

Note:

For more information about pump control, see page 79.



Note:

Some of the menu items depend on the selected system and the adjusted options. Therefore, they are only displayed if they are available.



Note:


The abstract from the menu structure shown above is for information on the structure of the controller menu and is therefore not complete.

Menu level

If it is possible to jump into a menu, **PUSH** is indicated below the menu item. Use button (5) to access the menu. In order to leave the menu, press button (7).

If an option is deactivated, it will appear in the menu level with the addition **OFF**.


3.4 Indications and system monitoring display

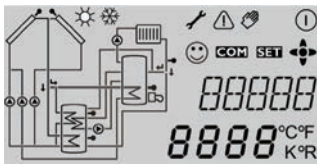

Channel display



Tool bar

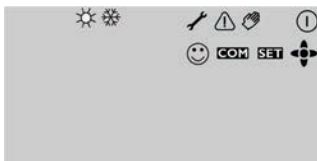

The additional symbols in the tool bar indicate the current system state.


The system monitoring display consists of 3 areas: channel display, tool bar and system screen.

The channel display consists of 2 lines. The upper display line is an alphanumeric 16-segment display. In this line, mainly channel names and menu items are displayed. In the lower 7-segment display, channel values and the adjustment parameters are displayed.



Temperatures and temperature differences are indicated with the unit (°C / °F or K / °R respectively).

Symbol	normal	flashing
	Relay active	
	Maximum store limitation active / maximum store temperature exceeded	Collector cooling function active System cooling, store cooling active
	Antifreeze function activated	Collector minimum limitation active Antifreeze function active
		Collector emergency shutdown
		Sensor fault
		Manual mode active
		Store emergency shutdown active
		Adjustment channel is being changed (set mode)
	SD card is being used	SD card is full
	Indication of the buttons available in the menu item	
	Normal operation	


System screen in the system monitoring display

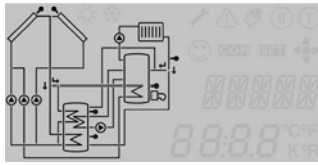

The system selected is indicated in the system monitoring display. It consists of several system component symbols which are – depending on the current status of the system – either flashing, permanently shown or “hidden”.

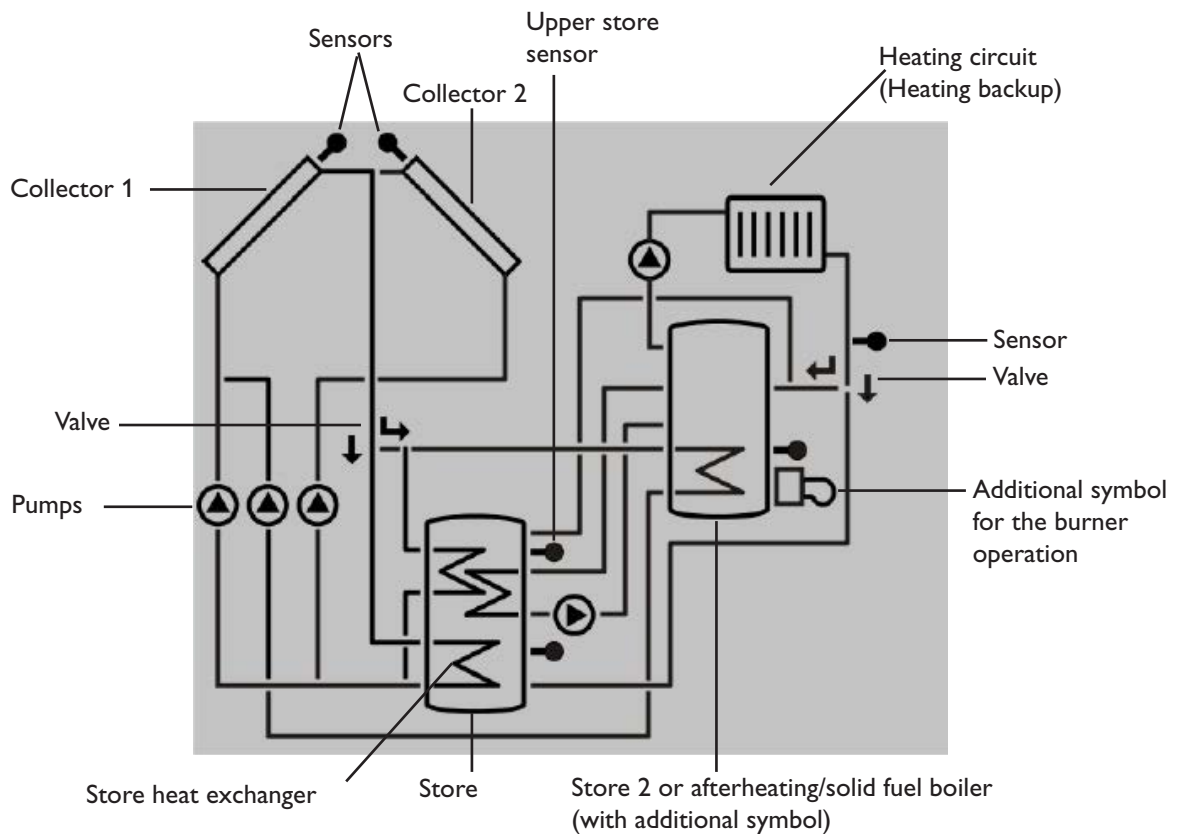

Collectors
with collector sensor

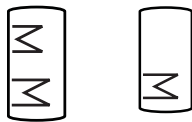

Store 1 and 2
with heat exchanger



3-port valve
flow direction or current switching
position are indicated.




Temperature sensor



Heating circuit
(Heating backup)



Pump



Afterheating with burner
symbol

3.5 Further indications

Fault indication

If the controller detects a malfunction, the directional pad flashes red and the symbols of the warning triangle and the wrench are additionally displayed.

Smiley

If the controller operates faultlessly (normal operation), a smiley is displayed.

4 Status menu

During normal operation of the controller, the display is in the status level. This one indicates the measurement values shown in the table.

In addition to the adjustment values, possible error messages are indicated in the status menu (see chap. 98).

Display	Description
BLPR1	Blocking protection R1
BLPR2	Blocking protection R2
BLPR3	Blocking protection R3
INIT	Initialisation
FLLT	Filling time
STAB	Stabilisation
TCOL	Temperature collector
TCOL1	Temperature collector 1
TCOL2	Temperature collector 2
TSTB	Temperature store base
TST1B	Temperature store 1 base
TSTT	Temperature store top
TST2B	Temperature store 2 base
TSFL	Temperature solar flow
TSRE	Temperature solar return
TSFB	Temperature solid fuel boiler
TSTR	Temperature store return preahting
TRET	Temperature - return
S3	Temperature sensor 3
S4	Temperature sensor 4
S5	Temperature sensor 5
n1	Speed relay 1

Display	Description
n2	Speed relay 2
n3	Speed relay 3
n4	Status relay 4
h R1	Operating hours relay 1
h R2	Operating hours relay 2
h R3	Operating hours relay 3
h R4	Operating hours relay 4
L/MIN	Flow rate Grundfos sensor
BAR	System pressure
TSFL	Temperature solar flow RPS
TSRE	Temperature solar return VFS
TFHQM	Temperature flow heat quantity measurement
TRHQM	Temperature return heat quantity measurement
L/h	Flow rate V40 or flow gauge
kWh	Heat quantity in kWh
MWh	Heat quantity in MWh
TDIS	Temperature thermal disinfection
CDIS	Countdown thermal disinfection
DDIS	Heating period thermal disinfection
TIME	Time
DATE	Date

* R4 is a standard relay not suitable for speed control. Therefore, its status is indicated with 0 % or 100% respectively.

5 Initial commissioning

When the hydraulic system is filled and ready for operation, connect the controller to the mains.

The controller runs an initialisation phase in which all symbols are indicated in the display. The directional pad flashes red.

Commissioning menu

The commissioning menu consists of the channels described in the following. In order to make an adjustment, push button (5). The set symbol flashes and the adjustment can

1. Language:

→ Adjust the desired menu language.

2. Unit:

→ Adjust the desired unit.

3. Time:

→ Adjust the clock time. First of all adjust the hours, then the minutes.

4. Date:

→ Adjust the date. First of all adjust the year, then the month and then the day.

5. System:



→ Adjust the desired system.

6. Maximum store temperature:


→ Adjust the maximum store temperature. In 2-store systems, the adjustment has to be carried out for **S1MAX** and **S2MAX** as well.

When the controller is commissioned for the first time or when it is reset, it will run a commissioning menu after the initialisation phase. The commissioning menu leads the user through the most important adjustment channels needed for operating the system and starts with the indication of the BX version number.

be made. Confirm the adjustment with button (5). Push button (3), the next channel will appear in the display.

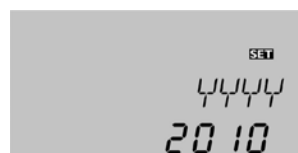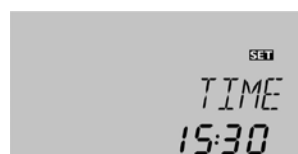

Button navigation

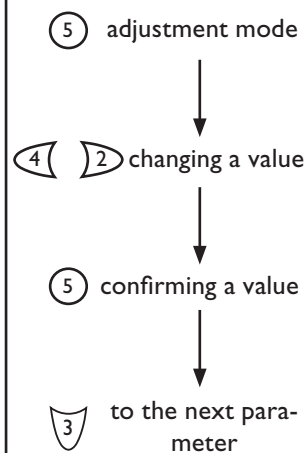


7. Loading store 2:

- Switch on or off the “loading store 2” option.



Note:

“Loading store 2” can only be adjusted if a 2-store system or store loading in layers has been selected in the sub channel **ARR**.

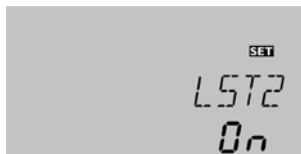

8. Pump control type:

- Adjust the type of pump control for **PUMP1**
Carry out this adjustment for **PUMP2** if needed.



9. Minimum speed:

- Adjust the minimum pump speed for **PUMP1**
In systems with 2 pumps, the adjustment has to be carried out for **PUMP2** as well.



Note:

The minimum speed can only be adjusted if pulse control (PULS) or PWM control (A, b, C) has been selected in the sub channel **PUMP1,2**.

10. Maximum speed:

- Adjust the maximum pump speed for **PUMP1**
In systems with 2 pumps, the adjustment has to be carried out for **PUMP2** as well.




Note:

The maximum speed can only be adjusted if pulse control (PULS) or PWM control (A, b, C) has been selected in the sub channel **PUMP1,2**.

11. Range of the flow rate sensor:

- Adjust the range of the sensor, if the flow rate sensor is connected.

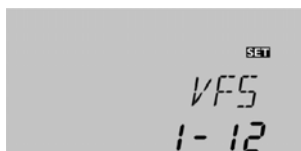

12. Range of the pressure sensor:

- Adjust the range of the sensor, if the pressure sensor is connected.



- **Complete the commissioning menu by pressing button 5:**

The controller is then ready for operation and normally the factory settings will give close to optimum operation.



6 Functions and options

6.1 Status level

Display of blocking protection time

Blocking protection

BLPR1(2, 3)

Blocking protection active




Display of drainback time periods

Initialisation

INIT


Initialisation active

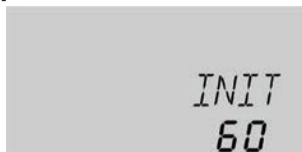

Filling time

FLLT


Filling time active

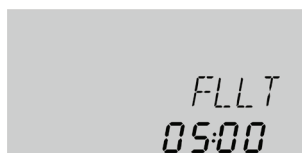

Stabilisation

STAB

Stabilisation

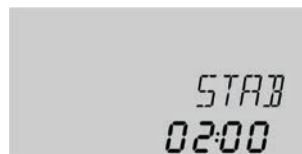

Display of collector temperatures

TCOL(1, 2)

Collector temperature

Display range: -40...+260 °C




Display of store temperatures

TST(1, 2)B, TST(1)T

Store temperatures

Display range :

-40...+260°C

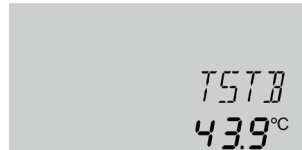

Display of temperatures at S3, S4 and S5

S3, S4, S5

Sensor temperatures

Display range : -40...+260 °C



Note:

The values and adjustment channels shown depend on the selected system, the functions and options and will only be displayed in the expert level.

In order to protect the pumps against blocking after stand-still, the controller is equipped with a blocking protection function. This function switches on the relays every day at 12:00 a.m. for 10 s at 100%.

Indicates the time adjusted in tDTO, running backwards.

Indicates the time adjusted in tFLL, running backwards.

Indicates the time adjusted in tSTB, running backwards.

Displays the current collector temperature.

- TCOL : Collector temperature (1-collector system)
- TCOL1 : Collector temperature 1 (2-collector system)
- TCOL2 : Collector temperature 2 (2-collector system)

Displays the current store temperature.

- TSTB : Store temperature base
 - TSTT : Store temperature top
- in 2-store systems (only if available):
- TST1T : Temperature store 1 top
 - TST1B : Temperature store 1 base
 - TST2T : Temperature store 2 top
 - TST2B : Temperature store 2 base

Indicates the current temperature at the corresponding additional sensor (without control function).

- S3 : Temperature sensor 3
- S4 : Temperature sensor 4
- S5 : Temperature sensor 5



Note:

Only if temperature sensors are connected, will S3, S4 and S5 be displayed.



Note:

In systems with return preheating, S3/S5 is used as the heat source sensor TSTR.

Display of further temperatures


TSFB, TRET, TSTR,

TFHQM, TRHQM,

TSFL(RPS), TSRE (VFS)

Other measured temperatures

Display range: -40 ... +260 °C

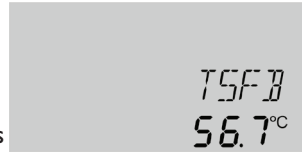

Indicates the current temperature at the corresponding sensor. The display of these temperatures depends on the system selected.


- TSFB : Temperature solid fuel boiler
- TRET : Temperature heating return
- TSTR : Temperature store return preheating
- TFHQM : Temperature flow (HQM)
- TRHQM : Temperature return (HQM)

Display of flow rate

L/H

Flow rate

Display range: 0 ... 9999 l/h

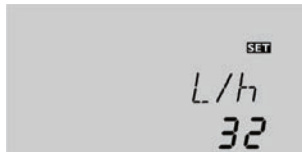


Indicates the measured current flow rate in the solar system. The flow rate value is used for calculating the heat quantity supplied (V40).

Display of flow rate

L/MIN

Flow rate

Display range: 0 ... 999 l/min

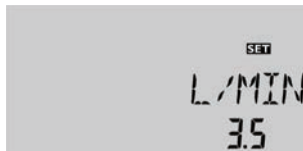

Indicates the measured current flow rate in the solar system. The flow rate value is used for calculating the heat quantity supplied (VFS).

Display of pressure

BAR

Pressure

Display range: 0 ... 10 bar



Indicates the current system pressure.



Note:

The pressure will only be indicated if an RPS sensor is used.

Display of speed

M1%, M2%, M3%

Current pump speed

Display range: 30 ... 100 %

standard pump;

20 ... 100 % HE pump




Indicates the current speed of the corresponding pump.

Operating hours counter

HR (1, 2, 3, 4)

Operating hours counter

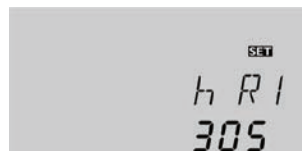

The operating hours counter accumulates the solar operating hours of the relay (h R1 / h R2 / h R3 / h R4). Full hours are displayed.

The accumulated operating hours can be set back to 0. As soon as one operating hours channel is selected, the symbol **SET** is displayed.

→ In order to access the RESET-mode of the counter, press the set button **5**.

The display symbol **SET** will flash and the operating hours will be set to 0.

→ Confirm the reset with the set button **5** in order to finish the reset.

In order to interrupt the RESET-process, do not press any button for about 5 s. The display returns to the display mode.

Display of heat quantity

KWh/MWh:

Heat quantity in kWh / MWh



Indicates the heat quantity produced in the system. For this purpose, the heat quantity measurement option has to be enabled.

The flow rate as well as the values of the reference sensors S1 (flow) and S4 (return) are used for calculating the heat quantity supplied. It is shown in kWh in the channel **kWh** and in MWh in the channel **MWh**. The overall heat quantity results from the sum of both values.

The accumulated heat quantity can be set back to 0. As soon as one of the display channels of the heat quantity is selected, the symbol **SET** is displayed.

→ In order to access the RESET-mode of the counter, press the set button **5** for approx. 2 s.

The display symbol **SET** will flash and the heat quantity will be set to 0.

→ Confirm the reset with the set button in order to finish the reset.

In order to interrupt the RESET process, no button should be pressed for about 5 s. The display returns to the display mode.

Display of monitoring period

CDIS

Countdown of monitoring period

Display range:

0 ... 30:0 ... 24 (dd:hh)



If the thermal disinfection option (**OTDIS**) is activated and the monitoring period is in progress, the remaining time of the monitoring period is displayed as **CDIS** (in hours and minutes), counting backwards.


Display of starting time

SDIS

Starting point

Display range:

0:00 ... 24:00 (time)

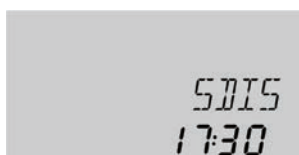

If the thermal disinfection option (**OTDIS**) is activated and starting delay time has been adjusted, the adjusted delay time is displayed (flashing) in this channel.


Display of heating period

DDIS

Heating period

Display range:

0:00 ... 23:59 (hh:mm)

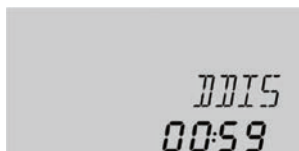


If the thermal disinfection option (**OTDIS**) is activated and the heating period is in progress, the remaining time of the heating period is displayed (in hours and minutes) in this channel, counting backwards.

Display of time

TIME

Time

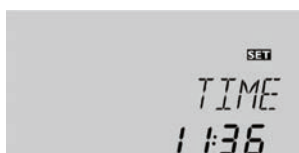

Adjust the current clock time.

6.2 Adjustment channels

Selecting the system

ARR

System

Adjustment range: 1 ... 26

Factory setting: 1



Selection of the appropriate system. Each system has pre-programmed options and adjustments which can be activated or changed respectively if necessary. Select the system first (see chap. 3).


ΔT -regulation

LOAD(1, 2) / DT(1, 2) 0

Switch-on temperature difference

Adjustment range: 1.0 ... 50.0 K
in steps of 0.5 K

Factory setting: 6.0 K

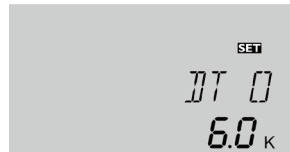

The controller works as a standard differential controller. If the switch-on difference is reached, the pump is activated. When the temperature difference reaches or falls below the adjusted switch-off temperature difference, the respective relay switches off.

LOAD 2) / DT(1, 2) F

Switch-off temperature difference

Adjustment range: 0.5 ... 49.5 K
in steps of 0.5 K

Factory setting: 4.0 K



Note: The switch-on temperature difference is blocked against the switch-off temperature difference by 0.5 K. **DT 0** must be at least 0.5 K higher than **DT F**. The set temperature difference must be at least 0.5 K higher than the switch-on temperature difference.

Speed control

LOAD(1, 2) / DT(1, 2) S

Set temperature difference

Adjustment range: 1.5 ... 50.0 K
in steps of 0.5 K

Factory setting: 10.0 K




Note: To enable speed control, the corresponding relay has to be set to "Auto" (adjustment channel **MAN**) and the pump control type has to be set to Puls,A, b, or C (adjustment channel **PUMP**).

LOAD(1, 2) / RIS(1, 2)

Rise

Adjustment range: 1 ... 20 K
in steps of 1 K

Factory setting: 2 K

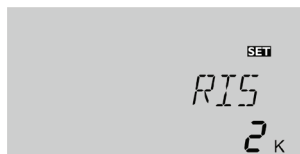

When the switch-on temperature difference is reached, the pump is activated at 100% speed for 10 s. Then, the speed is reduced to the minimum pump speed value.

If the temperature difference reaches the adjusted nominal value (**DT S**), the pump speed increases by one step (10 %). The response of the controller can be adapted via the parameter "Rise". If the difference increases by the adjustable rise value **RIS**, the pump speed increases by 10 % until the maximum pump speed of 100 % is reached. If, at decreasing temperatures, the temperature difference decreases by the adjustable rise value **RIS**, the pump speed decreases by 10 %.

Maximum store temperature

LOAD(1, 1,2) / S(1,2) MAX


Maximum store temperature

Adjustment range:

4 ... 95 °

in steps of 1 °C

Factory setting: 60 °C

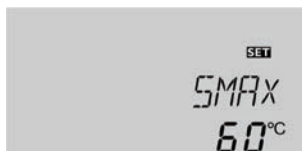

If the store temperature reaches the adjusted maximum temperature, the store will no longer be loaded in order to avoid damage caused by overheating. If the maximum store temperature is exceeded, ☀ is displayed (flashing).

The corresponding reference sensor can be chosen, see "Sensor maximum store temperature".

Switch-on hysteresis -2K

Sensor maximum store temperature

LOAD(1,2) / S(1,2)MAXS

Sensor store maximum temp.

Adjustment range:


1-store system: S2, S3

2-store system: S4, S5

Factory setting:

1-store system: S2

2-store system: S4

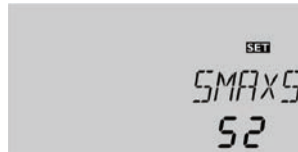

Allocation of the sensor for store maximum limitation. The maximum limitation always refers to the sensor selected. If S3 is selected, the differential control will be carried out using S1 and S2. The temperature at S2 can exceed the adjusted limit temperature, the system will not switch off. If the value at S3 reaches the limit temperature, the system will be switched off.



Note:

In 1-store systems with sensor S3 as the reference sensor, loading will be switched off if the temperature at S2 or S3 reaches the store emergency shutdown temperature.

In 2-store systems, loading will be switched off if the temperature at S4 or S5 reaches the store emergency shutdown temperature.


Loading store 2

LOAD2 / LST2

Loading store 2

Selection: ON / OFF

Factory setting: ON

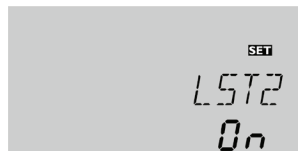

In a 2-store system, the second store can be switched off for loading via the parameter **LST2**.

If **LST2** is adjusted to **OFF**, the system runs like a 1-store system. The representation in the display does not change.

With this parameter, the pump control type can be adjusted. The following types can be selected:

Adjustment for standard pump without speed control

- OnOF (pump on / pump off)

Adjustment for standard pump with speed control

- PULS (pulse packet control via semiconductor relay)

Adjustment for high efficiency pump (HE pump)

- PWMA (Wilo)
- PWM b (Grundfos)
- PWM C (Laing)

Pump control

PUMP / PUMP1 (2, 3)

Pump control

Selection: OnOF, Puls, PWM A,

PWM b, PWM C,

Factory setting:

PUMP 1: PWM A

PUMP 1: PWM A

PUMP 1: OnOf



Note:

PUMP3 can only be set to OnOf or PULS.



Note:

For more information about connecting HE pumps, see page 68.


Minimum speed

PUMP1 (2, 3) / n1 (2, 3) LO

Speed control

Adjustment range: 20 ... 100 %
in steps of 5%

Factory setting: 30 %

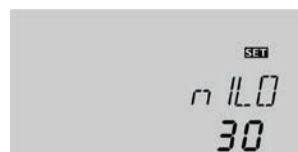

In the adjustment channel **n1(2, 3)LO**, a relative minimum speed for connected pumps can be allocated to the outputs R1, R2 and R3.



Note:

When loads which are not speed-controlled (e.g. valves) are used, the value of the corresponding relay (n1, n2, n3) must be set to 100% or the pump control type must be set to OnOF in order to deactivate pump speed control.


Maximum speed

PUMP1 (2, 3) / n1 (2, 3) HI

Speed control

Adjustment range: 20 ... 100 %
in steps of 5%

Factory setting: 100 %

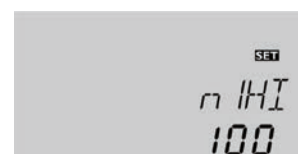

In the adjustment channel **n1(2, 3)HI**, a relative maximum speed for connected pumps can be allocated to the outputs R1, R2 and R3.



Note:

When loads which are not speed-controlled (e.g. valves) are used, the value of the corresponding relay (n1, n2, n3) must be set to 100% or the pump control type must be set to OnOF in order to deactivate pump speed control.

Collector emergency shutdown

COL(1,2) / CEM(1,2)


Collector emergency temperature

Adjustment range: 80 ... 200 °C

in steps of 1 °C

Factory setting: 130 °C

Switch-on hysteresis: -10 K

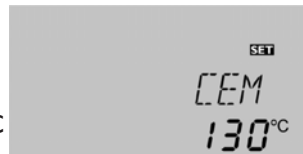

When the collector temperature exceeds the adjusted collector emergency temperature (**CEM** / **CEM1** / **CEM2**), the solar pump (R1 / R2) is switched off in order to protect the system components against overheating (collector emergency shutdown). If the maximum collector temperature is exceeded, Δ is displayed (flashing).



Note:

If the drainback option **ODB** is activated, the adjustment range of the collector emergency temperature is changed to 80 ... 95 °C. Factory setting in that case is 95 °C.

WARNING!



Danger of injury and system damage through pressure surges!

If water is used as a heat transfer medium in a pressure-less system, the water will start boiling at 100 °C.

→ If a **pressure-less drainback system** is used with water as a heat transfer medium, do not adjust the collector temperature limitation **CEM** to more than 95 °C!

Collector cooling

COL(1,2) / OCCO(1,2)

Adjustment range ON / OFF

Factory setting: OFF



COL (1,2) / OCCO(1,2) /
CMAX(1,2)

Collector maximum temp.

Adjustment range: 70 ... 160 °C

in steps of 1 °C

Factory setting: 110 °C

Switch-on hysteresis: -5K



This function is used for keeping the system temperatures and consequently the thermal load as low as possible.

When the store temperature exceeds the adjusted maximum store temperature, the system stagnates. If the collector temperature increases to the adjusted maximum collector temperature, the solar pump is activated until the collector temperature falls below the maximum collector temperature. The store temperature may then exceed the maximum temperature, but only up to 95°C (emergency shutdown of the store).

If the collector cooling is active, $\star$ is displayed (flashing).



Note:

This function is only available, if the system cooling function and the heat dump function are deactivated.


Minimum collector limitation

COL(1,2) / OCM(1,2)

Collector minimum temp.

Adjustment range: ON / OFF

Factory setting: OFF

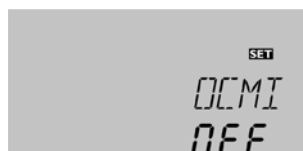

COL (1,2) / OCM(1,2) /
CMIN(1,2)

Collector minimum temp.

Adjustment range: 10 ... 90 °C

in steps of 1 °C

Factory setting: 10 °C



The minimum collector temperature is the minimum switch-on temperature which must be exceeded for the solar pump (R1 / R2) to switch on. The minimum temperature prevents the pump from being switched on too often at low collector temperatures. If the collector temperature falls below the adjusted minimum temperature, $\star$ is displayed (flashing).

Tube collector function

COL / OTCO (1, 2)

Tube collector function

Selection: ON / OFF

Factory setting: OFF




COL / OTCO (1, 2) / TCST (1, 2)

Starting time

Adjustment range:

00:00 ... 23:00

Factory setting: 07:00

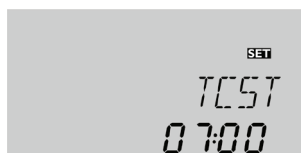

COL / OTCO (1, 2) / TCEN (1, 2)


Ending time

Adjustment range:

00:30 ... 23:30

in steps of 00:30

Factory setting: 19:00

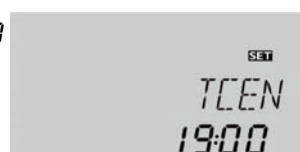

COL / OTCO (1, 2) / TCRU (1, 2)

Runtime

Adjustment range: 30 ... 300 s

in steps of 5 s

Factory setting: 30 s




COL / OTCO (1, 2) / TCIN (1, 2)

Standstill interval

Adjustment range: 5 ... 60 min

in steps of 00:01

Factory setting: 30 min

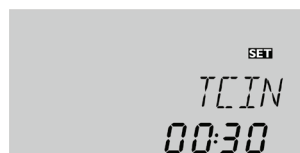

Antifreeze function

COL (1) / OCFR

Antifreeze function

Selection: ON / OFF

Factory setting: OFF



COL (1) / OCFR / CFR O

Antifreeze temperature on

Adjustment range: -40...+8 °C

Factory setting: 4 °C



COL (1) / OCFR / CFR F

Antifreeze temperature off

Adjustment range: -39...+9 °C

Factory setting: 5 °C



COL (1) / OCFR / FRPST

Sensor selection

Selection: 1, 2

Factory setting: 1

in 2-store systems only



This function helps overcome the non-ideal sensor position with some tube collectors.

This function operates within an adjusted time frame, beginning at **TCST** and ending at **TCEN**. It activates the collector circuit pump for an adjustable runtime (**TCRU**) between adjustable standstill intervals (**TCIN**) in order to compensate for the delayed temperature measurement.

If the runtime **TCRU** is set to more than ten seconds, the pump will be run at 100 % for the first 10 s of the runtime. For the remaining runtime, the pump will be run at the adjusted minimum speed **nLO**.

If the collector sensor is defective or the collector is blocked, this function is suppressed or switched off.

2-collector systems

In 2-collector systems, the tube collector function is available for each collector field (**OTCO2**).

If one of the collector fields is being loaded, the heat transfer fluid flows through the inactive field and only the corresponding relay is energised.

Multi-store systems

If the tube collector function is activated, the speed of the solar pump will decrease to **nLO** during the loading break time. The solar loading of the subordinate store will continue.

In 2-collector systems, during the loading break time the collector field which has been active before the loading break time remains active during the loading break time, unless the tube collector function of the inactive field becomes active.



Note:

If the drainback option **ODB** is activated, the tube collector function **OTCO** will not be available.

The antifreeze function activates the loading circuit between the collector and the store when the temperature falls below the adjusted temperature **CFR O**. This will protect the fluid against freezing or coagulating. If **CFR F** is exceeded, the solar pump will be switched off again.

The antifreeze function will be suppressed if the store temperature of the selected store falls below 5 °C. In 2-store systems, the function will switch to the second store, in systems with store loading in layers, it will switch to the upper store zone. If the temperature of the second store (or of the upper store zone respectively) also falls below 5 °C, the system will be switched off.



Note:

Since this function uses the limited heat quantity of the store, the antifreeze function should be used in regions with few days of temperatures around the freezing point.



Note:

This function can only become active if the store temperature is higher than the collector temperature.

Priority logic



Note:

Priority logic can be used in 2-store systems or systems with store loading in layers only.

Priority logic can be used in 2-store systems or systems with store loading in layers only and determines how the heat is divided between the stores. Different types of priority logic are adjustable:

store sequence control (1 and 2)

successive loading (Su 1 and Su 2)

parallel loading (0)

LLOGI / PRIO

Priority logic

Adjustment range:

0, 1, 2, Su1, Su2

Factory setting: 1

Factory setting: 2 (stratified store)



LLOGI / TLB

Loading break time

Adjustment range: 1 ... 30 min

Factory setting: 2 min



LLOGI / TRUN

Oscillating loading time

Adjustment range: 1 ... 30 min

Factory setting: 15 min



1. If **PRIO 1** or **PRIO 2** is adjusted, the corresponding store (1=store 1; 2=store 2) will be loaded with priority if its switch-on conditions are fulfilled and if it is not blocked. If the priority store is not blocked but its switch-on conditions are not fulfilled, the store sequence control starts provided that the switch-on conditions of the subordinate store are fulfilled.

If a subordinate store can be loaded, it will be loaded for the oscillating loading time **tRUN**. After the loading time has ended, the pump is switched off for the loading break **tLB**. If during this time the priority store can be loaded, it will be loaded. If the priority store has reached its maximum temperature, the subordinate store will be loaded up to its maximum temperature without oscillating loading logic.

2. If priority **Su 1** or **Su 2** is adjusted, the priority store will be loaded up to its maximum temperature. If the maximum temperature is reached, the second store will be loaded. If the temperature of the first store falls below **SMAX**, the second store will no longer be loaded, regardless of whether the switch-on conditions of the priority store or of the subordinate store are fulfilled or not.

3. In systems with 2 pumps, both stores will be loaded if the corresponding switch-on conditions are fulfilled if **PRIO 0** is adjusted.

In systems with 3-port valves, the store with the lowest temperature will be loaded first until its temperature is by 5 K above the other store. Loading will be switched to the other store. Then, the 2 stores will be loaded alternately in steps of 5 K.



Note:

If priority **Su 1** or **Su 2** is adjusted, solar loading of the subordinate store will be interrupted, if the temperature of the priority store (store1 for Su 1, store2 for Su 2) falls below its adjusted maximum temperature. If, in that case, the temperature difference between the priority store and the collector is not sufficiently high, solar loading will be stopped completely.

Store set option

LLOGI / PRIO / OSTS

Store set option

Selection ON / OFF

Factory setting: OFF




LLOGI / PRIO / TST1

Set temperature store 1

Adjustment range: 4 ... 85 °C

Factory setting: 45 °C

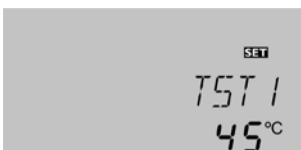


LLOGI / PRIO / TST2

Set temperature store 2

Adjustment range: 4 ... 85 °C

Factory setting: 45 °C

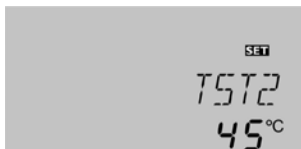

Additionally, the following options can be activated:

Store set option OSTS: If the selected priority store reaches its set temperature, the subordinate store will be loaded until it reaches its set temperature. After that, the priority store will be loaded up to its maximum store temperature, then the subordinate store. This function is available in all 2-store systems.

Spreaded loading option

(for PRIO 1, 2, Su 1 or Su 2 only)

LLOGI / PRIO / OSE

Spreaded loading option

Selection: ON / OFF

Factory setting: OFF



LLOGI / PRIO / DTSE

Temperature diff. Spreaded loading

Adjustment range: 20 ... 90 K

Factory setting: 40 K



Spreaded loading option OSE: In 2-store systems with 2 pumps, a spreaded loading function can be activated.

As soon as the adjustable spread difference **DTSE** between the collector and the priority store is reached, the second store will be loaded in parallel unless it is blocked. If the temperature difference falls by 2 K below **DTSE**, the pump is switched off.

The collector temperature has to be higher than the store temperature.


Pause control

LLOGI / PSPEE

Pause speed

Selection: ON / OFF

Factory setting: OFF

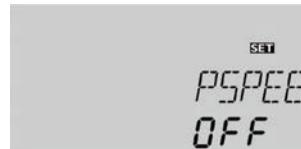


LLOGI / PDELA

Pump delay

Selection: ON / OFF

Factory setting: OFF

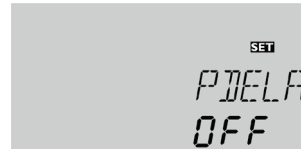

This function takes into account the actuation times of valves and switches on the pump with a delay.

If the pause speed is activated, the relay of the store which has been loaded last remains switched on during the loading break time. Speed is determined by the value adjusted in nLO.

If the pump delay is activated, the corresponding relay for the valve will be energised first. The pump(s) will be activated with the delay time (200s).



Note:

In systems with pump logic, the parameter **PDELA** is not available.

Drainback option

LLOGI / ODB

Drainback option

Selection: ON / OFF

Factory setting: OFF



A drainback system permits the heat transfer fluid to drain back into the holding tank when solar energy is not collected. The drainback option will initiate the filling of the system when solar loading begins. If the function is activated, the menu items described in the following (**tDTO**, **tFLL** and **tSTB**) have to be adjusted:



Note:

A drainback system requires additional components such as a holding tank. The drainback option should only be activated if all components required are properly installed.



Note:

The drainback option is only available in system with one store and one collector field and if no cooling function is activated.



Note:

If the drainback option **ODB** is activated, the cooling functions and the antifreeze function will not be available.



Note:

If the drainback option **ODB** is activated, the factory settings of the parameters **DT O**, **DT F** and **DT S** will be adapted to values suiting drainback systems. Additionally, the adjustment range and the factory setting of the collector emergency shutdown **CEM** will change.

Previous adjustments made in these channels will be overridden and have to be entered again if **ODB** is deactivated later on.

Time period - switch-on condition

LLOGI/008/TOTO

Time period - switch-on condition

Adjustment range: 1 ... 100 s
in steps of 1 s

Factory setting: 60 s



The parameter **tD_{TO}** is used for adjusting the time period during which the switch-on condition **DT O** must be permanently fulfilled.

Filling time

LLOGI/008/TFLL


Filling time

Adjustment range:

1.0 ... 30.0 min

in steps of 0.5 min

Factory setting: 5.0 min

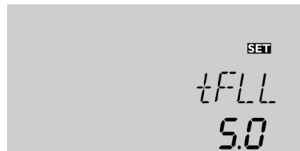

The filling time can be adjusted using the parameter **tF_{LL}**. During this period, the pump runs at 100 % speed.

Stabilisation

LLOGI/008/TSTB


Stabilisation

Adjustment range:

1.0 ... 15.0 min

in steps of 0.5 min

Factory setting: 2 min

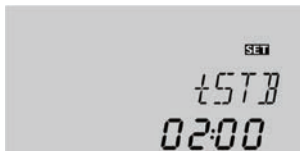

The parameter **tS_{TB}** is used for adjusting the time period during which the switch-off condition **DT F** will be ignored after the filling time has ended.

Booster function

LLOGI/008/OBST

Booster function

Adjustment range: ON / OFF

Factory setting: OFF



This function is used for switching on a second pump when filling the solar system. When solar loading starts, R3/R4 is energised in parallel to R1. After the filling time (**tF_{LL}**) has ended, R2 is switched off.



Note:


The booster function is available in systems 1, 3, 8, 9, and 10 only.

Overrun

LLOGI/00VRU

Selection: ON / OFF

Factory setting: OFF

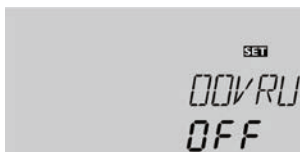

By means of this function, store loading continues after the temperature difference between the collector and the store has fallen below the switch-off difference. Store loading is stopped if the adjusted ΔT overrun difference between flow and return sensor is underrun.




Note:

The overrun function is only available, if both Grundfos sensors (VFS and RPS) are used.

LLOGI/DTOVR

Adjustment range: 0.0 ... 20.0 K

Factory setting: 5.0 K

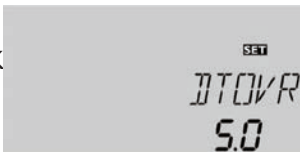

Cooling functions


System cooling

COOL / OSYC

System cooling option

Adjustment range: ON / OFF

Factory setting: OFF

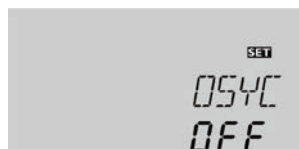


COOL / DTCD

Switch-on temperature diff.

Adjustment range: 1.0 ... 30.0 K

Factory setting: 20.0 K

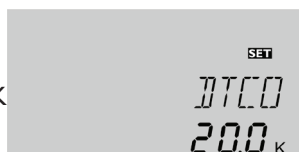

COOL / DTCE

Switch-off temperature diff.

Adjustment range: 0.5 ... 29.5 K

Factory setting: 15.0 K




Store cooling

COOL / OSTC

Option store cooling

Adjustment range: ON / OFF

Factory setting: OFF

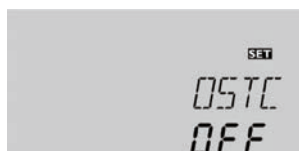

Heat dump

COOL / OHDP

Heat dump function

Selection: ON / OFF

Factory setting: OFF




COOL / OTCL

Overtemperature collector

Adjustment range: 70 ... 160 °C

Factory setting: 110 °C

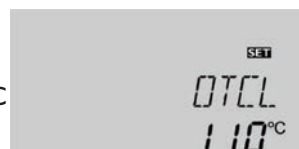


COOL / OTPUM

Pump or valve logic

Selection: ON / OFF

Factory setting: OFF

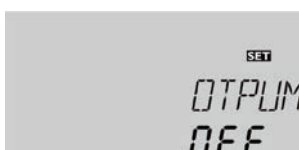

COOL / HDREL

Relay heat dump function

Selection: system dependent

Factory setting: 3



Different cooling functions can be activated: system cooling, store cooling and heat dump.



Note:

If the temperature at the store sensor reaches 95°C, all cooling functions will be blocked. The switch-on hysteresis is -2K.

The system cooling function aims to keep the solar system operational for a longer time. The function overrides the maximum store temperature to provide thermal relief of the collector field and the heat transfer fluid on hot days.

If the store temperature is higher than the adjusted maximum store temperature and the switch-on temperature difference **DTCD** is reached, the solar system remains activated or is switched on. Solar loading is continued until either the temperature difference falls below the adjusted value **DTCE** or the collector emergency shutdown temperature **CEM** is reached.

If the system cooling function is active, ☀ is shown on the display (flashing).



Note:

This function will only be available if the collector cooling function, the heat dump function, and the drainback option are deactivated.

When the store cooling function is activated, the controller aims to cool down the store during the night in order to prepare it for solar loading on the following day.

If the adjusted maximum store temperature (**S MAX / S1MAX / S2MAX**) is exceeded and the collector temperature falls below the store temperature, the system will be reactivated in order to cool down the store.

Reference temperature differences are **DT O** and **DT F**.

If the heat dump function **OHDP** is activated, the selected relay is energised with 100%, if the collector temperature reaches the adjusted collector overtemperature **OTCL**.

If the collector temperature falls by 5 K below the adjusted collector overtemperature **OTCL**, the relay will be switched off.

A selection can be made between pump logic and valve logic (**OTPUM ON** = pump logic, **OTPUM OFF** = valve logic).

If pump logic is selected, the relay for solar loading switches off and the relay for heat dump remains switched on.

The relay for the heat dump function can be selected in the **HDREL** channel.



Note:

The adjustable value **OTCL** is locked against the collector emergency temperature **CEM** by 10 K. The heat dump will only be available if the collector cooling function, the system cooling function, and the drainback option are deactivated.

Heat exchange function / solid fuel boiler / return preheating

DT3 / DT30

Switch-on temperature diff.
Adjustment range: 1.0 ... 50.0 K
in steps of 0.5 K
Factory setting: 6.0 K



DT3 / DT3F

Switch-off temperature diff.
Adjustment range: 0.5 ... 49.5 K
in steps of 0.5 K
Factory setting: 4.0 K



DT3 / DT3S

Set temperature diff.
Adjustment range: 0.5 ... 50.0 K
in steps of 0.5 K
Factory setting: 10.0 K



DT3 / RIS3

Rise
Adjustment range: 1 ... 20 K
in steps of 1 K
Factory setting: 2 K



The heat exchange function is used for transporting heat from store 1 to store 2.

Additionally, minimum and maximum temperature limits and the corresponding switch-on and switch-off differences can be set for the independent temperature differential control. Both switch-on and switch-off temperature differences **DT30** and **DT3F** as well as the set temperature difference **DT3S** and rise **RIS3** are valid.

Maximum temperature limitation


DT3 / MAX30

Switch-on temperature
Adjustment range: 0.5...95.0 °C
Factory setting: 60 °C



DT3 / MAX3F

Switch-off temperature
Adjustment range:
0.0 ... 94.5 °C
Factory setting: 58 °C

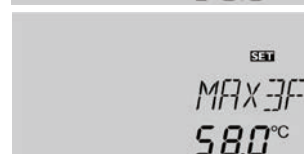

If the adjusted value **MAX30** is exceeded, the relay will be switched off. If the temperature falls below the adjusted value **MAX3F**, the relay will be energised.

Reference sensor:


S3 for ARR 8, 13, 26 (TSTT)

S4 for ARR 2, 11, 16, 17, 18, 24 (TST2B)

Minimum temperature limitation


DT3 / MIN30

Switch-on temperature
Adjustment range:
0.0 ... 89.5 °C
Factory setting: 5 °C

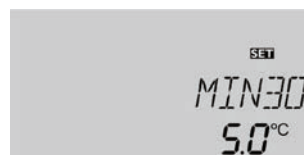

DT3 / MIN3F

Switch-off temperature
Adjustment range:
0.5...90.0 °C
Factory setting: 10 °C
ARR= 2, 11, 16, 17, 18
MIN30 5,0 °C
MIN3F 10,0 °C
ARR= 8, 13, 26
MIN30 60,0 °C
MIN3F 65,0 °C

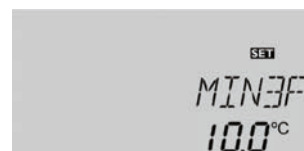

If the temperature falls below the adjusted value **MIN30**, the relay will be switched off. If the adjusted value **MIN3F** is exceeded, the relay will be energised.


Reference sensor:

S3 for ARR 8, 13, 26 (TSFB)

S4 for ARR 2, 11, 16, 17, 18, 24 (TSTT)

DT3 / S2DT3

Reference sensor store 1
Selection: 2, 3
Factory setting: 3
Reference sensor store 2
Selection: 4, 5
Factory setting: 4

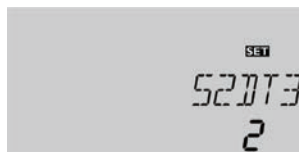

The reference sensor for the heat exchange function (heat source) for store 1 is sensor S3 (TSTT). The reference sensor (heat sink) for store 2 (S2DT3) is S4. It can be changed to S5 and is used for the differential function and the maximum limitation.

For the solid fuel boiler function, the reference sensor (heat source) for the solid fuel boiler is sensor S4. The reference sensor (heat sink) for the store is S3, but it can be changed to S2.

Allocation of a sensor for the minimum and maximum limitation, instead of S4/S3.

Return preheating

DT3 / S2DT3

Reference sensor
Selection: 3, 5
Factory setting: 3



In order to heat the heating circuit return by means of heat supplied by the solar circuit, the controller is equipped with a return preheating function.

If the switch-on temperature difference **DT3O** between the sensors S3 or S5 (TSTR) and S4 (TRET) is exceeded, a 3-port valve for heating circuit backup is controlled via the relay output R2/R3. Free sensors (S3 or S5) can be allocated for this function (S2DT3).




Note:


In systems with east-/west collectors, S5 is not available.

Thermostat function

Afterheating

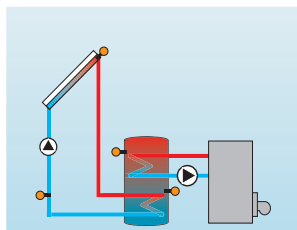

Use of surplus energy

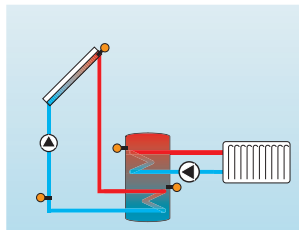

The thermostat function works independently from the solar operation and can be used for using surplus energy or for afterheating.

• **AH O < AH F**


thermostat function for afterheating

• **AH O > AH F**

thermostat function for using surplus energy


AH / AH O

Thermostat switch-on temp.
Adjustment range:
0.0...250.0 °C
in steps of 0.5 °C
Factory setting: 40.0 °C

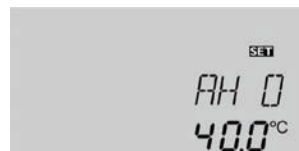

AH / AH F

Thermostat switch-off temp.
Adjustment range:
0.0...250.0 °C
in steps of 0.5 °C
Factory setting: 45.0 °C

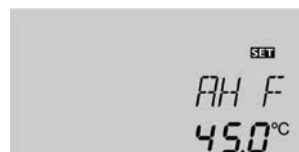


RH / T1O

Switch-on time 1

Adjustment range: 00:00...23:45

Factory setting: 06:00

in steps of 15 min

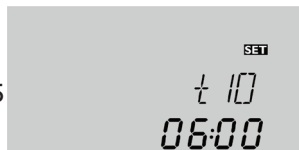


In order to block the thermostat function for a certain period, there are three time frames t1 ... t3. The switch-on and switch-off times can be adjusted in steps of 15 minutes. If the switch-on and the switch-off time are identical, the time frame is inactive.

RH / T1F

Switch-off time 1

Adjustment range: 00:00...23:45

Factory setting: 22:00

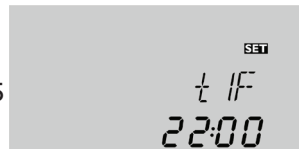

If the thermostat function should run from 06:00 a.m. and 09:00 a.m. only, adjust t1O to 06:00 a.m. and t1F to 09:00 a.m.

The first time frame is factory set from 06:00 to 22:00.

If all time frames are set to 00:00, the thermostat function is solely temperature dependent.

RH / T2 (3) O

Switch-on time 2 (3)

Adjustment range: 00:00 ... 23:45

Factory setting: 00:00

RH / T2 (3) F

Switch-off time 2 (3)

Adjustment range: 00:00 ... 23:45

Factory setting: 00:00

Manual mode

MAN / MAN1 (2, 3):

Adjustment range:

Auto, ON, OFF, nLO, nHI

Factory setting: Auto



For control and service work, the operating mode of the controller can be manually adjusted. For this purpose, select the adjustment value **MAN**. The following adjustments can be carried out:

MAN / MAN4

Adjustment range:

Auto, ON, OFF

Factory setting: Auto



Auto : relay in automatic mode

ON : relay is switched on

OFF : relay is switched off

nLO : relay is switched with adjusted minimum speed

nHI : relay is switched with adjusted maximum speed



Note:

Always adjust the operating mode back to "Auto" when the control and service work is completed. Otherwise normal operation will not be possible.

Blocking protection option

Blocking protection

BLPR1(2, 3)

Blocking protection

Selection: ON / OFF

Factory setting: OFF



In order to protect the pumps against blocking after standstill, the controller is equipped with a blocking protection function. This function switches on the relays 1-3 every day at 12:00 a.m. for 10 s at 100%.

Option: Thermal disinfection (OTDIS)


OTDIS

Thermal disinfection function
Adjustment range: ON / OFF
Factory setting: OFF



OTDES / PDIS

Monitoring period
Adjustment range:
0 ... 30:0 ... 24 (dd:hh)
Factory setting: 01:00

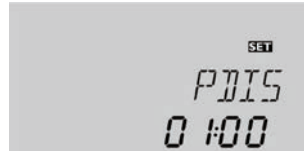


OTDES / DDIS

Heating period
Adjustment range:
00:00...23:59
Factory setting: 01:00



OTDES / TDIS

Disinfection temperature
Adjustment range: 0...95 °C
in steps of 1 °C
Factory setting: 60 °C

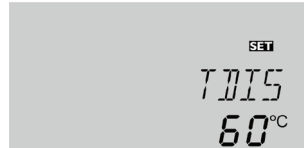


Note:

If the thermal disinfection option **OTDIS** is activated, the display channels **TDIS** and **CDIS** will be displayed. **TDIS** will be displayed regardless of the temperature measured at the reference sensor.

Thermal disinfection with starting delay

OTDIS / SDIS

Starting time
Adjustment range:
00:00 ... 24:00
Factory setting: 18:00
full hours only

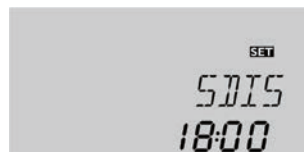

Reference sensor for the thermal disinfection is S3! It is possible to adjust this sensor in the channel TSDIS.

This function is used for protecting the upper store zone against legionella by activating the afterheating. For thermal disinfection, the temperature in the upper DHW store zone has to be monitored. This protection is ensured when, during the monitoring period **PDIS**, the disinfection temperature **TDIS** is continuously exceeded for the entire heating period **DDIS**. S3 is used as the reference sensor and displayed as **TSTT**.

If **OTD** is activated, **PDIS** will start as soon as the temperature at S3 falls below **TDIS**. The display channel **CDIS** appears, counting backwards the remaining time of **PDIS**. If, during the monitoring period, the temperature at S3 exceeds **TDIS** continuously for the duration of **DDIS**, thermal disinfection is considered complete and a new monitoring period begins.

If **CDIS** counts down to 00:00, relay 2 will be operated in order to use the afterheating for thermal disinfection. **CDIS** will then be replaced with a display channel **DDIS** showing the adjusted heating period. **DDIS** will start counting down the heating period as soon as **TDIS** is exceeded at S3. As long as **DDIS** is active, the temperature at S3 will be displayed as **TDIS** instead of **TSTT**.

If, during **DDIS**, the temperature at S3 exceeds **TDIS** by more than 5 K, relay 2 is switched off until the temperature falls below **TDIS** + 2 K.

If, during **DDIS**, the temperature at S3 falls below **TDIS**, the heating period will restart. **DDIS** can only be completed when **TDIS** is exceeded without interruption.

Due to the flexible control logic, the exact time of thermal disinfection is not predictable. In order to set a fixed time for the disinfection to be run, the starting delay **SDIS** must be used:

When a starting time for thermal disinfection with starting delay is adjusted in **SDIS**, the thermal disinfection will be delayed until that time, even after the **CDIS** has counted down to 00:00. If **CDIS** ends, for example, at 12:00, and **SDIS** has been set to 18:00, relay 2 will be operated with a delay of 6 hours at 18:00 instead of 12:00.

During the waiting time, **SDIS** is displayed with the adjusted starting time (flashing).


If, during the waiting time, the temperature at S3 exceeds **TDIS** for the adjusted heating period **DDIS**, thermal disinfection is considered complete and a new monitoring period begins.

If the starting time is adjusted to 00:00 (factory setting), the delay function is inactive.

Upon delivery, **OTDIS** is deactivated. The adjustment values **PDIS**, **TDIS**, **DDIS** and **SDIS** are displayed after the option has been activated. After the thermal disinfection function has been completed, the values will be "hidden" and the monitoring period will be displayed.

OTDIS / TSDIS

Sensor thermal disinfection
Adjustment range 2, 3, 4, 5
Factory setting: 3

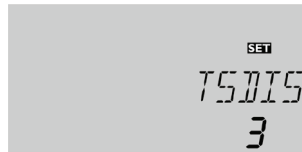

OTDIS / RDIS

Relay thermal disinfection
Adjustment range 2, 3, 4
Factory setting: 3



Parallel relay

OPARR / PARRE

Parallel relay
Adjustment range 2, 3, 4
Factory setting:
system-dependent



For this function, free sensors at an appropriate position can be selected. Reference sensor for the thermal disinfection is S3.

The relay for the thermal disinfection function can be selected.

With this function, e. g. a valve can be controlled in parallel to the pump via a separate relay **PARRE**.

If solar loading takes place (R1 and/or R2) or if a solar function is active, the relay selected will be energised. The parallel relay can also be energised inversely (**INVER**).



Note:

If R1 and/or R2 are in the manual mode, the selected parallel relay will not be energised.

Heat quantity measurement

OHQM

Heat quantity measurement
Adjustment range: ON / OFF
Factory setting systems
1-5, 8-16: ON
Factory setting systems
6, 7, 17-26: OFF



The heat quantity measurement can be carried out in 3 different ways (see below): without flowmeter V40, with flowmeter V40 or with Grundfos sensor.

→ Enable the heat quantity measurement option in the channel **OHQM**.

→ Select the type of flow rate detection in the channel **FTYPE**.

OHQM / FTYPE

Flow rate detection type
Selection: 1, 2, 3
Factory setting: 3



Flow rate detection type:

- 1 : fixed flow rate value
- 2 : V40
- 3 : VFS sensor



Note:

Type 3 can only be selected, if the VFS Grundfos sensor has been activated in the channel GFDS.

OHQM / FMAX

Flow rate
Adjustment range:
0,5... 100.0 l/min
in steps of 0.1 l/min
Factory setting: 6.0 l/min



Heat quantity measurement with fixed flow rate value

The heat quantity measurement calculation (estimation) uses the difference between flow and return temperature and the entered flow rate (at 100 % pump speed).

→ Adjust **1** in the channel **FTYPE**

→ Read the flow rate (l/min) and adjust it in the channel **FMAX**.

→ Adjust the antifreeze type and concentration of the heat transfer fluid in the channels **MEDT** and **MED%**.

OHQM / MEDT

Heat transfer fluid
Adjustment range: 0...3
Factory setting: 3



Note:

FMAX cannot be selected in systems with 2 solar pumps (ARR 6, 7, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26).

OHQM / MED%

Antifreeze concentration in vol.%
MED% is "hidden" when MEDT 0 or 3 is used
Adjustment range: 20 ... 70 %
in steps of 1 %
Factory setting: 45 %



OHQM / FIMP

Impulse rate
Adjustment range: 0.5 ... 99.0
in steps of 0.1
Factory setting: 1.0



HQM sensors

OHQM / SFHQM

Flow sensor
Adjustment range: 1, 2, 3, 5
Factory setting: 1



OHQM / SRHQM

Return sensor
Adjustment range: 2, 3, 4, 5
Factory setting: 4




Grundfos sensors and flow rate monitoring

GFDS / VFS

Selection: OFF / 1-12 / 2-40
Factory setting: 2-40


GFDS / RPS

Selection: OFF / 0-10
Factory setting: OFF

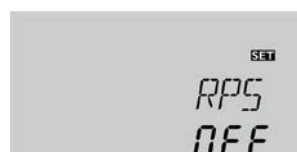

GFDS / OFLOW

Selection: ON / OFF
Factory setting: OFF

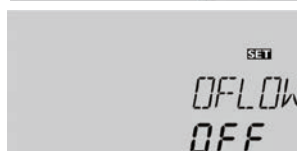

Antifreeze type:

- 0 : water
- 1 : propylene glycol
- 2 : ethylene glycol
- 3 : Tyfocor® LS / G-LS

Heat quantity measurement with flowmeter V40

The heat quantity measurement calculation uses the difference between flow and return temperature and the volume flow transmitted by the flowmeter.

- Adjust 2 in the channel **FTYPE**
- In the channel **FIMP**, adjust the impulse rate corresponding to the V40 flowmeter used.
- Adjust the antifreeze type and concentration of the heat transfer fluid in the channels **MEDT** and **MED%**.

Heat quantity measurement with VFS sensor:

The heat quantity measurement calculation uses the difference between flow and return temperature and the volume flow rate transmitted by the VFS sensor.

- Adjust 3 in the channel **FTYPE**
- Adjust the antifreeze type and concentration of the heat transfer fluid in the channels **MEDT** and **MED%**.

If the flow rate detection type FMAX or V40 has been adjusted, the flow and the return sensor for heat quantity measurement can be selected.

- In the channel **SFHQM** select the flow sensor.
- In the channel **SRHQM** select the return sensor.

For this function, free sensors at an appropriate position can be selected. The pre-adjusted flow sensor is S1, the return sensor is S4.

In this menu point the Grundfos sensors can be registered. If Grundfos sensors (VFS) are connected and registered, flow rate monitoring **OFLOW** can be carried out during solar loading. If no flow rate has been detected for 30 s, the error message **EFLOW** is displayed in the status menu (see flow rate monitoring option).



Note:

To deactivate the VFS or the RPS sensor, the functions using these sensors have to be deactivated first.

Overpressure

PRS > OVPR

Overpressure

Adjustment range: ON / OFF

Factory setting: OFF



PRS / OVPRO

on at

Adjustment range: 0.6 ... 6.0 bar

Factory setting: 5.5 bar



PRS / OVPRF

off at

Adjustment range: 0.3 ... 5.7 bar

Factory setting: 5.0 bar



Low pressure (leakage)

PRS / OLEAK

Low pressure

Adjustment range: ON / OFF

Factory setting: OFF



PRS / LEAKO

on at

Adjustment range: 0.3 ... 5.7 bar

Factory setting: 0.7 bar



PRS / LEAKF

off at

Adjustment range: 0.6 ... 6.0 bar

Factory setting: 1.0 bar



Time and date.


DATE/TIME

Time

Adjustment range:

00:00...23:59

Factory setting: 12:00

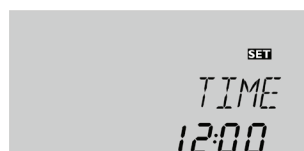


DATE/YYYY

Year

Adjustment range:

2010...2099

Factory setting: 2010

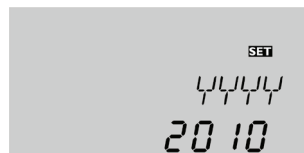

DATE/MM

Month

Adjustment range: 01...12

Factory setting: 03



DATE/DD

Day

Adjustment range: 01...31

Factory setting: 15



Temperature unit

UNIT

Temperature unit

Selection: °C, °F

Factory setting: °C



If the system pressure exceeds the adjustable maximum value **OVPRO**, an error message will appear. If the system pressure exceeds or falls below the switch-off threshold, the relay will be deblocked.

In the case of an overpressure, the message **EPRES** will be displayed.



Note:

The monitoring function is only available, if the Grundfos sensor RPS is used.

The switch-on threshold (factory setting 0.7 bar) can be adjusted. If the system pressure falls below the adjusted value, the error message is displayed until the system pressure exceeds the switch-off threshold (factory setting 1.0 bar).

In the case of low pressure, the message **ELEAK** will be displayed.



Note:

The monitoring function is only available, if the Grundfos sensor RPS is used.

The date and time can be entered. Both are required for the thermostat function.

In the display, the upper line indicates the day followed by the month. The lower line indicates the year.

In this adjustment channel the temperature unit can be chosen.

The unit can be switched between °C and °F during operation.


Language

LANG

Language

Selection: dE,En

Factory setting: En

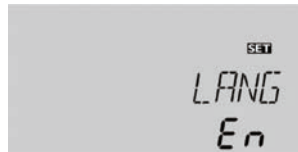

In this adjustment channel, the menu language can be chosen.

- dE : German
- En : English


SD card

OSDC / OSDC

SD card

Selection: ON / OFF

Factory setting: OFF

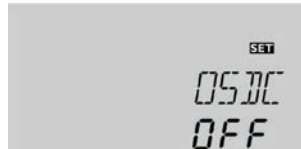

If an SD card is used, **COM** is shown on the display. If the SD card is full, **COM** is flashing.

Starting the logging

➔ Insert the SD card into the slot

Logging will start immediately.

➔ Adjust the desired logging interval

OSDC / LOGI

Logging interval

Adjustment range: 1 ... 1200 s

Factory setting: 60 s



When **LLOG** is activated, data logging will stop if the capacity limit is reached. The message **CFULL** will be displayed.

When **LLOG** (linear logging) is deactivated, the oldest data logged onto the SD card will be overwritten as soon as the capacity limit is reached.

OSDC / LLOG

Linear logging

Selection: ON / OFF

Factory setting: OFF




OSDC / REMC

Safely remove card

Selection: ON / OFF

Factory setting: OFF

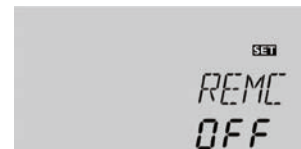

Completing the logging process

➔ Select the menu item **REMC**

➔ After **-REM** is displayed remove the card from the slot

OSDC / FORM

Format card



Formatting the SD card

➔ Select the menu item **FORM**

During the formatting process, **--FORM** will be displayed.

The content of the card will be deleted and the card will be formatted with the FAT file system.

Messages possible	Description
FSYS	File system error
CTYP	Card type is not supported
WRIT	Error during writing
NOCRD	No card in slot
LOGG	Logging is possible
WRITP	Card is write-protected
CFULL	Card full

Messages possible	Description
RTIME	Remaining logging time in days
REMC	Safely remove card command
-REM	Card is being removed
FORM	Formatting SD card command
--FORM	Formatting in progress
LOGI	Logging interval in min
LLOG	Linear logging



Note:

Because of the increasing size of the data packets, the remaining logging time does not decrease linearly. The data packet size can increase, e. g. with the increasing operating hours value.

6.3 Overview of options and their parameters

In the following, the additional options and parameters are listed.

The options and parameters displayed depend on the system as well as on the options and functions which have

been selected. Some of the options and parameters will only be displayed, if they are available with the individual adjustments.

Channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
ARR					Arrangement	78
LLOGI >					Loading logic	83
	ODB >				Drainback option	83
		tDTO	60 s		Time period - switch-on condition	84
		tFLL	5 min		Filling time	84
		tSTB	2 min		Stabilisation	84
		OBST	OFF		Booster function	84
	OOVRU*		OFF		Overrun option	84
	DTOVR		5 K		Overrun	84
COOL >					Cooling functions	85
	OSYC**		OFF		System cooling	85
	DTCO		20 K		Switch-on difference system cooling	85
	DTCF		15 K		Switch-off difference system cooling	85
	OSTC		OFF		Store cooling	85
	OHDP**		OFF		Heat dump	85
	OTCL		110 °C		Overtemperature collector	85
	OTPUM		OFF		Pump or valve logic	85
PUMP >					Pump speed	79
	PUMP1		A		Speed variant pump 1	79
	n1LO		30 %		Minimum speed	79
	n1HI		100 %		Maximum speed	79
	PUMP2		A		Speed variant pump 2	79
	n2LO		30 %		Minimum speed	79
	n2HI		100		Maximum speed	79
	PUMP3		OnOF		Speed variant pump 3	79
	n3LO		30 %		Minimum speed	79
	n3HI		100%		Maximum speed	79
OTDIS >					Thermal disinfection option	89
	PDIS		01:00		Monitoring period (interval)	89
	DDIS		01:00		Heating period (duration of disinfection)	89
	TDIS		60 °C		Disinfection temperature	89
	SDIS		00:00		Starting time	90
	TSDIS		3		Temperature sensor for disinfection	90
	OTDIS		ON		Deactivation Thermal disinfection	90
OPARR >					Parallel relay option	90
	PARRE		2		Parallel relay	90
	INVER		OFF		Inversion	90
OHQM >					Heat quantity measurement option	90
	FTYPE		1		Flow rate detection type	90
	FMAX		6 l/min		Adjustable maximum flow rate	90
	FIMP		1 l/Imp		Pulse rate	91
	MEDT		1		Antifreeze type	90
	MED%		40		Antifreeze concentration	91
	SFHQM		1		Sensor flow HQM	91
	SRHQM		4		Sensor return HQM	91
GFDS >					Registration Grundfos sensors	91
	VFS		OFF		Range of flow rate sensor	91
	RPS		OFF		Range of pressure sensor	91
	OFLOW		OFF		Flow rate monitoring option	91

Channels						
Channel	Sub channel 1	Sub channel 2	Factory setting	Change to	Description	Page
PRS* >					Pressure monitoring option	92
	OOVPR		OFF		Overpressure	92
	OVPRO		5.5 bar		Overpressure - switch-on value	92
	OVPRF		5.0 bar		Overpressure - switch-off value	92
	OLEAK		OFF		Low pressure	92
	LEAKO		0.7 bar		Low pressure - switch-on value	92
	LEAKF		1.0 bar		Low pressure - switch-off value	92
DATE>					Enter date	92
	TIME		12:00		Time	92
	YYYY		2010		Year	92
	MM		03		Month	92
	DD		15		Day	92
LANG >			dE		Language	93
UNIT >			°C		Unit	92
OSDC >					SD card option	93
CODE			0000		User code	
RESET			OFF		Factory setting	

* This channel is only available if the Grundfos sensors have been registered in the **GFDS** channel.

** are blocked against each other

7 User code and short menu - Adjustment values

CODE

The access to some adjustment values can be restricted via a user code (customer). For safety reasons, the user code should generally be set to the customer code before the controller is handed to the customer!

1. Expert **0262** (Factory setting)

All menus and adjustment values are shown and all values can be altered.

2. Customer **0000**

The expert level is not shown, adjustment values can be changed partly (see below)

➔ In order to restrict the access, enter 0000 in the menu item **CODE**.

The display changes to the status level. If the adjustment channel is selected afterwards, the short menu shown below will be available. The short menu suits the selected system.

➔ In order to authorize the access, enter 0262 in the menu item **CODE**.

Channel	Factory setting	Adjustment range	Description
TIME	12:00	00:00 23:59	Time
DT O	6	1.0 ... 50.0	Switch-on temperature difference store
DT F	4	0.5 ... 49.5	Switch-off temperature difference store
DT S	10	1.0 ... 50.0	Set temperature difference store
S MAX	60	4 ... 95	Store maximum limitation
DT1O	6	1.0 ... 50.0	Switch-on temperature difference store 1
DT1F	4	0.5 ... 49.5	Switch-off temperature difference store 1
DT 1S	10	1.0 ... 50.0	Set temperature difference store 1
S1MAX	60	4 ... 95	Store maximum limitation store 1
DT2O	6	1.0 ... 50	Switch-on temperature difference store 2
DT2F	4	0.5 ... 49.5	Switch-off temperature difference store 2
DT 2S	10	1.5 ... 50.0	Set temperature difference store 2
S2MAX	60	4 ... 95	Store maximum limitation store 2
LST2	ON	ON / OFF	Loading store 2 on
MAN1	Auto	Auto / ON / OFF / n LO / n HI	Manual operation pump 1
MAN2	Auto	Auto / ON / OFF / n LO / n HI	Manual operation pump 2
MAN3	Auto	Auto / ON / OFF / n LO / n HI	Manual operation pump 3
MAN4	Auto	Auto / ON / OFF	Manual operation pump 4
CODE	0000	0000 / 0262	User code

8 Messages

In the case of an error, the directional pad flashes red and a message is indicated in the status display. A warning triangle is additionally indicated. If more than one error or fault condition has occurred, only the one with the highest priority will be displayed as a message in the status display.

In the case of a sensor error, the system is switched off, and a message appears on the display marked by an "E". Additionally, a corresponding value for the error type assumed is indicated.

After the error has been removed, the error message disappears.

Error message	Value	Description	Solution
FS1...7	-88.8	Short circuit at sensor 1...7	Check the cable
FS6, 8	888.8	Broken cable at sensor 6, 8	
EVFS	9999	Error at VFS sensor	Sensor fault. Check and, if necessary, correct the connection of the sensor plugs. If a sensor signal does not appear, the sensor has to be replaced
ERPS	9999	Error at RPS sensor	
ELEAK	Measured minimum pressure	Leakage error	Check the system for a leakage
EPRES	Measured maximum pressure	Error pressure	Check the functioning of the valves and pumps
EFLOW		Error flow rate Threshold values for VFS 1-10: 1,0-1,1 l/min Threshold values for VFS 2-40: 2,0-2,1 l/min	Check the pump Check whether a flow rate exists
PARAM		Remote parametrisation	Do not parametrise the controller via the push buttons during remote parametrisation

9 Troubleshooting

If a malfunction occurs, a message will appear on the display of the controller.



Directional pad flashes red. The symbol  indicates on the display and the symbol  flashes.

Sensor fault An error code instead of a temperature is shown on the sensor display channel.

888.8

- 88.8

Cable is broken.
Check the cable.

Short circuit.
Check the cable.

Disconnected PT1000 temperature sensors can be checked with an ohmmeter. Please check the resistance values correspond with the table.

°C	Ω	°C	Ω
-10	961	55	1213
-5	980	60	1232
0	1000	65	1252
5	1019	70	1271
10	1039	75	1290
15	1058	80	1309
20	1078	85	1328
25	1097	90	1347
30	1117	95	1366
35	1136	100	1385
40	1155	105	1404
45	1175	110	1423
50	1194	115	1442

resistance values of
PT1000-sensors

WARNING!



Electric shock!

Upon opening the housing, live parts are exposed.

→ **Always disconnect the controller from power supply before opening the housing!**

The controller is protected by a fuse. The fuse holder (which also holds the spare fuse) becomes accessible when the cover is removed. To replace the fuse, pull the fuse holder from the base.

The display is permanently off.

Press button (5). Display illuminated?

no

yes

Controller has been in standby, everything o.k.

Check the power supply of the controller. Is it disconnected?

no


yes

The fuse of the controller could be blown. The fuse holder (which holds the spare fuse) becomes accessible when the cover is removed. The fuse can then be replaced.


Check the supply line and reconnect it.

9.1 Miscellaneous


Pump is overheated, but no heat transfer from the collector to the store, flow and return have the same temperature; perhaps also bubble in the lines.

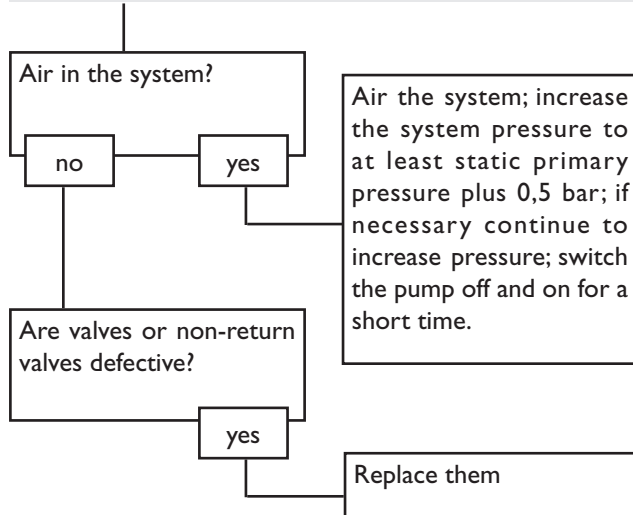


Pump starts for a short moment, switches off, switches on again, etc.

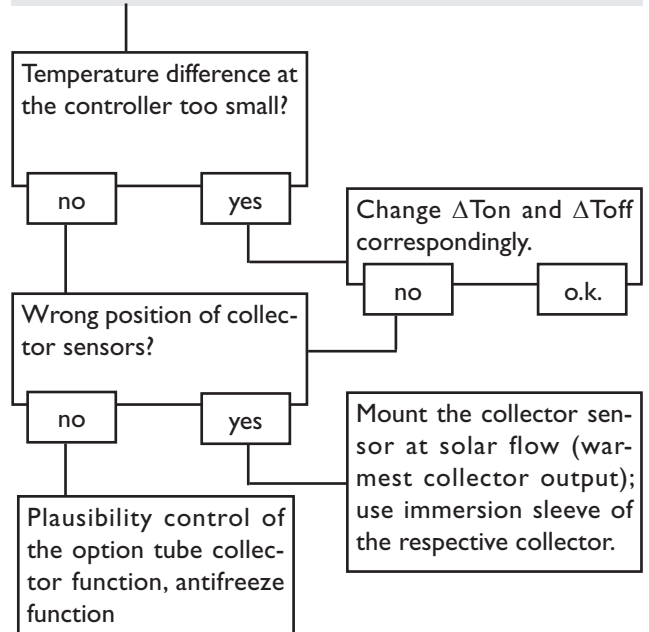

Pump starts up very late.

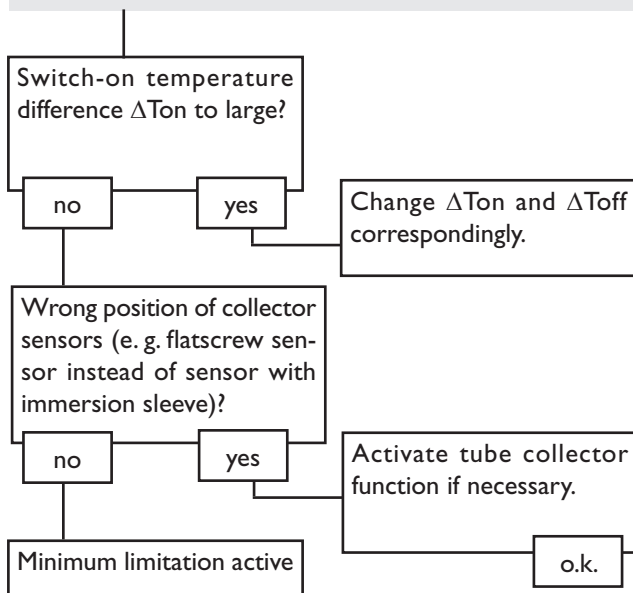

The temperature difference between store and collector increases enormously during operation; the collector circuit cannot dissipate the heat.

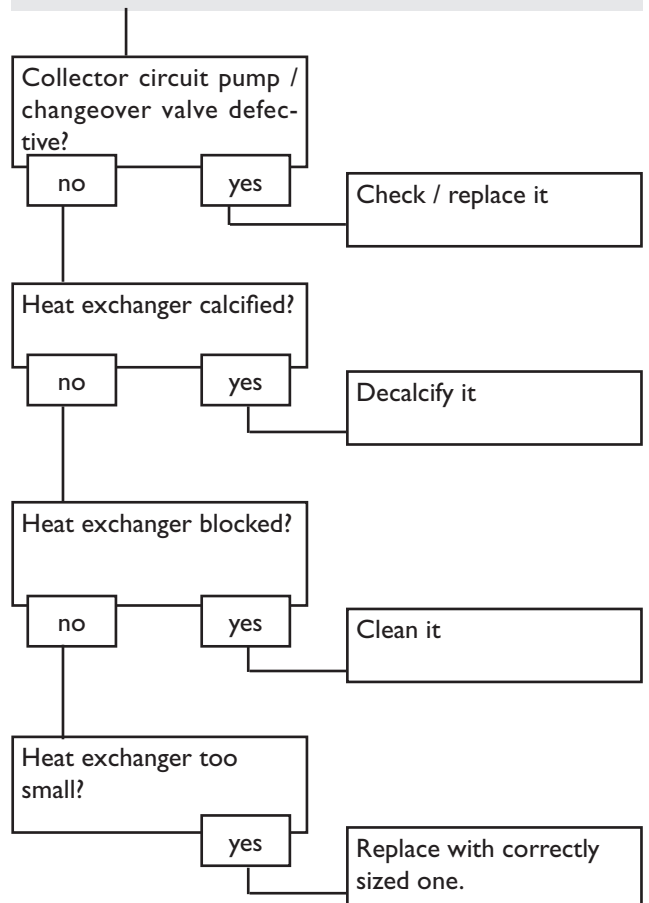

Stores cool down at night.

Collector circuit pump runs in the night ?

no

yes

Check controller

Collector temperature is at night higher than the outdoor temperature.

no

yes

Check the non-return valve in the flow and the return pipe with regard to the functional efficiency.

Sufficient store insulation?

yes

no

Increase insulation.

Insulation close enough to the store?

yes

no

Replace insulation or increase it.

Are the store connections insulated?

yes

no

Insulate the connections.

Warm water outflow upwards?

no

yes

Change connection and let the water flow sideways or through a siphon (downwards); less store losses now ?

no

yes

o.k.

Does the warm water circulation run for a very long time?

no

yes

Use the circulation pump with timer and switch-off thermostat (energy efficient circulation).

Circulation pump and blocking valve should be switched-off for 1 night; less store losses?

yes

no

Check whether the pumps of the afterheating circuit run at night; check whether the non-return valve is defective; problem solved ?

no

a

b

a

Control the non-return valve in warm water circulation - o.k.

yes

no

The gravitation circulation in the circulation line is too strong; insert a stronger valve in the non-return valve or an electrical 2-port valve behind the circulation pump; the 2-port valve is open when the pump is activated, otherwise it is

b

Further pumps which are connected to the solar store must also be checked.

Clean or replace it.

closed; connect pump and 2-port valve electrically in parallel; activate the circulation again. Speed control has to be deactivated.

The solar circuit pump does not work, although the collector is considerably warmer than the store.

Display illuminated? If not, press button (5). Display illuminated now?

yes

no

There is no current; check fuses / replace them and check power supply.

Does the pump start up in manual operation?

no

yes

The adjusted temperature difference for starting the pump is too high; choose a value which makes more sense.

Is the pump current enabled by the controller?

no

yes

Is the pump stuck?

yes

Turn the pump shaft using a screwdriver; now passable?

no

Pump is defective - replace it.

Controller might be defective - replace it.

10 Index

A

Antifreeze function 81

B

Blocking protection time, display channel 75

Booster function 84

C

Collector cooling 80

Collector emergency shutdown 80

Collector temperature, display channel 75

Cooling function 85

D

Drainback option 83

Drainback periods, display channel 75

ΔT -regulation 78

F

Filling time 84

Flow rate, display channel 76

G

Grundfos sensors and flow rate monitoring 91

H

Heat dump 85

Heat exchange function / solid fuel boiler / return preheating 86

Heating period, display channel 77

Heat quantity, display channel 77

Heat quantity measurement 90

HQM sensors 91

L

Language 93

Loading store 2 79

Low pressure 92

M

Manual mode 88

Maximum speed 79

Maximum store temperature 78

Maximum temperature limitation 86

Minimum collector limitation 80

Minimum speed 79

Minimum temperature limitation 86

Monitoring period, display channel 77

O

Operating hours counter 76

Other temperatures, display channel 76

Overpressure 92

Overrun 84

P

Parallel relay 90

Pause control 83

Pressure 76

Priority logic 82

Pump control 79

Pump speed 76

R

Return preheating 87

S

SD card 93

Selecting the system 78

Sensor maximum store temperature 79

Solid fuel boiler 86

Speed control 78

Spreaded loading option 83

Stabilisation 84

Starting time, display channel 77

Store cooling 85

Store set option 82

Store temperature, display channel 75

System cooling 85

T

Temperatures at S3, S4 and S5, display channel 75

Thermal disinfection (OTD) 89

Thermal disinfection with starting delay 89

Thermostat function 87

Time and date 92

Time, display channel 77

Time period - switch-on condition 84

Tube collector function 80

U

Unit 92

Subject to technical modification without notice.

136039282 05/2014

For an overview of our global
presence visit www.oventrop.com